

# Norma Star Point Adapter

FLUKE®

- max. 500 V Phase to Phase
- High frequency range 100 kHz
- Compensated phase angle
- Basic uncertainty  $\pm 0,2\%$
- Insulation 600V CAT III
- Safety input plugs
- Insulated safety output connectors

## Introduction

Norma Star Point Adapter generates a virtual star point in 3-phase delta systems without neutral for measuring purposes.

## Applied Standards and Regulations

Norma Star Point Adapter conforms to the European Low Voltage Directive 2006/95/EC.

Norma Star Point Adapter is designed in accordance with the harmonized standard IEC/EN 61010-1: 2001/ 2 edition:  
Safety of Measuring, Control and Laboratory Equipment Part 1: General Requirements  
Protection Class II according to IEC 61140  
Pollution degree 2

## Contacting Fluke

To contact Fluke, call one of the following telephone numbers:

USA: 1-888-44-FLUKE (1-888-443-5853)  
Canada: 1-800-36-FLUKE (1-800-363-5853)  
Europe: +31 402-675-200  
Japan: +81-3-3434-0181  
Singapore: +65-738-5655  
Anywhere in the world: +1-425-446-5500  
USA Service: 1-888-99-FLUKE (1-888-993-5853)

Or, visit Fluke's Web site at [www.fluke.com](http://www.fluke.com).  
To register your product, visit [register.fluke.com](http://register.fluke.com)



## Technical Data

Nominal Resistance between phases: 200k $\Omega$  // 260pF

Max. Voltage between phases: 500V

Basic Uncertainty:  $\pm 0,2\%$

Uncertainty at 100kHz:  $\pm 1\%$

Measurement Category: 600V CAT III / 300V CAT IV

Dimension: 195 x 125 x 57 mm

Weight: 445g

Protection: IP 40

Operating Temperature:  $-10$  to  $+40^{\circ}\text{C}$

Storage Temperature:  $-10^{\circ}\text{C}$  to  $+70^{\circ}\text{C}$

## Safety Information



Norma Star Point Adapter can only be operated by qualified and / or authorized personnel in accordance with the technical data given and the following safety instructions.

In addition, the national law and safety rules corresponding to the processed use of the device must be taken into consideration. This also applies to the use of accessories.

Certain parts of the device inside of the box are exposed to hazardous voltages during the use of the electric device. If you do not respect the safety instructions, serious injury or damage to equipment can occur.

If the Norma Star Point Adapter is connected to higher voltages against earth (max. 600V CATIII) the output connections "HI" carry these high voltages!

The specified measurement category of the input of measuring device has to correspond to the processed use.

Always connect the Star Point Adapter first to the measuring equipment before connecting to the distribution system!

## Symbols

	Important information – see manual
	Double insulation
	Earth ground
	Conforms to Directives of the European Union
	Canadian Standards Association is the certified body used for testing compliance to safety standards
	Conforms to relevant Australian Standards
	Do not dispose this product as unsorted municipal waste contact Fluke or qualified recycler for disposal

## Instructions for use

The user is responsible for safe operation of the measuring device and must therefore be suitably qualified and/or authorized.

Safe operation of the measuring device assumes the product has undergone:

- careful transportation
- professional storage and installation
- careful operation and maintenance

A device which is obviously or supposedly damaged or non-working shall not longer be used.

The device shall only be opened by qualified service personnel!

Safe operation of the device is not longer possible under the following conditions:

- appearance of visible damage
- storage for extended periods of time under climatic conditions beyond those specified by the manufacturer
- exposure to extreme mechanical strain

## Maintenance

To clean the synthetic housing, a damp cloth with detergent can be used.

Do not use abrasives or other solvents!  
No fluid should enter the device.

While the device is being cleaned, the star point adapter must be disconnected from the measuring circuit.

### LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for one year from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation P.O. Box 9090 Everett, WA 98206-9090 U.S.A.	Fluke Europe B.V. P.O. Box 1186 5602 BD Eindhoven The Netherlands
--	--

© 2007 Fluke Corporation. All rights reserved.  
All product names are trademarks of their respective companies.  
Printed in EU



CalPlus GmbH  
Zentrale Berlin  
Heerstraße 32 • 14052 Berlin  
Tel.: 030 214982-0 • Fax: 030 214982-50  
office@calplus.de • www.calplus.de

CalPlus GmbH  
Niederlassung ScopeShop  
Normannenweg 30 • 20537 Hamburg  
Tel.: 040 3039595-0 • Fax: 040 3039595-50  
scopeshop@calplus.de • www.calplus.de