Digital Storage Oscilloscope

GDS-2000E Series

PROGRAMMING MANUAL

GW INSTEK PART NO. Version 1.03

ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

December 2018

This manual contains proprietary information which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will Corporation.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the right to change specifications, equipment, and maintenance procedures at any time without notice.

Windows is a registered trademark of Microsoft Corporation in the United States and

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Search Commands 182
Label Commands 215
Segment Commands 221
DVM Commands 230
Go_NoGo Commands 232
Data Logging Commands 238
Remote Disk Commands 241

APPENDX 244
Error messages 244

INDEX 248

INTERFACE OVERVIEW

This manual describes how to use the GDS-2000E's remote command functionality and lists the command details. The Overview chapter describes how to configure the GDS-2000E USB and Ethernet remote control interface.

Interface Configuration

Configure USB Interface

USB Configuration	PC side connector	Type A, host
	GDS-2000E side connector	Type B, device
	Speed	1.1/2.0
	USB Class	CDC (communications device class)

Panel Operation

1. Press the Utility key.

2. Press *I/O* from the bottom menu.

3. Press *USB Device Port* from the side menu and select *Computer*.

4. Connect the USB cable to the rear panel device port.

5. When the PC asks for the USB driver, select the USB driver included on the accompanying User Manual CD or download the driver from the GW Instek website, www.gwinstek.com, in the GDS-2000E Download section. The driver automatically sets the GDS-2000E as a serial COM port (Shown as VPO in the PORTS node).

USB Functionality Check

Terminal Application

Invoke a terminal application such as RealTerm.

Set the COM port, baud rate, stop bit, data bit, and parity accordingly.

To check the COM port number and associated port settings, see the Device Manager in the PC. For Windows 7:
Control panel → Hardware and Sound→ Device Manager

Example: Configuring RealTerm:

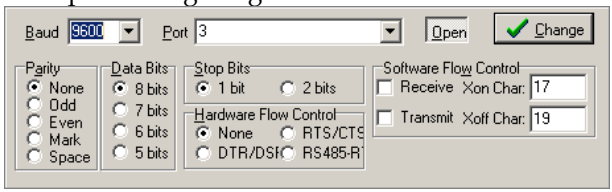

Functionality Check

Key in this query command via the terminal application.

*idn?

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.

GW,GDS-2202E,PXXXXXX,V1.00

Configure the Ethernet Interface

Ethernet Configuration	MAC Address	Domain Name
	Instrument Name	DNS IP Address
	User Password	Gateway IP Address
	Instrument IP Address	Subnet Mask
		HTTP Port 80 (fixed)

Background

The Ethernet interface is used for remote control using a socket server connection. For details, please see the Socket Server section on page 9.

Panel Operation

1. Connect the Ethernet cable to the LAN port on the rear panel.



2. Press the *Utility* key.

3. Press *I/O* from the bottom menu.

4. Press *Ethernet* from the side menu.

5. Set *DHCP/BOOTP* to *On* or *Off* from the side menu.



Note

IP addresses will automatically be assigned with DHCP/BOOTP set to on. For Static IP Addresses, DHCP/BOOTP should be set to off.

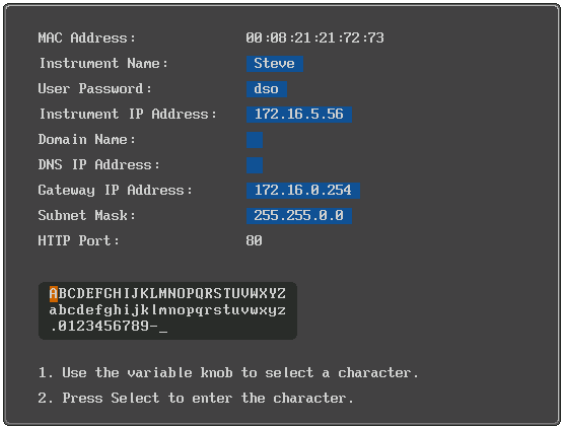

6. Use the *Up* and *Down* arrows on the side menu to navigate to each Ethernet configuration item.

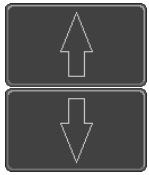

Items MAC Address, Instrument Name, User Password, Instrument IP Address, Domain Name, DNS IP Address, Gateway IP Address, Subnet Mask

Note: HTTP Port is fixed at 80.

7. Use the *Variable* knob to highlight a character and use the *Select* key to choose a character.

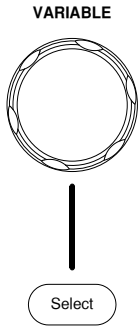

Press *Backspace* to delete a character.

Press *Save Now* to save the configuration. Complete will be displayed when successful.

Configure Socket Server

The GDS-2000E supports socket server functionality for direct two-way communication with a client PC or device over LAN. By default, the Socket Server is off.

Configure Socket Server

1. Configure the IP address for the GDS-2000E. Page 7
2. Press the *Utility* key.

3. Press *I/O* from the bottom menu.

4. Press *Socket Server* from the side menu.

5. Press *Select Port* and choose the port number with the Variable knob.



Range 1024~65535

6. Press *Set Port* to confirm the port number.

7. The Current Port icon will update to the new port number.

8. Press *Server* and turn the socket server On.



Socket Server Functionality Check

NI Measurement and Automation Explorer

To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com.

Operation

1. Configure the IP address for the GDS-2000E. Page 7

2. Configure the socket port. Page 9

3. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:

Start>All Programs>National Instruments>Measurement & Automation

4. From the Configuration panel access;

My System>Devices and Interfaces>Network Devices

5. Right click *Network Devices* and select *Create New Visa TCP/IP Resource…*

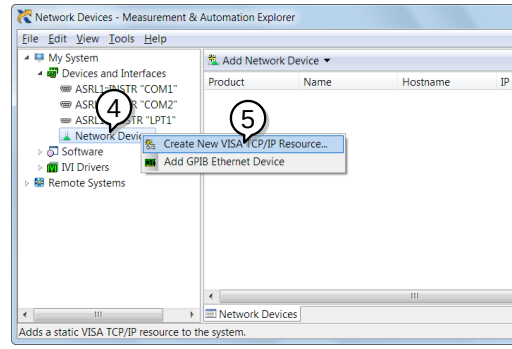

6. Select *Manual Entry of Raw Socket* from the popup window.

7. Click *Next*.

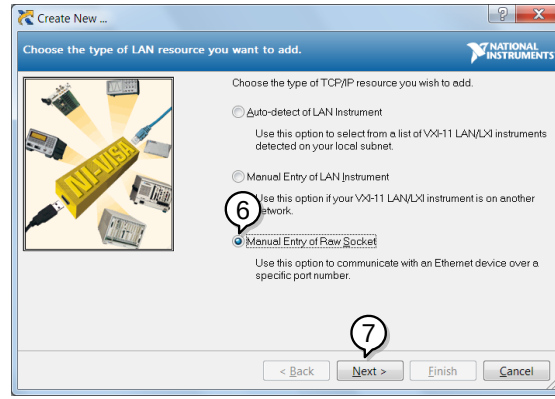

8. Enter the GDS-2000E's IP address and socket port number.

9. Click *Validate*.

10. A popup will appear to tell you if a VISA socket session was successfully created.

11. Click *Next*.

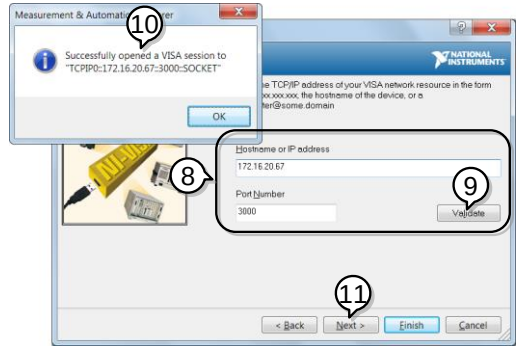

12. Choose an alias for the socket connection if you like.

13. Click *Finish* to finish the configuration.

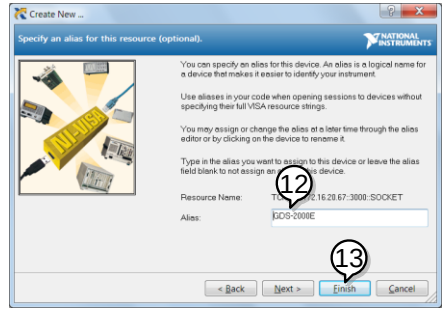

14. The GDS-2000E will now appear under Network Devices in the Configuration Panel.

Functionality Check

15. Click the *Open Visa Test Panel* to send a remote command to the GDS-2000E.

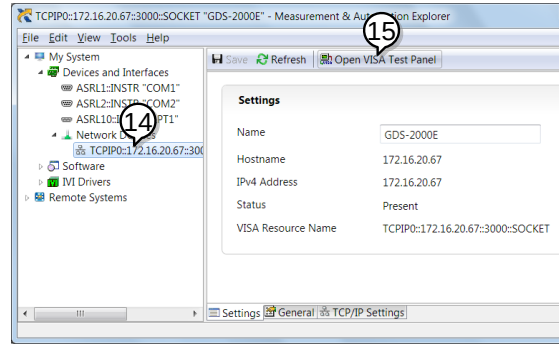

16. Click on the *Configuration* icon.

17. Select the *I/O Settings* tab.

18. Mark the *Enable Termination Character* checkbox. Make sure the termination character is a line feed (/n, value: xA).

19. Click *Apply Changes*.

20. Click the *Input/Output* icon.

21. Make sure *IDN? query is selected in the *Select or Enter Command* drop box.

22. Click on *Query*.

23. The manufacturer, model number, serial number and firmware version will be displayed in the buffer. For example:
GW,GDS-2202E,PXXXXXX,V1.00

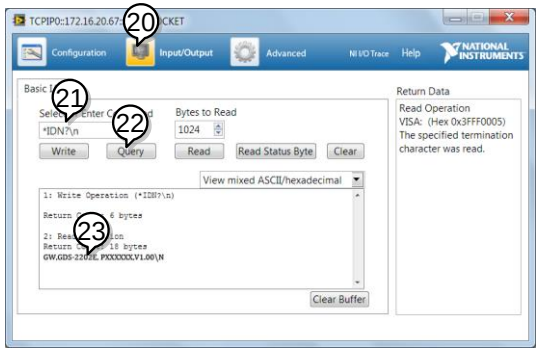

COMMAND OVERVIEW

The Command overview chapter lists all GDS-2000E commands in functional order as well as alphabetical order. The command syntax section shows you the basic syntax rules you have to apply when using commands.

Command Syntax

Compatible standard	• USB CDC_ACM compatible • SCPI, 1994 (partially compatible)
Command forms	Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.

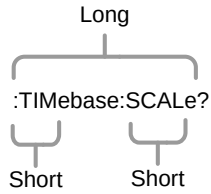

The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.

Below are examples of correctly written commands.

LONG	:TIMebase:SCALe?	:TIMEBASE:SCALE?
	:timebase:scale?	

	SHORT :TIM:SCAL?		:TIM:SCAL?
Command format	:TIMebase:SCALe <NR3>LF 		1: command header 2: single space 3: parameter 4: message terminator
Parameter	Type	Description	Example
	<Boolean>	boolean logic	0, 1
	<NR1>	Integers	0, 1, 2, 3
	<NR2>	floating point	0.1, 3.14, 8.5
	<NR3>	floating point with an exponent	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
Message terminator	LF	line feed code	
Note	Commands are non-case sensitive.		

List of Commands in Functional Order

Common	*IDN? 32
	*LRN? 32
	*SAV 33
	*RCL 33
	*RST 34
	*CLS 34
	*ESE 34
	*ESR 35
	*OPC 35
	*SRE 36
	*STB 36
Acquisition	:ACQuire:AVERage 38
	:ACQuire:MODe 39
	:ACQuire<X>:MEMory? 39
	:ACQuire:FILTer:SOURce 41
	:ACQuire:FILTer 42
	:ACQuire:FILTer:FREQuency 42
	:ACQuire:FILTer:FREQuency:UPPER 42
	:ACQuire:FILTer:FREQuency:LOWER 43
	:ACQuire:FILTer:TYPe 43
	:ACQuire:FILTer:TRACking 44
	:ACQuire<X>:STATe? 44
	:ACQuire:INTERpolation 44
	:ACQuire:RECOrdlength 45
	:HEADer 45
Autoscale	:AUTOSet 46
	:AUTORSET:MODe 46

Vertical Scale	:CHANnel<X>:BWLimit 47
	:CHANnel<X>:COUPling 48
	:CHANnel<X>:DESKew 48
	:CHANnel<X>:DISPlay 48
	:CHANnel<X>:EXPand 49
	:CHANnel<X>:IMPedance? 49
	:CHANnel<X>:INVert 50
	:CHANnel<X>:POSition 50
	:CHANnel<X>:PROBe:RATio 51
	:CHANnel<X>:PROBe:TYPe 51
	:CHANnel<X>:SCALe 51
Math	:MATH:DISP 53
	:MATH:TYPe 54
	:MATH:DUAL:SOURce<X> 54
	:MATH:DUAL:OPERator 54
	:MATH:DUAL:POSition 55
	:MATH:DUAL:SCALe 55
	:MATH:FFT:SOURce 56
	:MATH:FFT:MAG 56
	:MATH:FFT:WINDow 56
	:MATH:FFT:POSition 57
	:MATH:FFT:SCALe 57
	:MATH:FFT:HORizontal:SCALe 58
	:MATH:FFT:HORizontal:POSition 58
	:MATH:DEFine 58
	:MATHVAR? 59
	:MATHVAR:VAR<X> 60
	:MATH:ADVanced:POSition 60
	:MATH:ADVanced:SCALe 60
Cursor	:CURSor:MODe 63
	:CURSor:SOURce 63
	:CURSor:HUNI 64
	:CURSor:HUSE 64
	:CURSor:VUNI 65

	:CURSor:VUSE 65
	:CURSor:DDT 65
	:CURSor:H1Position 66
	:CURSor:H2Position 66
	:CURSor:HDELta 67
	:CURSor:V1Position 67
	:CURSor:V2Position 67
	:CURSor:VDELta 68
	:CURSor:XY:RECTangular:X:POSition<X> 68
	:CURSor:XY:RECTangular:X:DELta 68
	:CURSor:XY:RECTangular:Y:POSition<X> 69
	:CURSor:XY:RECTangular:Y:DELta 69
	:CURSor:XY:POLar:RADIUS:POSition<X> 69
	:CURSor:XY:POLar:RADIUS:DELta 70
	:CURSor:XY:POLar:THETA:POSition<X> 70
	:CURSor:XY:POLar:THETA:DELta 70
	:CURSor:XY:PRODuct:POSition<X> 71
	:CURSor:XY:PRODuct:DELta 71
	:CURSor:XY:RATio:POSition<X> 71
	:CURSor:XY:RATio:DELta 72
Display	:DISPlay:INTensity:WAVEform 73
	:DISPlay:INTensity:GRATicule 73
	:DISPlay:INTensity:BACKLight 74
	:DISPlay:INTensity:BACKLight:AUTODim:ENAble 74
	:DISPlay:INTENSITy:BACKLight:AUTODim:TIMe 74
	:DISPlay:PERSistence 75
	:DISPlay:GRATicule 75
	:DISPlay:WAVEform 76
	:DISPlay:OUTPut 76

Hardcopy	:HARDcopy:START 77
	:HARDcopy:MODe 77
	:HARDcopy:PRINTINKSaver 78
	:HARDcopy:SAVEINKSaver 78
	:HARDcopy:SAVEFORMat 78
	:HARDcopy:ASSIGN 79
Measure	:MEASure:GATing 81
	:MEASure:SOURce 81
	:MEASure:METHod 82
	:MEASUrement:REFLevel:PERCent:HIGH 82
	:MEASUrement:REFLevel:PERCent:LOW 83
	:MEASUrement:REFLevel:PERCent:MID 83
	:MEASUrement:REFLevel:PERCent:MID2 83
	:MEASure:FALL 84
	:MEASure:FOVShoot 84
	:MEASure:FPReshoot 85
	:MEASure:FREQuency 85
	:MEASure:NWIDth 86
	:MEASure:PDUTy 86
	:MEASure:PERiod 87
	:MEASure:PWIDth 87
	:MEASure:RISe 88
	:MEASure:ROVShoot 88
	:MEASure:RPReshoot 89
	:MEASure:PPULSE 90
	:MEASure:NPULSE 90
	:MEASure:PEDGE 91
	:MEASure:NEDGE 91
	:MEASure:AMPlitude 92
	:MEASure:MEAN 92
	:MEASure:CMEan 93
	:MEASure:HIGH 93
	:MEASure:LOW 94
	:MEASure:MAX 95

	:MEASure:MIN 95
	:MEASure:PK2PK 96
	:MEASure:RMS 96
	:MEASure:CRMS 97
	:MEASure:AREa 97
	:MEASure:CAREa 98
	:MEASure:FRRDelay 99
	:MEASure:FRFDelay 99
	:MEASure:FFRDelay 100
	:MEASure:FFFDelay 100
	:MEASure:LRRDelay 101
	:MEASure:LRFDelay 102
	:MEASure:LFRDelay 102
	:MEASure:LFFDelay 103
	:MEASure:PHAse 103
Measurement	:MEASUrement:MEAS<X>:SOURCE<X> 105
	:MEASUrement:MEAS<X>:TYPe 106
	:MEASUrement:MEAS<X>:STATE 106
	:MEASUrement:MEAS<X>:VALue 107
	:MEASUrement:MEAS<X>:MAXimum 108
	:MEASUrement:MEAS<X>:MEAN 109
	:MEASUrement:MEAS<X>:MINImum 109
	:MEASUrement:MEAS<X>:STDdev 110
	:MEASUrement:STATIstics:MODe 111
	:MEASUrement:STATIstics:WEIghting 111
	:MEASUrement:STATIstics 111
Reference	:REF<X>:DISPlay 112
	:REF<X>:TIMebase:POSition 112
	:REF<X>:TIMebase:SCALe 113
	:REF<X>:OFFSet 113
	:REF<x>:SCALe 114
Run	:RUN 115

Stop	:STOP	115
Single	:SINGle	115
Force	:FORCe	116
Timebase	:TIMebase:EXPand	117
	:TIMebase:POSition	117
	:TIMebase:SCALe	117
	:TIMebase:MODe	118
	:TIMebase:WINDow:POSition	118
	:TIMebase:WINDow:SCALe	119
Trigger	:TRIGger:FREQuency	122
	:TRIGger:TYPe	122
	:TRIGger:SOURce	122
	:TRIGger:COUPle	123
	:TRIGger:NREJ	123
	:TRIGger:MODe	124
	:TRIGger:HOLDoff	124
	:TRIGger:LEVel	124
	:TRIGger:HLEVel	125
	:TRIGger:LLEVel	125
	:TRIGger:EDGe:SLOP	126
	:TRIGger:DELay:SLOP	126
	:TRIGger:DELay:TYPe	127
	:TRIGger:DELay:TIMe	127
	:TRIGger:DELay:EVENt	127
	:TRIGger:DELay:LEVel	128
	:TRIGger:PULSEWidth:POLarity	128
	:TRIGger:RUNT:POLarity	128
	:TRIGger:RUNT:WHEn	129
	:TRIGger:RUNT:TIMe	129
	:TRIGger:RISEFall:SLOP	130
	:TRIGger:RISEFall:WHEn	130

:TRIGger:RISEFall:TIMe.....131
:TRIGger:VIDeo:TYPe 131
:TRIGger:VIDeo:FIELd 132
:TRIGger:VIDeo:LINe.....132
:TRIGger:VIDeo:POLarity 133
:TRIGger:PULSe:WHEn 133
:TRIGger:PULSe:TIMe 134
:TRIGger:TIMEOut:WHEn.....134
:TRIGger:TIMEOut:TIMER 134
:TRIGger:ALTernate 135
:TRIGger:STATe 135
:TRIGger:EXTERnal:PROBe:TYPe.....136
:TRIGger:EXTERnal:PROBe:RATio 136
:TRIGger:BUS:TYPe 137
:TRIGger:BUS:THReshold:CH<x>.....137
:TRIGger:BUS:B1:I2C:CONDition 137
:TRIGger:BUS:B1:I2C:ADDRess:MODe.....138
:TRIGger:BUS:B1:I2C:ADDRess:TYPe.....139
:TRIGger:BUS:B1:I2C:ADDRess:VALue 139
:TRIGger:BUS:B1:I2C:ADDRess:DIRection.....140
:TRIGger:BUS:B1:I2C:DATa:SIZe 140
:TRIGger:BUS:B1:I2C:DATa:VALue.....141
:TRIGger:BUS:B1:UART:CONDition 142
:TRIGger:BUS:B1:UART:RX:DATa:SIZe 142
:TRIGger:BUS:B1:UART:RX:DATa:VALue 143
:TRIGger:BUS:B1:UART:TX:DATa:SIZe.....143
:TRIGger:BUS:B1:UART:TX:DATa:VALue 144
:TRIGger:BUS:B1:SPI:CONDition 145
:TRIGger:BUS:B1:SPI:DATa:SIZe 145
:TRIGger:BUS:B1:SPI:DATa:MISO:VALue 146
:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue 147
:TRIGger:BUS:B1:CAN:CONDition.....147
:TRIGger:BUS:B1:CAN:FRAMEtype 148
:TRIGger:BUS:B1:CAN:IDentifier:MODe.....148
:TRIGger:BUS:B1:CAN:IDentifier:VALue 149

	:TRIGger:BUS:B1:CAN:IDentifier:DIRection 150
	:TRIGger:BUS:B1:CAN:DATa:QUALifier.....150
	:TRIGger:BUS:B1:CAN:DATa:SIZe.....151
	:TRIGger:BUS:B1:CAN:DATa:VALue.....151
	:TRIGger:BUS:B1:LIN:CONDition 152
	:TRIGger:BUS:B1:LIN:DATa:QUALifier 154
	:TRIGger:BUS:B1:LIN:DATa:SIZe 154
	:TRIGger:BUS:B1:LIN:DATa:VALue 155
	:TRIGger:BUS:B1:LIN:ERRTYPE.....155
	:TRIGger:BUS:B1:LIN:IDentifier:VALue.....156
System commands	:SYSTem:LOCK 157
	:SYSTem:ERRor 157
Save/Recall	:RECAll:SETUp 158
	:RECAll:WAVEform 158
	:SAVe:IMAGe 159
	:SAVe:IMAGe:FILEFormat.....159
	:SAVe:IMAGe:INKSaver.....160
	:SAVe:SETUp 160
	:SAVe:WAVEform.....161
	:SAVe:WAVEform:FILEFormat 162
Ethernet Commands	:ETHERnet:DHCP.....163
Time Commands	:DATe 164
Bus Decode Commands	:BUS1 166
	:BUS1:STATE 166
	:BUS1:TYPe.....166
	:BUS1:INPut 167
	:BUS1:I2C:ADDRess:RWINClude 167
	:BUS1:I2C:SCLK:SOURce 168
	:BUS1:I2C:SDA:SOURce 168
	:BUS1:UART:BITRate.....168
	:BUS1:UART:DATABits.....169

	:BUS1:UART:PARIty 169
	:BUS1:UART:PACKEt 170
	:BUS1:UART:POLARity 170
	:BUS1:UART:EOFPAcket 170
	:BUS1:UART:TX:SOURce 171
	:BUS1:UART:RX:SOURce 171
	:BUS1:SPI:SCLK:POLARity 172
	:BUS1:SPI:SS:POLARity 172
	:BUS1:SPI:WORDSize 172
	:BUS1:SPI:BITORder 173
	:BUS1:SPI:SCLK:SOURce 173
	:BUS1:SPI:SS:SOURce 173
	:BUS1:SPI:MOSI:SOURce 174
	:BUS1:SPI:MISO:SOURce 174
	:BUS1:DISPlay:FORMAt 174
	:LISTer:DATA 175
	:BUS1:CAN:SOURce 175
	:BUS1:CAN:PROBe 175
	:BUS1:CAN:SAMPLEpoint 176
	:BUS1:CAN:BITRate 176
	:BUS1:LIN:BITRate 177
	:BUS1:LIN:IDFORmat 177
	:BUS1:LIN:POLARity 177
	:BUS1:LIN:SAMPLEpoint 178
	:BUS1:LIN:SOURce 178
	:BUS1:LIN:STANDard 178
Mark Commands	:MARK 180
	:MARK:CREATE 180
	:MARK:DELEte 181
Search Commands	:SEARCH:COPY 183
	:SEARCH:STATE 184
	:SEARCH:TOTAL 184
	:SEARCH:TRIGger:TYPe 184

:SEARCH:TRIGger:SOURce....185
:SEARCH:TRIGger:EDGE:SLOP....185
:SEARCH:TRIGger:LEVel....186
:SEARCH:TRIGger:HLEVel....186
:SEARCH:TRIGger:LLEVel....187
:SEARCH:TRIGger:PULSEWidth:POLarity....187
:SEARCH:TRIGger:RUNT:POLarity....188
:SEARCH:TRIGger:RISEFall:SLOP....188
:SEARCH:TRIGger:PULSe:WHEn....189
:SEARCH:TRIGger:PULSe:TIMe....189
:SEARCH:TRIGger:RUNT:WHEn....190
:SEARCH:TRIGger:RUNT:TIMe....190
:SEARCH:TRIGger:RISEFall:WHEn....191
:SEARCH:TRIGger:RISEFall:TIMe....191
:SEARCH:TRIGger:BUS:TYPe....192
:SEARCH:TRIGger:BUS:B1:I2C:CONDition....192
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODe....193
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:TYPe....193
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue....194
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess
:DIRection....195
:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIZe....195
:SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue....196
:SEARCH:TRIGger:BUS:B1:UART:CONDition....196
:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZe....197
:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue..198
:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZe....199
:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue..199
:SEARCH:TRIGger:BUS:B1:SPI:CONDition....200
:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe....200
:SEARCH:TRIGger:BUS:B1:SPI:DATa:MISO
:VALue....201
:SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI
:VALue....202
:SEARCH:TRIGger:BUS:B1:CAN:CONDition....203

	:SEARCH:TRIGger:BUS:B1:CAN:FRAMEtype 204
	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe ..204
	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue ...205
	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier :DIRection 205
	:SEARCH:TRIGger:BUS:B1:CAN:DATa:QUALifier....206
	:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe 207
	:SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue 207
	:SEARCH:TRIGger:BUS:B1:LIN:CONDition 208
	:SEARCH:TRIGger:BUS:B1:LIN:DATa:QUALifier 209
	:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe 210
	:SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue 210
	:SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE 211
	:SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue.....212
	:SEARCH:FFTPeak:METHod 212
	:SEARCH:FFTPeak:METHod:MPEak.....213
	:SEARCH:FFTPeak:SINFo.....214
Label Commands	:CHANnel<X>:LABel.....215
	:CHANnel<X>:LABel:DISPlay 216
	:REF<X>:LABel 216
	:REF<X>:LABel:DISPlay 217
	:BUS1:LABel 218
	:BUS1:LABel:DISPlay 218
	:SET<X>:LABel 219
Segment Commands	:SEGMents:STATE 221
	:SEGMents:CURRent 222
	:SEGMents:TOTalnum 222
	:SEGMents:TIMe 223
	:SEGMents:DISPALL 223
	:SEGMents:MEASure:MODe 223
	:SEGMents:MEASure:PLOT:SOURce 224
	:SEGMents:MEASure:PLOT:DIVide 224
	:SEGMents:MEASure:PLOT:SELect 225

	:SEGMents:MEASure:PLOT:RESults 225
	:SEGMents:MEASure:TABle:SOURce 226
	:SEGMents:MEASure:TABle:SELect.....226
	:SEGMents:MEASure:TABle:LIST 227
	:SEGMents:MEASure:TABle:SAVe 227
	:SEGMents:SAVe 228
	:SEGMents:SAVe:SOURce 228
	:SEGMents:SAVe:SELect:STARt 228
	:SEGMents:SAVe:SELect:END 229
DVM Commands	:DVM:STATE 230
	:DVM:SOURce 230
	:DVM:MODe.....231
	:DVM:VALue 231
Go-NoGo Commands	:GONogo:CLEar.....232
	:GONogo:EXECute 232
	:GONogo:FUNCtion.....233
	:GONogo:NGCount 233
	:GONogo:NGDefine.....233
	:GONogo:SOURce 234
	:GONogo:VIOLation 234
	:GONogo:SCRipt 234
	:TEMPlate:MODe 235
	:TEMPlate:MAXimum.....235
	:TEMPlate:MINimum 235
	:TEMPlate:POSition:MAXimum.....236
	:TEMPlate:POSition:MINimum 236
	:TEMPlate:SAVe:MAXimum 236
	:TEMPlate:SAVe:MINimum 237
	:TEMPlate:TOLerance.....237
	:TEMPlate:SAVe:AUTo 237
Data Logging Commands	:DATALOG:STATE 238
	:DATALOG:SOURce 238

:DATALOG:SAVe 239
:DATALOG:INTerval 239
:DATALOG:DURation 240

Remote Disk Commands
:REMOTEDisk:IPADDress 241
:REMOTEDisk:PATHName 241
:REMOTEDisk:USERName 241
:REMOTEDisk:PASSWord 242
:REMOTEDisk:MOUNT 242
:REMOTEDisk:AUTOMount 243

COMMAND DETAILS

The Command details chapter shows the detailed syntax, equivalent panel operation, and example for each command. For the list of all commands, see page17.

Common Commands 32
Acquisition Commands 38
Autoscale Commands 46
Vertical Commands 47
Math Commands 53
Cursor Commands 62
Display Commands 73
Hardcopy Commands..... 77
Measure Commands 80
Measurement Commands 105
Reference Commands 112
Run Command 115
Stop Command 115
Single Command..... 115
Force Command..... 116
Timebase Commands..... 117
Trigger Commands..... 120
System Commands 157
Save/Recall Commands..... 158
Ethernet Commands 163
Time Commands..... 164
Bus Decode Commands 165
Mark Commands..... 180
Search Commands 182

Label Commands 215
Segment Commands 221
DVM Commands.....230
Go_NoGo Commands.....232
Data Logging Commands.....238
Remote Disk Commands.....241

Common Commands

*IDN? 32
*LRN? 32
*SAV 33
*RCL 33
*RST 34
*CLS 34
*ESE 34
*ESR 35
*OPC 35
*SRE 36
*STB 36

*IDN? → Query

Description	Returns the manufacturer, model, serial number and version number of the unit.
Syntax	*IDN?
Example	*IDN? GW,GDS-2074E,PXXXXXX,V1.XX

*LRN? → Query

Description	Returns the oscilloscope settings as a data string.
Syntax	*LRN?
Example	*LRN? :DISPlay:WAVEform VECTOR;PERSistence 2.400E-01;INTensity:WAVEform 50;INTensity:GRATicule 50;GRATicule FULL;:CHANnel CH1:DISPlay ON;BWLimit FULL;COUPling DC;INVert OFF;POSition -1.600E+00;PROBe:RATio

1.000e+01;PROBe:TYPe VOLTAGE;SCALe 2.000E+01;IMPedance 1E+6;EXPand GROUND;:CHANnel CH2:DISPlay ON;BWLimit FULL;COUPling DC;INVert OFF;POSition 0.000E+00;PROBe:RATio 1.000e+01;PROBe:TYPe VOLTAGE;SCALe 2.000E+00;IMPedance 1E+6;EXPand GROUND;:CHANnel CH3:DISPlay OFF;BWLimit FULL;COUPling DC;INVert OFF;POSition 0.000E+00;PROBe:RATio 1.000e+01;PROBe:TYPe VOLTAGE;SCALe 1.000E+00;IMPedance 1E+6;EXPand GROUND;:CHANnel CH4:DISPlay OFF;BWLimit FULL;COUPling DC;INVert OFF;POSition 0.000E+00;PROBe:RATio 1.000e+01;PROBe:TYPe VOLTAGE;SCALe 1.000E+00;IMPedance 1E+6;EXPand GROUND;:MATH:TYPe FFT;DISP OFF;DUAL:SOURce1 CH1;SOURce2 CH2;OPERator MUL;POSition 0.000E+00;SCALe ?;FFT:SOURce CH1;MAG DB;WINDow HANNING;POSition 2.800E-01;SCALe 2.000E+01;MATH:ADVanced:OPERator DIFF;ADVanced:SOURce CH1;ADVanced:EDIT:SOURce1 CH1;ADVanced:EDIT:S

*SAV

Set →

Description	Saves the current panel settings to the selected memory number(setup 1 ~ 20).
Syntax	*SAV {1 | 2 | 3 |.... | 20}
Example	*SAV 1 Saves the current panel settings to Set 1.

*RCL

Set →

Description	Recalls a set of panel settings.
Syntax	*RCL {1 | 2 | 3 |.... | 20}
Example	*RCL 1 Recalls the selected setup from Set 1.

*RST

Set →

Description	Resets the GDS-2000E (recalls the default panel settings).
Syntax	*RST

*CLS

Set →

Description	Clears the error queue.
Syntax	*CLS

*ESE

Set →
→ Query

Description	Sets or queries the Standard Event Status Enable register.
Syntax	*ESE <NR1>
Query Syntax	*ESE?
Return parameter	<NR1> 0~255

Bit Weight

Bit#	Weight	Event	Description
0	1	OPC	Operation Complete Bit
1	2	RQC	Not used
2	4	QYE	Query Error
3	8	DDE	Device Error
4	16	EXE	Execution Error
5	32	CME	Command Error
6	64	URQ	User Request
7	128	PON	Power On

Example

*ESE?

>4

Indicates that there is a query error.

*ESR

→ Query

Description	Queries the Standard Event Status (Event) register. The Event Status register is cleared after it is read.
Query Syntax	*ESR?
Return parameter	<NR1> 0~255

Bit Weight

Bit#	Weight	Event	Description
0	1	OPC	Operation Complete Bit
1	2	RQC	Not used
2	4	QYE	Query Error
3	8	DDE	Device Error
4	16	EXE	Execution Error
5	32	CME	Command Error
6	64	URQ	User Request
7	128	PON	Power On

Example

*ESR?

>4

Indicates that there is a query error.

*OPC

Set →

→ Query

Description	The *OPC command sets the OPC bit (bit0) of the Standard Event Status Register when all current commands have been processed. The *OPC? Query returns 1 when all the outstanding commands have completed.
Syntax	*OPC
Query Syntax	*OPC?
Return parameter	1 Returns 1 when all the outstanding commands have completed.

*SRE

Set → / → Query

Description	Sets or queries the Service Request Enable register. The Service Request Enable register determines which registers of the Status Byte register are able to generate service requests.
Syntax	*SRE <NR1>
Query Syntax	*SRE?
Parameter/ Return parameter	<NR1> 0~255

Bit Weight

Bit#	Weight	Event	Description
0	1		Not used
1	2		Not used
2	4		Not used
3	8		Not used
4	16	MAV	Message Available Bit
5	32	ESB	Event Status Bit
6	64	MSS	Master Summary Bit
6	64	RQS	Request Service Bit
7	128		Not used

Example

*SRE?

>48

Indicates that the MAVB and ESB bit are both set.

*STB

→ Query

Description	Queries the bit sum of the Status Byte register with MSS (Master summary Status) replacing the RQS bit (bit 6).
Query Syntax	*STB?
Return parameter	<NR1> 0 ~ 255

Bit Weight	Bit#	Weight	Event	Description
	0	1		Not used
	1	2		Not used
	2	4		Not used
	3	8		Not used
	4	16	MAV	Message Available Bit
	5	32	ESB	Event Status Bit
	6	64	MSS	Master Summary Bit
	6	64	RQS	Request Service Bit
	7	128		Not used

Example *STB?

>16

Indicates that the MAV bit is set.

Acquisition Commands

:ACQuire:AVERage 38
:ACQuire:MODe 39
:ACQuire<X>:MEMory? 39
:ACQuire:FILTer:SOURce 41
:ACQuire:FILTer 42
:ACQuire:FILTer:FREQuency 42
:ACQuire:FILTer:FREQuency:UPPER 42
:ACQuire:FILTer:FREQuency:LOWER 43
:ACQuire:FILTer:TYPe 43
:ACQuire:FILTer:TRACking 44
:ACQuire<X>:STATe? 44
:ACQuire:INTERpolation 44
:ACQuire:RECOrdlength 45
:HEADer 45

:ACQuire:AVERage

Set → / → Query

Description	Selects or returns the number of waveform acquisitions that are averaged in the average acquisition mode.
Syntax	:ACQuire:AVERage {<NR1>| ?}
Related Commands	:ACQuire:MODe
Parameter	<NR1> 2, 4, 8 ,16, 32, 64, 128, 256
Note	Before using this command, select the average acquisition mode. See the example below.
Example	:ACQuire:MODe AVERage :ACQuire:AVERage 2 Selects the average acquisition mode, and sets the average number to 2.

:ACQuire:MODe

Set / Query

Description	Selects or returns the acquisition mode.	
Syntax	:ACQuire:MODe {SAMPle | PDETect | AVERage | ?}	
Related Commands	:ACQuire:AVERage	
Parameter	SAMPle	Sample mode sampling
	PDETect	Peak detect sampling
	AVERage	Average sampling mode
Example	:ACQuire:MODe PDETect Sets the sampling mode to peak detection.	

:ACQuire<X>:MEMory?

Query

Description	Returns the data in acquisition memory for the selected channel as a header + raw data.	
Syntax	:ACQuire<X>:MEMory?	
Related Commands	:ACQuire:RECOrdlength :HEADer	
Parameter	<X>	Channel number (1 to 4)
Return parameter	<string> <waveform block data>	Returns acquisition settings followed by raw waveform block data. <string> Returns the acquisition settings for the selected channel. Format: parameter(1),setting(1);parameter(2),setting(2)…parameter(n),setting(n);Waveform Data; <waveform block data> Header followed by the raw waveform data.

Format:
Header: The header (in ASCII) encodes the number of bytes for the header followed by the number of data points in bytes for the raw data.

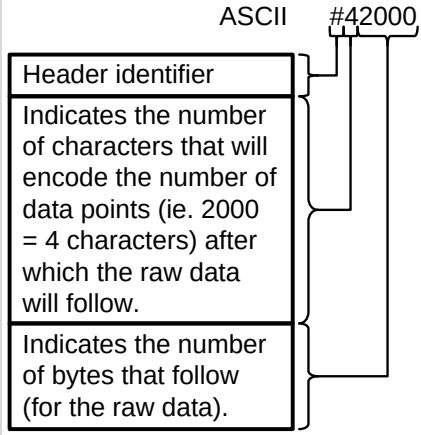

Raw Data:
Each two bytes (in hex) encodes the vertical data of a data point. The data is signed hex data (2's complement, -32768 ~ 32767).

Waveform Raw Data Example:
Header raw data…….

Hex:

23 34 32 30 30 30 00 1C 00 1B 00 1A 00 1A 00 1B ……..

ASCII/Decimal:

#42000 28 27 26 26 27…….

The actual value of a data point can be calculated with the following formula: (Decimal value of hex data/AD Factor) * vertical scale.

Note: AD Factor is fixed as 25. The vertical scale is returned with the

		acquisition settings that precede the raw data. For example if the raw data for a point is 001C (=28 decimal) then, (28/25) x 0.5 = 0.56V

Example :ACQuire1:MEMory?

Format,2.0E;Memory Length,10000;IntpDistance,0;
Trigger Address,4999;Trigger Level,1.160E+01;
Source,CH1;Vertical Units,V;Vertical Units
Div,0;Vertical Units Extend
Div,15;Label,ACK ;Probe Type,0;Probe
Ratio,1.000e+01;Vertical Scale,5.000e+00;Vertical
Position,-1.100e+01;Horizontal Units,S;Horizontal
Scale,5.000E-04;Horizontal Position,0.000E+00;
Horizontal Mode,Main;SincET Mode,Real
Time;Sampling Period,5.000e-07;Horizontal Old
Scale,5.000E-04;Horizontal Old Position,0.000E+00;
Firmware,V0.99b8;Time,02-Oct-14 17:00:43;
Waveform Data;
#520000……..follows waveform block
data in hex……..

:ACQuire:FILTer:SOURce

Set → / → Query

Description	Returns the source of the filter.	
Syntax	:ACQuire:FILTer:SOURce {CH1|CH2|CH3|CH4|?}	
Parameter/ Return parameter	CH1 ~ CH4	Source channel

Example :ACQuire:FILTer:SOURce?

CH1

Sets the filter source to CH1.

:ACQuire:FILTer

Set → / → Query

Description	Turns the filter on/off or queries its status.	
Syntax	:ACQuire:FILTer {ON|OFF|?}	
Parameter/ Return parameter	ON	Filter on.
	OFF	Filter off.
Example	:ACQuire:FILTer? OFF Indicates that the filter is turned off.	

:ACQuire:FILTer:FREQuency

Set → / → Query

Description	Sets or queries the filter frequency.	
Syntax	:ACQuire:FILTer:FREQuency {DEFault|<NRf>|?}	
Parameter/ Return parameter	DEFault	Sets the filter frequency to the default.
	<NRf>	Manually sets the filter frequency. (1Hz ~ 500MHz)
Example	:ACQuire:FILTer:FREQuency 1 Sets the filter frequency to 1Hz.	

:ACQuire:FILTer:FREQuency:UPPER

Set → / → Query

Description	Sets or returns the filter upper frequency.	
Syntax	:ACQuire:FILTer:FREQuency:UPPER {DEFault} :ACQuire:FILTer:FREQuency:UPPER <NRf> :ACQuire:FILTer:FREQuency:UPPER?	
Parameter	DEFault	Sets the frequency to default.
	<NRf>	Sets the frequency to user.(Range:1Hz~500MHz)

Example	:ACQuire:FILTer:FREQuency:UPPER 4.95e+07 :ACQuire:FILTer:FREQuency:UPPER? 4.950000e+07

:ACQuire:FILTer:FREQuency:LOWER

Set → Query

Description	Sets or returns the filter lower frequency.	
Syntax	:ACQuire:FILTer:FREQuency:LOWER {DEFault} :ACQuire:FILTer:FREQuency:LOWER <NRf> :ACQuire:FILTer:FREQuency:LOWER?	
Parameter	DEFault	Sets the frequency to default.
	<NRf>	Sets the frequency to user.(Range:1Hz~500MHz)
Example	:ACQuire:FILTer:FREQuency:LOWER 1.25e+07 :ACQuire:FILTer:FREQuency:LOWER? 1.250000e+07	

:ACQuire:FILTer:TYPe

Set → Query

Description	Sets or returns the filter type.	
Syntax	:ACQuire:FILTer:TRACking {LOWPass | HIGHPass| BANDPass} :ACQuire:FILTer:TYPe?	
Parameter	LOWPass	Lowpass Type.
	HIGHPass	Highpass Type.
	BANDPass	bandpass Type.
Example	:ACQuire:FILTer:TYPe? >LOWPass Returns low pass type as present filter type	

:ACQuire:FILTer:TRACking

Set → / → Query

Description	Turns filter tracking on/off or queries its state.	
Syntax	:ACQuire:FILTer:TRACking {ON|OFF|?}	
Parameter/ Return parameter	OFF	Tracking off
	ON	Tracking on
Example	:ACQuire:FILTer:TRACking ON Turns filter tracking on.	

:ACQuire<X>:STATe?

→ Query

Description	Returns the status of waveform data.	
Syntax	:ACQuire<X>:STATe?	
Parameter	<X>	Channel number (1 to 4)
Return parameter	0	Raw data is not ready
	1	Raw data is ready
Example	:ACQuire1:STATe? 0 Returns 0. Channel 1's raw data is not ready. *Note: If the oscilloscope changes the acquisition status from STOP to RUN, the status will be reset as zero.*	

:ACQuire:INTERpolation

Set → / → Query

Description	Selects or returns the interpolation mode.	
Syntax	:ACQuire:INTERpolation {ET | SINC | ?}	
Parameter/Return parameter	ET	Equivalent Time interpolation. The GDS-2000E doesn't support ET.
	SINC	Sets to SIN(X)/X interpolation

Example	:ACQuire:INTERpolation? >SINC Returns SINC as the interpolation mode.

:ACQuire:RECOrdlength

Set / Query

Description	Sets or queries the record length.	
Syntax	:ACQuire:RECOrdlength {<NRf>| ?}	
Parameter/Return parameter	<NRf>	Record length. Settable record length: (1e+3 | 1e+4 | 1e+5 | 1e+6 | 1e+7)
Example	:ACQuire:RECOrdlength 1e+3 Sets the record length to 1000 points.	

:HEADer

Set / Query

Description	Configures whether the returned data of the :ACQuire:MEM query will contain header information or not. It is set to ON by default.	
Syntax	:HEADer {OFF | ON | ?}	
Related Commands	:ACQuire<X>:MEMory?	
Parameter	ON	Add header information.
	OFF	Don't add header information.
Return parameter	Returns the configuration (ON, OFF) for the selected channel.	
Example	:HEADer ON	

Autoscale Commands

:AUTOSet 46
:AUTORSET:MODe 46

:AUTOSet

Set →

Description	Runs the Autoset function to automatically configure the horizontal scale, vertical scale, and trigger according to the input signal.
Syntax	:AUTOSet

:AUTORSET:MODe

Set →
→ Query

Description	Sets the Autoset mode or queries its state.	
Syntax	:AUTORSET:MODe {FITScreen | ACPriority | ?}	
Related Commands	:AUTOSet	
Parameter/Return parameter	FITScreen	Fit Screen mode
	ACPriority	AC priority mode
Example	:AUTORSET? FITSCREEN	

Vertical Commands

:CHANnel<X>:BWLimit 47
:CHANnel<X>:COUPling 48
:CHANnel<X>:DESKew 48
:CHANnel<X>:DISPlay 48
:CHANnel<X>:EXPand 49
:CHANnel<X>:IMPedance? 49
:CHANnel<X>:INVert 50
:CHANnel<X>:POSition 50
:CHANnel<X>:PROBe:RATio 51
:CHANnel<X>:PROBe:TYPe 51
:CHANnel<X>:SCALe 51

:CHANnel<X>:BWLimit

Set → / → Query

Description	Sets or returns the bandwidth limit on/off.	
Syntax	:CHANnel<X>:BWLimit {FULL | <NR3> | ?}	
Parameter	<X>	Channel 1,2,3,4
	FULL	Full bandwidth
	<NR3>	Sets the bandwidth limit to a pre-defined bandwidth.
		100E+6: 100MHz
		20E+6: 20MHz
Return Parameter	<NR3>	Returns the bandwidth.
	Full	Full bandwidth
Example	:CHANnel1:BWLimit 2.000E+07	
	Sets the channel 1 bandwidth to 20MHz.	

:CHANnel<X>:COUPling

Set → / → Query

Description	Selects or returns the coupling mode.	
Syntax	CHANnel<X>:COUPling {AC | DC | GND | ?}	
Parameter	<X>	Channel 1,2,3,4
	AC	AC coupling
	DC	DC coupling
	GND	Ground coupling
Return parameter	Returns the coupling mode.	
Example	:CHANnel1:COUPling DC	
	Sets the coupling to DC for Channel 1.	

:CHANnel<X>:DESKew

Set → / → Query

Description	Sets the deskew time in seconds.	
Syntax	:CHANnel<X>:DESKew { <NR3> | ?}	
Parameter	<X>	Channel 1,2,3,4
	<NR3>	Deskew time: -5.00E -11 to 5.00E-11 -50ns to 50 ns. (10 ps /step)
Return parameter	<NR3>	Returns the deskew time.
Example	:CHANnel1:DESKew 1.300E-9	
	Sets the deskew time to 1.3 nano seconds.	

:CHANnel<X>:DISPlay

Set → / → Query

Description	Turns a channel on/off or returns its status.	
Syntax	:CHANnel<X>:DISPlay {OFF | ON | ?}	
Parameter	<X>	Channel 1,2,3,4
	OFF	Channel off
	ON	Channel on

Return Parameter	ON	Channel is on
	OFF	Channel is off
Example	:CHANnel1:DISPlay ON Turns on Channel 1	

:CHANnel<X>:EXPand

Set → / → Query

Description	Sets Expand By Ground or Expand By Center for a channel or queries its status.	
Syntax	:CHANnel<X>:EXPand {GND | CENTer | ?}	
Parameter	<X>	Channel 1,2,3,4
	GND	Ground
	CENTer	Center
Return parameter	GND	Expand By Ground
	CENTER	Expand By Center
Example	:CHANnel1:EXPand GND Sets Channel 1 to Expand By Ground.	

:CHANnel<X>:IMPedance?

→ Query

Description	Returns the impedance of the oscilloscope. (The impedance of the GDS-2000E is fixed at 1MΩ)	
Syntax	:CHANnel<X>:IMPedance?	
Parameter	<x>	Channel
	1/2/3/4	CH1/2/3/4
Return parameter	<NR3>	Returns the impedance value.
Example	:CHANnel1:IMPedance? 1.000000E+06 The impedance is 1M ohms.	

:CHANnel<X>:INVert

Set → / → Query

Description	Inverts a channel or returns its status.	
Syntax	:CHANnel<X>:INVert {OFF | ON | ?}	
Parameter	<X>	Channel 1, 2, 3, 4
	OFF	Invert off
	ON	Invert on
Return parameter	ON	Invert on
	OFF	Invert off
Example	:CHANnel1:INVert ON Inverts Channel 1	

:CHANnel<X>:POSition

Set → / → Query

Description	Sets or returns the position level for a channel.	
Note	The vertical position will only be set to closest allowed value. The position level range depends on the vertical scale. The scale must first be set before the position can be set.	
Syntax	:CHANnel<X>:POSition { <NRf> | ?}	
Parameter	<X>	Channel 1, 2, 3, 4
	<NRf>	Position. Range depends on the vertical scale.
Return parameter	<NR3>	Returns the position value.
Example 1	:CHANnel1:POSition 2.4E–3 Sets the Channel 1 position to 2.4mV/mA	
Example 2	:CHANnel1:POSition? 2.4E-3 Returns 2.4mV as the vertical position.	

:CHANnel<X>:PROBe:RATio

Set → / → Query

Description	Sets or returns the probe attenuation factor.	
Syntax	:CHANnel<X>:PROBe:RATio { <NRf> | ?}	
Related Commands	:CHANnel<X>:PROBe:TYPe	
Parameter	<X>	Channel 1, 2, 3, 4
	<NRf>	Probe attenuation factor
Return parameter	<NR3>	Returns the probe factor
Example	:CHANnel1:PROBe:RATio 1.00E+0 Sets the Channel 1 probe attenuation factor to 1x	

:CHANnel<X>:PROBe:TYPe

Set → / → Query

Description	Sets or returns the probe type (voltage/current).	
Syntax	:CHANnel<X>:PROBe:TYPe { VOLTage | CURRent | ?}	
Related Commands	:CHANnel<X>:PROBe:RATio	
Parameter	<X>	Channel 1, 2, 3, 4
	VOLTage	Voltage
	CURRent	Current
Return parameter	Returns the probe type.	
Example	:CHANnel1:PROBe:TYPe VOLTage Sets the Channel 1 probe type to voltage.	

:CHANnel<X>:SCALe

Set → / → Query

Description	Sets or returns the vertical scale. The scale depends on the probe attenuation factor. Note the probe attenuation factor should be set before the scale.

Syntax	:CHANnel<X>:SCALe { <NRf> | ?}	
Parameter	<X>	Channel 1, 2, 3, 4
	<NRf>	Vertical scale: 2e–3 to 1e+1 2mV to 10V (Probe x1)
Return parameter	<NR3>	Returns the vertical scale in volts or amps.
Example	:CHANnel1:SCAle 2.00E–2 Sets the Channel 1 vertical scale to 20mV/div	

Math Commands

:MATH:DISP 53
:MATH:TYPe 54
:MATH:DUAL:SOURce<X> 54
:MATH:DUAL:OPERator 54
:MATH:DUAL:POSition 55
:MATH:DUAL:SCALe 55
:MATH:FFT:SOURce 56
:MATH:FFT:MAG 56
:MATH:FFT:WINDow 56
:MATH:FFT:POSition 57
:MATH:FFT:SCALe 57
:MATH:FFT:HORizontal:SCALe 58
:MATH:FFT:HORizontal:POSition 58
:MATH:DEFine 58
:MATH:VAR? 59
:MATH:VAR:VAR<X> 60
:MATH:ADVanced:POSition 60
:MATH:ADVanced:SCALe 60

:MATH:DISP

Set → / → Query

Description	Turns the math display on or off on the screen.	
Syntax	:MATH:DISP {OFF|ON|?}	
Parameter/ Return parameter	OFF	Math is not displayed on screen
	ON	Math is displayed on screen
Example	:MATH:DISP OFF Math is off.	

:MATH:TYPe

Set → / → Query

Description	Queries or sets the Math type to FFT, Advanced Math or to dual channel math operations	
Syntax	:MATH:TYPe { DUAL | ADVanced | FFT | ? }	
Related Commands	:MATH:DISP	
Parameter	DUAL	Dual channel operations
	ADVanced	Advanced math operations
	FFT	FFT operations
Return parameter	Returns the math type.	
Example	:MATH:TYPe DUAL Sets the Math type to dual channel math operation.	

:MATH:DUAL:SOURce<X>

Set → / → Query

Description	Sets the dual math source for source 1 or 2.	
Syntax	:MATH:DUAL:SOURce<X> { CH1 | CH2 | CH3 | CH4 | REF1 | REF2 | REF3 | REF4 | ? }	
Parameter	<X>	Source number 1 or 2
	CH1~4	Channel 1 to 4
	REF1~4	Reference waveforms 1 to 4
Return parameter	Returns the source for the source 1 or 2.	
Example	:MATH:DUAL:SOURce1 CH1 Sets source1 as channel 1.	

:MATH:DUAL:OPERator

Set → / → Query

Description	Sets the math operator for dual math operations.

Syntax	:MATH:DUAL:OPERator {PLUS | MINUS | MUL| DIV|?}	
Parameter	PLUS	+ operator
	MINUS	- operator
	MUL	× operator
	DIV	÷ operator
Return parameter	Returns operator type.	
Example	:MATH:DUAL:OPERator PLUS Sets the math operator as plus (+).	

:MATH:DUAL:POSition

Set → Query

Description	Sets the vertical position of the displayed math result expressed by unit/division.	
Syntax	:MATH:DUAL:POSition {<NRf> | ? }	
Parameter	<NRf>	Vertical position Depends on the vertical scale (Unit/Div)
Return parameter	<NR3>	Returns the vertical position.
Example	:MATH:DUAL:POSition 1.0E+0 Sets the vertical position to 1.00 unit/div.	

:MATH:DUAL:SCALe

Set → Query

Description	Sets the vertical scale of the displayed math result.	
Syntax	:MATH:DUAL:SCALe {<NRf> | ?}	
Parameter	<NRf>	Vertical scale
Return parameter	<NR3>	Returns the scale.
Example	:MATH:DUAL:SCALe 2.0E-3 Sets the vertical scale to 2mV/2mA.	

:MATH:FFT:SOURce

Set → / → Query

Description	Sets and queries the FFT math source.	
Syntax	:MATH:FFT:SOURce { CH1 | CH2 | CH3 | CH4 | REF1 | REF2 | REF3 | REF4 | ? }	
Related commands	:MATH:ADVanced:EDIT:SOURce<X> :MATH:ADVanced:EDIT:OPERator	
Parameter	CH1~4	Channel 1 to 4
	REF1~4	Reference waveform 1 to 4
Return parameter	Returns the FFT source.	
Example	:MATH:FFT:SOURce CH1 Sets the FFT math source as channel 1.	

:MATH:FFT:MAG

Set → / → Query

Description	Sets FFT vertical units as linear or decibels.	
Syntax	:MATH:FFT:MAG {LINEAR | DB | ?}	
Parameter	LINEAR	Linear units (Vrms)
	DB	Logarithmic units (dB)
Return parameter	Returns the FFT vertical units.	
Example	:MATH:FFT:MAG DB Sets FFT vertical units to dB.	

:MATH:FFT:WINDow

Set → / → Query

Description	Sets the windowing filter used for the FFT function.	
Syntax	:MATH:FFT:WINDow {RECTangular|HAMming|HANning|BLAckman|?}	
Parameter	RECTangular	Rectangular window

	HAMming	Hamming window
	HANning	Hanning window
	BLAckman	Blackman window
Return parameter	Returns the FFT window.	
Example	:MATH:FFT:WINDow HAMming Sets the FFT window filter to hamming.	

:MATH:FFT:POSition

Set → Query

Description	Sets the vertical position of the displayed FFT result.	
Syntax	MATH:FFT:POSition { <NRf> | ? }	
Parameter	<NRf>	Vertical position: -12e+0 to +12e+0 (12 units/division to +12 units/division.)
Return parameter	<NR3>	Returns the vertical position.
Example	:MATH:FFT:POSition -2e-1 Sets the FFT position to -0.2 divisions.	

:MATH:FFT:SCALe

Set → Query

Description	Sets the vertical scale of the displayed FFT result.	
Syntax	:MATH:FFT:SCALe {<NRf> | ?}	
Parameter	<NRf>	Vertical scale: Linear: 2e-3 to 1e+3 (2mV~1kV) dB: 1e+0 to 2e+1 (1~20dB)
Return parameter	<NR3>	Returns vertical scale.
Example	:MATH:FFT:SCALe 1.0e+0 Sets the scale to 1dB.	

:MATH:FFT:HORizontal:SCALe

Set → / → Query

Description	Sets or queries the zoom scale for FFT math.	
Syntax	:MATH:FFT:HORizonatal:SCALe {<NRf> | ?}	
Parameter	<NRf>	Zoom scale: 1 to 20 times
Return parameter	<NR3>	Returns zoom scale.
Example	:MATH:FFT:HORizontal:SCALe 5 Sets the zoom scale to 5X.	

:MATH:FFT:HORizontal:POSition

Set → / → Query

Description	Sets the horizontal position of the displayed FFT result.	
Syntax	MATH:FFT:HORizontal:POSition { <NRf> | ? }	
Parameter	<NRf>	Horizontal position: 0Hz ~ 999.9kHz
Return parameter	<NR3>	Returns the vertical position.
Example	:MATH:FFT:HORizontal:POSition 6.0e5 Sets the FFT horizontal position to 600kHz.	

:MATH:DEFine

Set → / → Query

Description	Sets or queries the advanced math expression as a string.	
Syntax	:MATH:DEFine {<string>| ?}	
Related	:MATH:DISP :MATH:TYPe	
Parameter	<string>	An expression enclosed in double quotes. Note, ensure parentheses are used correctly in the expression. The expression can contain the following parts:

	Source	CH1~CH4, Ref1~Ref4
	Function	Intg(, Diff(, log(, ln(, Exp(, Sqrt(, Abs(, Rad(, Deg(, sin(, cos(, tan(, asin(, acos(, atan(
	Variable	VAR1, VAR2
	Operator	+, -, *, /, (,), !(, <, >, <=, >=, ==, !=, ||, &&
	Figure	0, 1, 2, 3, 4, 5, 6, 7, 8, 9, ., E
	Measure-ment	Pk-Pk(, Max(, Min(, Amp(, High(, Low(, Mean(, CycleMean(, RMS(, CycleRMS(, Area(, CycleArea(, ROVShoot(, FOVShoot(, Freq(, Period(, Rise(, Fall(, PosWidth(, NegWidth(, Dutycycle(, FRR(, FRF(, FFR(, FFF(, LRR(, LRF(, LFR(, LFF(, Phase(
Return parameter	Returns the expression as a string.	
Example	:MATH:DISP ON :MATH:TYPe ADVanced MATH:DEFine "CH1-CH2" Sets the math expression to CH1-CH2.	

:MATHVAR? → Query

Description	Returns the value of the VAR1 and VAR2 variables.
Syntax	MATHVAR?
Related Commands	MATHVAR:VAR<X> MATH:DEFine
Return parameter	<string> VAR1 <NR3>; VAR2 <NR3>

Example	MATHVAR? VAR1 1.000000E+06; VAR2 1.0E+1 Returns the value of both variables.

:MATHVAR:VAR<X>

Set → / → Query

Description	Sets or returns the VAR1 or VAR2 variables.	
Syntax	MATHVAR:VAR<x> {<NRf> | ?}	
Related Commands	MATH:DEFine	
Parameter	<X>	1, 2 (VAR1 or VAR2)
	<NRf>	Value of VAR1/VAR2
Return parameter	<NR3>	Returns the value of VAR1/VAR2
Example	:MATH:VAR1 6.0e4 Sets VAR1 to 60000.	

:MATH:ADVanced:POSition

Set → / → Query

Description	Sets the vertical position of the advanced math result, expressed in unit/div.	
Syntax	MATH:ADVanced:POSition { <NRf> | ? }	
Parameter	<NRf>	Vertical position: -12e+0 to +12e+0 (12 units/division to +12 units/division.)
Return parameter	<NR3>	Returns the vertical position.
Example	:MATH:ADVanced:POSition 1.0e+0 Sets the position as 1.00 unit/div.	

:MATH:ADVanced:SCALe

Set → / → Query

Description	Sets or queries the vertical scale the advanced math result.
Syntax	:MATH:ADVanced:SCALe {<NRf> | ?}

Parameter	<NRf>	Vertical scale
Return parameter	<NR3>	Returns the vertical scale.
Example	:MATH:ADVanced:SCALe 2.0E-3	
	Sets the vertical scale to 2mV/Div.	

Cursor Commands

:CURSor:MODe 63
:CURSor:SOURce 63
:CURSor:HUNI 64
:CURSor:HUSE 64
:CURSor:VUNI 65
:CURSor:VUSE 65
:CURSor:DDT 65
:CURSor:H1Position 66
:CURSor:H2Position 66
:CURSor:HDELta 67
:CURSor:V1Position 67
:CURSor:V2Position 67
:CURSor:VDELta 68
:CURSor:XY:RECTangular:X:POSition<X> 68
:CURSor:XY:RECTangular:X:DELta 68
:CURSor:XY:RECTangular:Y:POSition<X> 69
:CURSor:XY:RECTangular:Y:DELta 69
:CURSor:XY:POLar:RADIUS:POSition<X> 69
:CURSor:XY:POLar:RADIUS:DELta 70
:CURSor:XY:POLar:THETA:POSition<X> 70
:CURSor:XY:POLar:THETA:DELta 70
:CURSor:XY:PRODuct:POSition<X> 71
:CURSor:XY:PRODuct:DELta 71
:CURSor:XY:RATio:POSition<X> 71
:CURSor:XY:RATio:DELta 72

:CURSor:MODe

Set → Query

Description	Sets cursor mode to horizontal (H) or horizontal and vertical (HV). Note: When the cursor source is set to bus, then only the horizontal cursor is available.	
Syntax	:CURSor:MODe {OFF | H | HV | ? }	
Parameter	OFF	Turns the cursors off.
	H	Turns the horizontal cursors on.
	HV	Turns horizontal and vertical cursors on.
Return parameter	Returns the state of the cursors (H, HV, OFF).	
Example	:CURSor:MODe OFF Turns the cursors off.	

:CURSor:SOURce

Set → Query

Description	Sets or queries the cursor source.	
Syntax	:CURSor:SOURce {CH1 | CH2 |CH3 | CH4 | REF1 | REF2 | REF3 | REF4 | MATH | BUS1 | ?}	
Parameter	CH1~CH4	Channel 1 to 4
	REF1~4	Reference waveform 1 to 4
	MATH	Math source
	BUS1	Bus source
Return parameter	Returns the cursor source.	
Example	:CURSor:SOURce CH1 Turns the cursor source as channel 1.	

:CURSor:HUNI

Set → / → Query

Description	Sets or queries the units for the horizontal bar cursors.	
Syntax	:CURSor:HUNI {SEConds | HERtz | DEGrees | PERcent | ?}	
Related Commands	:CURSor:MODe	
Parameter	SEConds	Sets the cursor units to time in seconds.
	HERtz	Sets the cursor units to frequency.
	DEGrees	Sets the cursor units to degrees.
	PERcent	Sets the cursor units to percent.
Return parameter	Returns the unit type.	
Example	:CURSor:HUNI SEConds Sets the units to time in seconds.	

:CURSor:HUSE

Set →

Description	Sets the current cursor position as the phase or ratio reference for the Percent or Degrees (horizontal) cursors.	
Note	This command can only be used when :CURSor:HUNI is set to DEGrees or PERcent.	
Syntax	:CURSor:HUSE {CURRent}	
Related Commands	:CURSor:MODe :CURSor:HUNI	
Parameter	CURRent	Uses the current horizontal position
Example	:CURSor:HUSE CURRent.	

:CURSor:VUNI

Set → / → Query

Description	Sets or queries the units for the vertical bar cursors.	
Syntax	:CURSor:VUNI {BASE | PERcent | ?}	
Related Commands	:CURSor:MODe	
Parameter	BASE	Sets the vertical cursor units the same as the scope units (V or A).
	PERcent	Sets the displayed units to percent.
Return parameter	Returns the unit type.	
Example	:CURSor:VUNI BASE Sets the units to the base units.	

:CURSor:VUSE

Set →

Description	Sets the current cursor position as the ratio reference for the Percent (vertical) cursors.	
Note	This command can only be used when :CURSor:VUNI is set to PERcent.	
Syntax	:CURSor:VUSE {CURRent}	
Related Commands	:CURSor:MODe :CURSor:VUNI	
Parameter	CURRent	Uses the current vertical position
Example	:CURSor:VUSE CURRent.	

:CURSor:DDT

→ Query

Description	Returns the deltaY/deltaT (dy/dT) readout. This function is only supported if the source channels are CH1~4, Ref1~4 or Math.
Syntax	:CURSor:DDT{?}

Related Commands	:CURSor:MODe	
Return Parameter	<NR3>	Returns the readout in <NR3> format.
Example	:CURSor:DDT?	
	4.00E-05	

:CURSor:H1Position

Set → Query

Description	Sets or returns the first horizontal cursor (H1) position.
Syntax	:CURSor:H1Position {<NRf>| ?}
Related Commands	:CURSor:H2Position
Parameter	<NRf> Horizontal position
Return parameter	Returns the cursor position.
Example	:CURSor:H1Position?
	-1.34E-3
	Returns the H1 cursor position as -1.34ms.

:CURSor:H2Position

Set → Query

Description	Sets or returns the second horizontal cursor (H2) position.
Syntax	:CURSor:H2Position {<NRf> | ?}
Related Commands	:CURSor:H1Position
Parameter	<NRf> Horizontal Position
Return parameter	Returns the cursor position.
Example	:CURSor:H2Position 1.5E-3
	Sets the H2 cursor position to 1.5ms.

:CURSor:HDELta

Query

Description	Returns the delta of H1 and H2.	
Syntax	:CURSor:HDELta{?}	
Return Parameter	<NR3>	Returns the distance between two horizontal cursors.
Example	:CURSor:HDELta? 5.0E-9 Returns the horizontal delta as 5ns.	

:CURSor:V1Position

Set
Query

Description	Sets the first vertical cursor (V1) position.	
Syntax	:CURSor:V1Position {<NRf>| ?}	
Parameter	<NRf>	Vertical position. Depends on the vertical scale.
Return parameter	<NR3>	Returns the cursor position.
Example	:CURSor:V1Position 1.6E -1 Sets the V1 cursor position to 160mA.	

:CURSor:V2Position

Set
Query

Description	Sets the first vertical cursor (V2) position.	
Syntax	:CURSor:V2Position {<NRf> | ?}	
Parameter	<NRf>	Vertical position. Depends on the vertical scale.
Return parameter	<NR3>	Returns the cursor position.
Example	:CURSor:V2Position 1.1E-1 Sets the V2 cursor position to 110mA.	

:CURSor:VDELta → Query

Description	Returns the delta of V1 and V2.	
Syntax	:CURSor:VDELta{?}	
Return Parameter	<NR3>	Returns the difference between two vertical cursors.
Example	:CURSor:VDELta? 4.00E+0 Returns the vertical delta as 4 volts.	

:CURSor:XY:RECTangular:X:POSition<X> → Set / → Query

Description	Sets or queries the horizontal position in XY mode for the X rectangular coordinates for cursor 1 or 2.	
Syntax	:CURSor:XY:RECTangular:X:POSition<X> {<NRf>|?}	
Parameter	<X>	Cursor 1, 2
	<NRf>	Horizontal position co-ordinates
Return parameter	<NR3>	Returns the cursor position.
Example	:CURSor:XY:RECTangular:X:POSition1 4.0E-3 Sets the X-coordinate cursor 1 position to 40mV/mV.	

:CURSor:XY:RECTangular:X:DELta → Query

Description	Returns the delta value of cursor 1 and 2 on the X coordinate.	
Syntax	:CURSor:XY:RECTangular:X:DELta{?}	
Return Parameter	<NR3>	Returns the delta value of cursor 1 and 2 as <NR3>.

Example	:CURSor:XY:RECTangular:X:DELta? 80.0E-3 Returns the horizontal delta as 80mV.

:CURSor:XY:RECTangular:Y:POSition<X>

Set → / → Query

Description	Sets or queries the vertical position in XY mode for the Y rectangular coordinates for cursor 1 or 2.	
Syntax	:CURSor:XY:RECTangular:Y:POSition<X> {<NRf>|?}	
Parameter	<X>	Cursor 1, 2
	<NRf>	Vertical position co-ordinates
Return parameter	<NR3>	Returns the cursor position.
Example	:CURSor:XY:RECTangular:Y:POSition1 4.0E-3 Sets the Y-coordinate cursor 1 position to 40mV/mV.	

:CURSor:XY:RECTangular:Y:DELta

→ Query

Description	Returns the delta value of cursor 1 and 2 on the Y coordinate.	
Syntax	:CURSor:XY:RECTangular:Y:DELta{?}	
Return Parameter	<NR3>	Returns the delta value of cursor 1 and 2 as <NR3>.
Example	:CURSor:XY:RECTangular:Y:DELta? 80.0E-3 Returns the horizontal delta as 80mV.	

:CURSor:XY:POLar:RADIUS:POSition<X>

→ Query

Description	Queries the polar radius position for the specified cursor in XY mode, where X can be either cursor 1 or 2.

Syntax	:CURSor:XY:POLar:RADIUS:POSition<X>{?}	
Parameter	<X>	1, 2 (cursor 1, cursor 2)
Return Parameter	<NR3>	Returns the polar radius position.
Example	:CURSor:XY:POLar:RADIUS:POSition1? 80.0E-3 Returns the polar radius position as 80.0mV.	

:CURSor:XY:POLar:RADIUS:DELta → Query

Description	Returns the radius delta value of cursor 1 and 2.	
Syntax	:CURSor:XY:POLar:RADIUS:DELta{?}	
Return Parameter	<NR3>	Returns the radius delta.
Example	:CURSor:XY:POLar:RADIUS:DELta? 31.4E-3 Returns the radius delta as 31.4mV.	

:CURSor:XY:POLar:THETA:POSition<X> → Query

Description	Queries the polar angle for the specified cursor in XY mode, where X can be either 1 or 2.	
Syntax	:CURSor:XY:POLar:THETA:POSition<X>{?}	
Parameter	<X>	1, 2 (Cursor 1, Cursor 2)
Return parameter	<NR3>	Returns the polar angle.
Example	:CURSor:XY:POLAR:RADIUS:POSition1? 8.91E+1 Returns the polar angle for cursor1 as 89.1˚.	

:CURSor:XY:POLar:THETA:DELta → Query

Description	Queries the polar angle delta between cursor1 and cursor2.

Syntax	:CURSor:XY:POLar:THETA:DELta{?}	
Return parameter	<NR3>	Returns the theta delta between cursor1 and cursor2.
Example	:CURSor:XY:POLar:THETA:DELta? 9.10E+0 Returns the delta as 9.1˚.	

:CURSor:XY:PRODuct:POSition<X> → Query

Description	Queries the product in XY mode for the specified cursor, where x can be either 1 or 2.	
Syntax	:CURSor:XY:PRODuct:POSition<X>{?}	
Parameter	<X>	1, 2 (Cursor 1, Cursor 2)
Return parameter	<NR3>	Returns the product value of the Cursor1 or Cursor2.
Example	:CURSor:XY:PRODuct:POSition1? 9.44E-5 Returns the product of cursor1 as 94.4uVV.	

:CURSor:XY:PRODuct:DELta → Query

Description	Queries the product delta in XY mode.	
Syntax	:CURSor:XY:PRODuct:DELta{?}	
Return parameter	<NR3>	Returns the product delta.
Example	:CURSor:XY:PRODuct:DELta? 1.22E-5 Returns the product delta as 12.2uVV.	

:CURSor:XY:RATio:POSition<X> → Query

Description	Queries the ratio in XY mode for the specified cursor, where x can be either cursor 1 or 2.

Syntax	:CURSor:XY:RATio:POSition<X>{?}	
Parameter	<X>	1, 2 (Cursor 1, Cursor 2)
Return parameter	<NR3>	Returns the ratio.
Example	:CURSor:XY:RATio:POSition? 6.717E+1 Returns the ratio value as 6.717V/V.	

:CURSor:XY:RATio:DELta → Query

Description	Queries the ratio delta in XY mode.	
Syntax	:CURSor:XY:RATio:DELta{?}	
Return parameter	<NR3>	Returns the ratio delta.
Example	:CURSor:XY:RATio:DELta? 5.39E+1 Returns the ratio delta as 53.9V/V.	

Display Commands

:DISPlay:INTensity:WAVEform.....73
:DISPlay:INTensity:GRATicule.....73
:DISPlay:INTensity:BACKLight.....74
:DISPlay:INTensity:BACKLight:AUTODim:ENAble.....74
:DISPlay:INTENSITy:BACKLight:AUTODim:TIMe.....74
:DISPlay:PERSistence.....75
:DISPlay:GRATicule.....75
:DISPlay:WAVEform.....76
:DISPlay:OUTPut.....76

:DISPlay:INTensity:WAVEform

Set → / → Query

Description	Sets or queries the waveform intensity level.	
Syntax	:DISPlay:INTensity:WAVEform {<NRf> | ?}	
Parameter	<NRf>	0.0E+0 to 1.0E+2 (0% to 100%)
Return Parameter	<NR3>	Returns the intensity.
Example	:DISPlay:INTensity:WAVEform 5.0E+1 Sets the waveform intensity to 50%.	

:DISPlay:INTensity:GRATicule

Set → / → Query

Description	Sets or queries the graticule intensity level.	
Syntax	:DISPlay:INTensity:GRATicule {<NRf> | ?}	
Parameter	<NRf>	1.0E+0 to 1.0E+2 (10% to 100%)
Return Parameter	<NR3>	Returns the graticule intensity.
Example	:DISPlay:INTensity:GRATicule 5.0E+1 Sets the graticule intensity to 50%.	

:DISPlay:INTensity:BACKLight

Set → / → Query

Description	Sets or queries the intensity of the backlight display.	
Syntax	:DISPlay:INTensity:BACKLight {<NRf> | ?}	
Parameter	<NRf>	1.0E+0 to 1.0E+2 (10% to 100%)
Return Parameter	<NR3>	Returns the backlight intensity.
Example	:DISPlay:INTensity:BACKLight 5.0E+1 Sets the backlight intensity to 50%.	

:DISPlay:INTensity:BACKLight:AUTODim :ENAble

Set → / → Query

Description	Sets or queries the display auto-dim function.	
Syntax	:DISPlay:INTensity:BACKLight:AUTODim:ENAble {OFF | ON | ?}	
Parameter/ Return parameter	OFF	Turn auto-dim on.
	ON	Turn auto-dim off.
Example	:DISPlay:INTensity:BACKLight:AUTODim:ENAble ON Turns the auto-dim function on.	

:DISPlay:INTENSITy:BACKLight:AUTODim :TIMe

Set → / → Query

Description	Sets or queries the display auto-dim time.	
Syntax	:DISPlay:INTensity:BACKLight:AUTODim:TIMe { <NR1> | ? }	
Parameter/ Return parameter	<NR1>	1 ~ 180 minutes. Time in minutes.
Example	:DISPlay:INTensity:BACKLight:AUTODim:TIMe 10 Sets the auto-dim time to 10 minutes.	

:DISPlay:PERSistence

Set → / → Query

Description	Sets or queries the waveform persistence level.	
Syntax	:DISPlay:PERSistence { INFInite | OFF | <NRf> | ? }	
Parameter	<NRf>	1.6E-2 ~ 4.0E+0. (16mS to 10S) Range(1.6E-2, 30E-3, 60E-3, 120E-2, 240E-3, 500E-3, 750E-3, 1, 1.5,2,...,9.5,10
	INFInite	Infinite persistence
	OFF	No persistence
Return Parameter	<NR3>	Returns the persistence time.
	INFInite	Infinite persistence
	OFF	No persistence
Example	:DISPlay:PERSistence 2.0E+0 Sets the persistence to 2 seconds.	

:DISPlay:GRATicule

Set → / → Query

Description	Sets or queries graticule display type.			
Syntax	:DISPlay:GRATicule {FULL | GRID|CROSs | FRAMe | ?}			
Parameter	FULL		CROSs	
	FRAMe		GRID	
Return parameter	Returns the graticule type.			
Example	:DISPlay:GRATicule FULL Sets the graticule to .			

:DISPlay:WAVEform

Set → / → Query

Description	Sets or queries whether the waveforms are drawn as vectors or dots.	
Syntax	:DISPlay:WAVEform {VECTor | DOT | ?}	
Parameter	VECTor	Vectors
	DOT	Dots
Return parameter	Returns VECTOR or DOT.	
Example	:DISPlay:WAVEform VECTor Sets the waveform to vectors.	

:DISPlay:OUTPut

→ Query

Description	Returns the screen image as a 16 bit RGB run length encoded image.
Syntax	:DISPlay:OUTPut{?}
Return parameter	Format: header+data+LF For example assuming the image data size is 60072 bytes then the following would be returned: #560072<[count] [color] [count] [color]..... ><LF> Where #560072 is the header, each [count] and [color] data are 2 bytes and <LF> is a line feed character.

Hardcopy Commands

:HARDcopy:START 77
:HARDcopy:MODe 77
:HARDcopy:PRINTINKSaver 78
:HARDcopy:SAVEINKSaver 78
:HARDcopy:SAVEFORMat 78
:HARDcopy:ASSIGN 79

:HARDcopy:START

Set

Description	Executing the HARDcopy:START command is the equivalent of pressing the Hardcopy key on the front panel.
Syntax	:HARDcopy:START
Related Commands	:HARDcopy:MODe :HARDcopy:PRINTINKSaver :HARDcopy:SAVEINKSaver :HARDcopy:SAVEFORMat :HARDcopy:ASSIGN

:HARDcopy:MODe

Set / Query

Description	Sets or queries whether hardcopy is set to print or save.	
Syntax	:HARDcopy:MODe { PRINT | SAVE | ? }	
Related Commands	:HARDcopy:START	
Parameter	PRINT	Print mode
	SAVE	Save mode
Return parameter	Returns the mode.(PRINT/SAVE)	

Example	:HARDcopy:MODe PRINT Sets hardcopy to print.

:HARDcopy:PRINTINKSaver

Set → / → Query

Description	Sets Inksaver On or Off for printing.	
Syntax	:HARDcopy:PRINTINKSaver { OFF | ON | ? }	
Related Commands	:HARDcopy:START :HARDcopy:MODe	
Parameter	ON	Inksaver ON
	OFF	Inksaver OFF
Return parameter	Returns the print Ink Saver mode.(ON/OFF)	
Example	:HARDcopy:PRINTINKSaver ON Sets Ink Saver to ON for printing.	

:HARDcopy:SAVEINKSaver

Set → / → Query

Description	Sets Inksaver On or Off for saving screen images.	
Syntax	:HARDcopy:SAVEINKSaver { OFF | ON | ? }	
Related Commands	:HARDcopy:START :HARDcopy:MODe	
Parameter	ON	Inksaver ON
	OFF	Inksaver OFF
Return parameter	Returns the screen image Ink Saver mode (ON/OFF).	
Example	:HARDcopy:SAVEINKSaver ON Sets Inksaver to ON for saving screen images.	

:HARDcopy:SAVEFORMat

Set → / → Query

Description	Sets or queries the image save file type.
Syntax	:HARDcopy:SAVEFORMat { PNG | BMP | ? }

Related Commands	:HARDcopy:START :HARDcopy:MODe	
Parameter	PNG	PNG file format
	BMP	BMP file format
Return parameter	Returns the image file format (PNG/BMP).	
Example	:HARDcopy:SAVEFORMat PNG Sets the file format to PNG.	

:HARDcopy:ASSIGN

Set → / → Query

Description	Sets or queries what file type the hardcopy key has been assigned to save.	
Syntax	:HARDcopy:ASSIGN {IMAGe | WAVEform | SETUp | ALL | ?}	
Related Commands	:HARDcopy:START :HARDcopy:MODe	
Parameter	IMAGe	Save image files.
	WAVEform	Save waveforms.
	SETUp	Save the panel setup.
	ALL	Save All (image, waveform,setup)
Return parameter	Returns the file type. (IMAGE/WAVEFORM/SETUP/ALL)	
Example	:HARDcopy:ASSIGN IMAGE. Set the hardcopy key to save image files.	

Measure Commands

:MEASure:GATing....81
:MEASure:SOURce....81
:MEASure:METHod....82
:MEASUrement:REFLevel:PERCent:HIGH....82
:MEASUrement:REFLevel:PERCent:LOW....83
:MEASUrement:REFLevel:PERCent:MID....83
:MEASUrement:REFLevel:PERCent:MID2....83
:MEASure:FALL....84
:MEASure:FOVShoot....84
:MEASure:FPReshoot....85
:MEASure:FREQuency....85
:MEASure:NWIDth....86
:MEASure:PDUTy....86
:MEASure:PERiod....87
:MEASure:PWIDth....87
:MEASure:RISe....88
:MEASure:ROVShoot....88
:MEASure:RPReshoot....89
:MEASure:PPULSE....90
:MEASure:NPULSE....90
:MEASure:PEDGE....91
:MEASure:NEDGE....91
:MEASure:AMPlitude....92
:MEASure:MEAN....92
:MEASure:CMEan....93
:MEASure:HIGH....93
:MEASure:LOW....94
:MEASure:MAX....95
:MEASure:MIN....95
:MEASure:PK2PK....96
:MEASure:RMS....96
:MEASure:CRMS....97

:MEASure:AREa 97
:MEASure:CARea 98
:MEASure:FRRDelay 99
:MEASure:FRFDelay.....99
:MEASure:FFRDelay.....100
:MEASure:FFFDelay.....100
:MEASure:LRRDelay 101
:MEASure:LRFDelay.....102
:MEASure:LFRDelay.....102
:MEASure:LFFDelay.....103
:MEASure:PHAse.....103

:MEASure:GATing

Set → / → Query

Description	Sets or queries the measurement gating.	
Syntax	:MEASure:GATing { OFF | SCREen | CURSor | ? }	
Parameter	OFF	Full record
	SCREen	Gating set to screen width
	CURSor	Gating between cursors
Return parameter	Returns the gating. (OFF, SCREEN, CURSOR)	
Example	:MEASure:GATing OFF Turns gating off (full record).	

:MEASure:SOURce

Set → / → Query

Description	Sets or queries the measurement source for source1 or source2.	
Syntax	:MEASure:SOURce<X> { CH1 | CH2 | CH3 | CH4 | MATH | ? }	
Parameter	<X>	Source1 or source2
	CH1~CH4	Channel 1 to 4

	MATH	Math
Return parameter	Returns the source (CH1, CH2, CH3, CH4, MATH)	
Example	:MEASure:SOURce1 CH1 Sets source1 to channel 1.	

:MEASure:METHod

Set →
→ Query

Description	Sets or queries the method used to determine the High-Low measurement values.	
Syntax	:MEASure:METHod { AUTo | HIStogram | MINMax | ? }	
Parameter	AUTo	Set to auto.
	HIStogram	Set to the Histogram method.
	MINMax	Set to the Min-Max method.
Return parameter	Returns the measurement method (AUTO, HISTOGRAM, MINMAX)	
Example	:MEASure:METHod: AUTo Set the measurement method to auto.	

:MEASUrement:REFLevel:PERCent:HIGH

Set →
→ Query

Description	Sets or queries the high reference level as a percentage.	
Syntax	:MEASUrement:REFLevel:PERCent:HIGH {<NRf> | ?}	
Parameter	<NRf>	0 - 100%
Return parameter	Returns the high reference level	
Example	:MEASUrement:REFLevel:PERCent:HIGH 50.1 Set the high reference level to 50.1%.	

:MEASUrement:REFLevel:PERCent:LOW

Set → / → Query

Description	Sets or queries the low reference level as a percentage.
Syntax	:MEASUrement:REFLevel:PERCent:LOW {<NRf> | ?}
Parameter	<NRf> 0 - 100%
Return parameter	Returns the low reference level.
Example	:MEASUrement:REFLevel:PERCent:LOW 40.1 Set the low reference level to 40.1%.

:MEASUrement:REFLevel:PERCent:MID

Set → / → Query

Description	Sets or queries the first mid reference level as a percentage.
Syntax	:MEASUrement:REFLevel:PERCent:MID {<NRf> | ?}
Parameter	<NRf> 0 - 100%
Return parameter	Returns the mid reference level.
Example	:MEASUrement:REFLevel:PERCent:MID 50 Set the mid reference level to 50%.

:MEASUrement:REFLevel:PERCent:MID2

Set → / → Query

Description	Sets or queries the second mid reference level as a percentage.
Syntax	:MEASUrement:REFLevel:PERCent:MID2 {<NRf> | ?}
Parameter	<NRf> 0 - 100%
Return parameter	Returns the mid reference level of the second source.
Example	:MEASUrement:REFLevel:PERCent:MID2 50 Set the mid reference level to 50%.

:MEASure:FALL → Query

Description	Returns the fall time measurement result.	
Syntax	:MEASure:FALL{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:FALL? Selects Channel 1 as the source, and then measures the fall time.	

:MEASure:FOVShoot → Query

Description	Returns the fall overshoot amplitude.	
Syntax	:MEASure:FOVShoot{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the fall overshoot as a percentage
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	

Example	:MEASure:SOURce1 CH1 :MEASure:FOVShoot? 1.27E+0 Selects Channel 1, and then measures the fall overshoot.

:MEASure:FPReshoot → Query

Description	Returns fall preshoot amplitude.	
Syntax	:MEASure:FPReshoot{?}	
Related Commands	:MEASure:SOURce<X>	
Returns	Returns the fall preshoot as <NR3>.	
Return parameter	<NR3>	Returns the fall preshoot as a percentage.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:FPReshoot? Selects Channel 1, and then measures the fall preshoot.	

:MEASure:FREQuency → Query

Description	Returns the frequency value.	
Syntax	:MEASure:FREQuency{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the frequency in Hz.
	Chan Off	Indicates the source channel is not activated.

Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:FREQuency? >1.0E+3 Selects Channel 1, and then measures the frequency.

:MEASure:NWIDth → Query

Description	Returns the first negative pulse width timing.	
Syntax	:MEASure:NWIDth{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the negative pulse width in seconds.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:NWIDth? 4.995E-04 Selects Channel 1, and then measures the negative pulse width.	

:MEASure:PDUTy → Query

Description	Returns the positive duty cycle ratio as percentage.	
Syntax	:MEASure:PDUTy{?}	
Related commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the positive duty ratio.

	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PDUTy? 5.000E+01 Selects Channel 1, and then measures the positive duty cycle.	

:MEASure:PERiod → Query

Description	Returns the period.	
Syntax	:MEASure:PERiod{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the period.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PERiod? 1.0E-3 Selects Channel 1, and then measures the period.	

:MEASure:PWIDth → Query

Description	Returns the first positive pulse width.
Syntax	:MEASure:PWIDth{?}
Related Commands	:MEASure:SOURce<X>

Return parameter	<NR3>	Returns the positive pulse width.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PWIDth? 5.0E-6 Selects Channel 1, and then measures the positive pulse width.	

:MEASure:RISe → Query

Description	Returns the first pulse rise time.	
Syntax	:MEASure:RISe{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the rise time.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:RISe? 8.5E-6 Selects Channel 1, and then measures the rise time.	

:MEASure:ROVShoot → Query

Description	Returns the rising overshoot over the entire waveform in percentage.
Syntax	:MEASure:ROVShoot{?}

Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the overshoot.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:ROVShoot? 5.00E+00 Selects Channel 1, and then measures the rise overshoot.	

:MEASure:RPReshoot → Query

Description	Returns rising preshoot over the entire waveform in percentage.	
Syntax	:MEASure:RPReshoot{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the rising preshoot.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:RPReshoot? 2.13E-2 Selects Channel 1, and then measures the rise preshoot.	

:MEASure:PPULSE → Query

Description	Returns the number of positive pulses.	
Syntax	:MEASure:PPULSE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of positive pulses.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PPULSE? 6.000E+00 Selects Channel 1, and then measures the number of positive pulses.	

:MEASure:NPULSE → Query

Description	Returns the number of negative pulses.	
Syntax	:MEASure:NPULSE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of negative pulses.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	

Example	:MEASure:SOURce1 CH1 :MEASure:NPULSE? 4.000E+00 Selects Channel 1, and then measures the number of negative pulses.

:MEASure:PEDGE → Query

Description	Returns the number of positive edges.	
Syntax	:MEASure:PEDGE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of positive edges.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PEDGE? 1.100E+01 Selects Channel 1, and then measures the number of positive edges.	

:MEASure:NEDGE → Query

Description	Returns the number of negative edges.	
Syntax	:MEASure:NEDGE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of negative edges.
	Chan Off	Indicates the source channel is not activated.

Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:NEDGE? 1.100E+01 Selects Channel 1, and then measures the number of negative edges.

:MEASure:AMPlitude → Query

Description	Returns the amplitude difference between the Vhigh-Vlow.	
Syntax	:MEASure:AMPlitude{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the amplitude.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:AMPlitude? 3.76E-3 Selects Channel 1, and then measures the amplitude.	

:MEASure:MEAN → Query

Description	Returns the mean voltage/current of one or more full periods.
Syntax	:MEASure:MEAN{?}
Related Commands	:MEASure:SOURce<X>

Return parameter	<NR3>	Returns the mean.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:MEAN? 1.82E-3 Selects Channel 1, and then measures the mean value.	

:MEASure:CMEan → Query

Description	Returns the mean voltage/current of one full period.	
Syntax	:MEASure:CMEan{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the cyclic mean.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:CMEan? 9.480E-01 Selects Channel 1, and then measures the mean value of the first period.	

:MEASure:HIGH → Query

Description	Returns the global high voltage/current.

Syntax	:MEASure:HIGH{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the high value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:HIGH? 3.68E-3 Selects Channel 1, and then measures the high voltage/current.	

:MEASure:LOW → Query

Description	Returns the global low voltage/current.	
Syntax	:MEASure:LOW{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the global low value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:LOW? 1.00E-0 Selects Channel 1, and then measures the low current/voltage.	

:MEASure:MAX → Query

Description	Returns the maximum amplitude.	
Syntax	:MEASure:MAX{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the maximum amplitude.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:MAX? 1.90E-3 Selects Channel 1, and then measures the maximum amplitude.	

:MEASure:MIN → Query

Description	Returns the minimum amplitude.	
Syntax	:MEASure:MIN{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the minimum amplitude.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	

Example	:MEASure:SOURce1 CH1 :MEASure:MIN? -8.00E-3 Selects Channel 1, and then measures the minimum amplitude.

:MEASure:PK2PK → Query

Description	Returns the peak-to-peak amplitude (difference between maximum and minimum amplitude).	
Syntax	:MEASure:PK2Pk{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the voltage or current peak to peak measurement.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PK2Pk? 2.04E-1 Selects Channel 1, and then measures the peak-to-peak amplitude.	

:MEASure:RMS → Query

Description	Returns the root-mean-square voltage/current of one or more full periods.	
Syntax	:MEASure:RMS{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the RMS value.

	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:RMS? 1.31E-3 Selects Channel 1, and then measures the RMS voltage/current.	

:MEASure:CRMS → Query

Description	Returns the root-mean-square voltage/current of one full periods.	
Syntax	:MEASure:CRMS{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the CRMS value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:CRMS? 1.31E-3 Selects Channel 1, and then measures the CRMS voltage/current.	

:MEASure:AREa → Query

Description	Returns the voltage/current area over one or more full periods.
Syntax	:MEASure:AREa{?}

Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the area value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:AREa? 1.958E-03 Selects Channel 1, and then measures the area.	

:MEASure:CAREa → Query

Description	Returns the voltage/current area over one full period.	
Syntax	:MEASure:CAREa{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the area value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:CAREa? 1.958E-03 Selects Channel 1, and then measures the area.	

:MEASure:FRRDelay → Query

Description	Returns the delay between the first rising edge of source1 and the first rising edge of source2.	
Syntax	:MEASure:FRRDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FRRDelay? -4.68E-6 Select channel 1 and 2 as source1/2, and then measure FRR.	

:MEASure:FRFDelay → Query

Description	Returns the delay between the first rising edge of source1 and the first falling edge of source2.	
Syntax	:MEASure:FRFDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	

Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FRFDelay? 3.43E-6 Select channel 1 and 2 as source1/2, and then measures FRF.

:MEASure:FFRDelay → Query

Description	Returns the delay between the first falling edge of source1 and the first rising edge of source2.	
Syntax	:MEASure:FRRDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FRRDelay? -8.56E-6 Select channel 1 and 2 as delay source1/2, and then measure FFR.	

:MEASure:FFFDelay → Query

Description	Returns the delay between the first falling edge of source1 and the first falling edge of source2.
Syntax	:MEASure:FFFDelay{?}
Related Commands	:MEASure:SOURce<X>

Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FFFDelay? -8.89E-6 Select channel 1 and 2 as delay source1/2, and then measure FFF.	

:MEASure:LRRDelay → Query

Description	Returns the delay between the first rising edge of source1 and the last rising edge of source2.	
Syntax	:MEASure:LRRDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LRRDelay? -8.89E-6 Select channel 1 and 2 as delay source1/2, and then measure LRR.	

:MEASure:LRFDelay → Query

Description	Returns the delay between the first rising edge of source1 and the last rising edge of source2.	
Syntax	:MEASure:LRFDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LRFDelay? -4.99E-6 Select channel 1 and 2 as delay source1/2, and then measure LRF.	

:MEASure:LFRDelay → Query

Description	Returns the delay between the first falling edge of source1 and the last rising edge of source2.	
Syntax	:MEASure:LFRDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	

Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LFRDelay? -9.99E-6 Select channel 1 and 2 as delay source1/2, and then measure LFR.

:MEASure:LFFDelay → Query

Description	Returns the delay between the first falling edge of source1 and the last falling edge of source2.	
Syntax	:MEASure:LFFDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LFFDelay? -9.99E-6 Select channel 1 and 2 as delay source1/2, and then measure LFF.	

:MEASure:PHAse → Query

Description	Returns the phase between source 1 and source 2.
Syntax	:MEASure:PHAse{?}
Related Commands	:MEASure:SOURce<X>

Return parameter	<NR3>	Returns the phase difference.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:PHAse? 4.50E+01 Select channel 1 and 2 as phase source1/2, and then measure the phase in degrees.	

Measurement Commands

:MEASUrement:MEAS<X>:SOURCE<X> 105
:MEASUrement:MEAS<X>:TYPe 106
:MEASUrement:MEAS<X>:STATE 106
:MEASUrement:MEAS<X>:VALue 107
:MEASUrement:MEAS<X>:MAXimum 108
:MEASUrement:MEAS<X>:MEAN 109
:MEASUrement:MEAS<X>:MINImum 109
:MEASUrement:MEAS<X>:STDdev 110
:MEASUrement:STATIstics:MODe 111
:MEASUrement:STATIstics:WEIghting 111
:MEASUrement:STATIstics 111

:MEASUrement:MEAS<X>:SOURCE<X>

Set → / → Query

Description	Sets or queries the measurement source for a selected automatic measurement. This is a statistics related command.	
Syntax	:MEASUrement:MEAS<X>:SOURCE<X> { CH1 | CH2 | CH3 | CH4 | MATH | ? }	
Related commands	:MEASUrement:MEAS<X>:TYPe	
Parameter	MEAS<X>	The automatic measurement number from 1 to 8.
	SOURCE<X>	SOURCE1: the source for all single channel measurements.
	SOURCE<X>	SOURCE2: the source for all delay or phase measurements.
	CH1 to CH4	Channel 1, 2, 3, 4
	MATH	Math source
Return parameter	CH1 to CH4	Channel 1, 2, 3, 4

	MATH	Math source
Example	:MEASUrement:MEAS1:SOURCE1 >CH1 Returns the (first) source for measurement 1.	

:MEASUrement:MEAS<X>:TYPe

Set → / → Query

Description	Sets or queries the measurement type for a selected automatic measurement. This is a statistics related command.
Syntax	:MEASUrement:MEAS<X>:TYPe {PK2pk | MAXimum | MINImum | AMPlitude | HIGH | LOW | MEAN | CMEan | RMS | CRMs | AREa | CAREa | ROVShoot | FOVShoot | RPReshoot | FPReshoot | FREQuency | PERIod | RISe | FALL | PWIdth | NWIdth | PDUTy | PPULSE | NPULSE | PEDGE | NEDGE | FRRDelay | FRFDelay | FFRDelay | FFFDelay | LRRDelay | LRFDelay | LFRDelay | LFFDelay | PHAse | ?}
Related commands	:MEASUrement:MEAS<X>:SOURCE<X>
Parameter	MEAS<X> The automatic measurement number from 1 to 8.
Return parameter	Returns the measurement type
Example	:MEASUrement:MEAS1:TYPe RMS Sets measurement 1 to RMS measurement.

:MEASUrement:MEAS<X>:STATE

Set → / → Query

Description	Sets or queries the state of a selected measurement. This is a statistics related command.
Syntax	:MEASUrement:MEAS<X>:STATE { ON | OFF | 1 | 0 | ? }

Related commands	:MEASUrement:MEAS<X>:SOUrce<X> :MEASUrement:MEAS<X>:TYPe	
Parameter	MEAS<X>	The automatic measurement number from 1 to 8.
	ON/1	Turn the measurement on.
	OFF/0	Turn the measurement off.
Return parameter	0	Measurement is off.
	1	Measurement is on.
Example	:MEASUrement:MEAS1:STATE 1 Turns measurement 1 on.	

:MEASUrement:MEAS<X>:VALue → Query

Description	Returns the measurement results for the selected measurement. This is a statistics related command.	
Syntax	:MEASUrement:MEAS<X>:VALue?	
Related Commands	:MEASure:SOURce<X>	
Parameter	MEAS<X>	The automatic measurement number from 1 to 8.
Return parameter	<NR3>	Returns the measurement for the selected measurement number.
Note	The measurement source(s), measurement number, measurement type and measurement state must first be set before a measurement result can be returned.	

Example	:MEASUrement:MEAS1:SOUrce1 CH1 :MEASUrement:MEAS1:TYPe PK2PK :MEASUrement:MEAS1:STATE ON :MEASUrement:MEAS1:VALue? 5.000E+0 Selects channel 1 as the source for measurement 1, sets measurement 1 to peak to peak measurement and then turns on the measurement. The result returns the peak to peak measurement.

:MEASUrement:MEAS<X>:MAXimum → Query

Description	Returns the maximum measurement results for the selected measurement from the last time the statistics were reset. This is a statistics related command.	
Syntax	:MEASUrement:MEAS<X>:MAXimum?	
Related Commands	:MEASUrement:STATIstics:MODe	
Parameter	MEAS<X>	The automatic measurement number from 1 to 8.
Return parameter	<NR3>	Returns the measurement for the selected measurement number.
Example	:MEASUrement:MEAS3:SOUrce1 CH1 :MEASUrement:MEAS3:TYPe PK2PK :MEASUrement:MEAS3:STATE ON :MEASUrement:STATIstics:MODe ON :MEASUrement:MEAS3:MAXimum? 2.800E-02 Returns the maximum measurement result for measurement number 3.	

:MEASUrement:MEAS<X>:MEAN → Query

Description	Returns the mean measurement results for the selected measurement from the last time the statistics were reset. This is a statistics related command.	
Syntax	:MEASUrement:MEAS<X>:MEAN?	
Related Commands	:MEASUrement:STATIstics:MODe	
Parameter	MEAS<X>	The automatic measurement number from 1 to 8.
Return parameter	<NR3>	Returns the measurement for the selected measurement number.

Example

```
:MEASUrement:MEAS3:SOUrce1 CH1
:MEASUrement:MEAS3:TYPe PK2PK
:MEASUrement:MEAS3:STATE ON
:MEASUrement:STATIstics:MODe ON
:MEASUrement:MEAS3:MEAN?
2.090E-02
```

Returns the mean measurement result for measurement number 3.

:MEASUrement:MEAS<X>:MINImum → Query

Description	Returns the minimum measurement results for the selected measurement from the last time the statistics were reset. This is a statistics related command.	
Syntax	:MEASUrement:MEAS<X>:MINImum?	
Related Commands	:MEASUrement:STATIstics:MODe	
Parameter	MEAS<X>	The automatic measurement number from 1 to 8.

Return parameter	<NR3>	Returns the measurement for the selected measurement number.

Example

```
:MEASUrement:MEAS3:SOUrce1 CH1
:MEASUrement:MEAS3:TYPe PK2PK
:MEASUrement:MEAS3:STATE ON
:MEASUrement:STATIstics:MODe ON
:MEASUrement:MEAS3:MINImum?
1.600E-02
```

Returns the minimum measurement result for measurement number 3.

:MEASUrement:MEAS<X>:STDdev → Query

Description	Returns the standard deviation for the selected measurement from the last time the statistics were reset. This is a statistics related command.
Syntax	:MEASUrement:MEAS<X>:STDdev?
Related Commands	:MEASUrement:STATIstics:MODe

Parameter	MEAS<X>	The automatic measurement number from 1 to 8.
Return parameter	<NR3>	Returns the measurement for the selected measurement number.

Example

```
:MEASUrement:MEAS3:SOUrce1 CH1
:MEASUrement:MEAS3:TYPe PK2PK
:MEASUrement:MEAS3:STATE ON
:MEASUrement:STATIstics:MODe ON
:MEASUrement:MEAS3:STDdev?
1.530E-03
```

Returns the standard deviation for measurement number 3.

:MEASUrement:STATIstics:MODe

Set → / → Query

Description	Puts the statics measurement results on the display or queries whether the statistics are displayed.	
Syntax	:MEASUrement:STATIstics:MODe {OFF | ON | ?}	
Related commands	:MEASUrement:STATIstics	
Parameter/ Return parameter	ON	Display the statistics on the screen.
	OFF	Remove the statistics from the screen
Example	:MEASUrement:STATIstics:MODe ON Displays statistics on the screen.	

:MEASUrement:STATIstics:WEIghting

Set → / → Query

Description	Sets and queries the number of samples (weighting) used for the statistics calculations.	
Syntax	:MEASUrement:STATIstics:WEIghting { <NR1> | ? }	
Parameter/ Return parameter	<NR1>	Number of samples (2~1000)
Example	:MEASUrement:STATIstics:WEIghting 5 Sets the number of samples to 5.	

:MEASUrement:STATIstics

Set →

Description	Resets the statics calculations. This command will clear all the currently accumulated measurements.
Syntax	:MEASUrement:STATIstics {RESET}

Reference Commands

:REF<X>:DISPlay 112
:REF<X>:TIMebase:POSition 112
:REF<X>:TIMebase:SCALe 113
:REF<X>:OFFSet 113
:REF<x>:SCALe 114

:REF<X>:DISPlay

Set / Query

Description	Sets or queries whether a reference waveform will be shown on the display. A reference waveform must first be saved before this command can be used.	
Syntax	:REF<x>:DISPlay { OFF| ON| ? }	
Parameter	<X>	Reference waveform 1, 2, 3, 4.
	OFF	Turns the selected reference waveform off
	ON	Turns the selected reference waveform on
Return parameter	Returns the status of the selected reference waveform. (OFF, ON).	
Example	:REF1:DISPlay ON Turns on reference1 (REF 1) on the display.	

:REF<X>:TIMebase:POSition

Set / Query

Description	Sets or returns the selected reference waveform time base position.
Syntax	:REF<X>:TIMebase:POSition { <NRf> | ?}
Related commands	:REF<X>:DISPlay

Parameter	<X>	Reference waveform 1, 2, 3, 4.
	<NRf>	Horizontal co-ordinates
Return parameter	<NR3>	Returns the reference waveform position
Example	:REF1:TIMebase:POSition -5.000E-5 Selects reference 1, and then sets the horizontal position to -50us.	

:REF<X>:TIMebase:SCALe

Set → / → Query

Description	Sets or returns the selected reference waveform time base scale.	
Syntax	:REF<X>:TIMebase:SCALe { <NRf> | ?}	
Related commands	:REF<X>:DISPlay	
Parameter	<X>	Reference waveform 1, 2, 3, 4.
	<NRf>	Horizontal scale
Return parameter	<NR3>	Returns the reference waveform scale.
Example	:REF1:TIMebase:SCALe 5.00E-4 Selects reference 1, and then sets the horizontal scale to 500us/div.	

:REF<X>:OFFSet

Set → / → Query

Description	Sets or returns the selected reference waveform vertical position (offset).	
Syntax	:REF<X>:OFFSet { <NRf> | ?}	
Related commands	:REF<X>:DISPlay	
Parameter	<X>	Reference waveform 1, 2, 3, 4.
	<NRf>	Vertical offset

Return parameter	<NR3>	Returns the reference waveform vertical position.
Example	:REF1:OFFSet -5.000E-2 Selects reference 1, and then sets the vertical position to -50mV/mA.	

:REF<x>:SCALe

Set → / → Query

Description	Sets or returns the selected reference waveform vertical scale.	
Syntax	:REF<X>:SCALe { <NRf> | ? }	
Related commands	:REF<X>:DISPlay	
Parameter	<X>	Reference waveform 1, 2, 3, 4.
	<NRf>	Vertical scale
Return parameter	<NR3>	Returns the reference waveform vertical scale.
Example	:REF1:SCALe 5.000E-2 Selects reference 1, and then sets the vertical scale to 50mV|mA/div.	

Run Command

:RUN

Set →

Description	The run command allows the oscilloscope to continuously make acquisitions (equivalent to pressing the Run key on the front panel).
Syntax	:RUN

Stop Command

:STOP

Set →

Description	The stop command stops the oscilloscope making further acquisitions (equivalent to pressing the Stop key on the front panel).
Syntax	:STOP

Single Command

:SINGle

Set →

Description	The single command allows the oscilloscope to capture a single acquisition when trigger conditions have been fulfilled (equivalent to pressing the Single key on the front panel).
Syntax	:SINGle

Force Command

:FORCe

Set →

Description	The Force command forces an acquisition (equivalent to pressing the Force-Trig key on the front panel).
Syntax	:FORCe

Timebase Commands

:TIMebase:EXPand 117
:TIMebase:POSition 117
:TIMebase:SCALe.....117
:TIMebase:MODe 118
:TIMebase:WINDow:POSition 118
:TIMebase:WINDow:SCALe 119

:TIMebase:EXPand

Set → / → Query

Description	Sets or queries the horizontal expansion mode.	
Syntax	:TIMebase:EXPand {CENTer|TRIGger|?}	
Parameter/Return parameter	CENTer	Expand from the center of the display.
	TRIGger	Expand from the trigger point.
Example	:TIMebase:EXPand TRIGger Sets the expansion point to the trigger point.	

:TIMebase:POSition

Set → / → Query

Description	Sets or queries the horizontal position.	
Syntax	:TIMebase:POSition {<NRf> | ?}	
Parameter	<NRf>	Horizontal position
Return parameter	<NR3>	Returns the horizontal position
Example	:TIMebase:POSition 5.00E-4 Sets the horizontal position as 500us.	

:TIMebase:SCALe

Set → / → Query

Description	Sets or queries the horizontal scale.

Syntax	:TIMebase:SCALe {<NRf> | ?}	
Parameter	<NRf>	Horizontal scale
Return parameter	<NR3>	Returns the horizontal scale.
Example	:TIMebase:SCALe 5.00E-2 Sets the horizontal scale to 50ms/div.	

:TIMebase:MODe

Set → / → Query

Description	Sets or queries the time base mode. The time base mode determines the display view window on the scope.	
Syntax	:TIMebase:MODe {MAIN | WINDow | XY | ?}	
Parameter	MAIN	Sets the time base mode to the main screen.
	WINDow	Sets the time base mode to the zoom window.
	XY	Sets the time base mode to the XY display.
Return parameter	Returns the time base mode (MAIN, WINDOW, XY)	
Example	:TIMebase:MODe MAIN Sets the time base mode to the main mode.	

:TIMebase:WINDow:POSition

Set → / → Query

Description	Sets or queries the zoom horizontal position.	
Syntax	:TIMebase:WINDow:POSition {<NRf> | ?}	
Related commands	:TIMebase:MODe	
Parameter	<NRf>	Horizontal position for zoom window
Return parameter	<NR3>	Returns the zoom horizontal position.

Example	:TIMebase:WINDow:POSition 2.0E-3 Sets the zoom horizontal position as 20ms.

:TIMebase:WINDow:SCALe

Set / Query

Description	Sets or queries the zoom horizontal scale.	
Note	If the oscilloscope is under "ZOOM" mode, the main timebase function will be disabled and cannot be modified.	
Syntax	:TIMebase:WINDow:SCALe {<NRf> | ?}	
Related commands	:TIMebase:MODe	
Parameter	<NRf>	Zoom horizontal scale. The range will depend on the time base.
Return parameter	<NR3>	Returns the zoom horizontal scale.
Example	:TIMebase:WINDow:SCALe 2.0E-3 Sets the zoom horizontal scale to 2ms.	

Trigger Commands

:TRIGger:FREQuency 122
:TRIGger:TYPe 122
:TRIGger:SOURce 122
:TRIGger:COUPle 123
:TRIGger:NREJ 123
:TRIGger:MODe 124
:TRIGger:HOLDoff 124
:TRIGger:LEVel 124
:TRIGger:HLEVel 125
:TRIGger:LLEVel 125
:TRIGger:EDGe:SLOP 126
:TRIGger:DELay:SLOP 126
:TRIGger:DELay:TYPe 127
:TRIGger:DELay:TIMe 127
:TRIGger:DELay:EVENt 127
:TRIGger:DELay:LEVel 128
:TRIGger:PULSEWidth:POLarity 128
:TRIGger:RUNT:POLarity 128
:TRIGger:RUNT:WHEn 129
:TRIGger:RUNT:TIMe 129
:TRIGger:RISEFall:SLOP 130
:TRIGger:RISEFall:WHEn 130
:TRIGger:RISEFall:TIMe 131
:TRIGger:VIDeo:TYPe 131
:TRIGger:VIDeo:FIELd 132
:TRIGger:VIDeo:LINe 132
:TRIGger:VIDeo:POLarity 133
:TRIGger:PULSe:WHEn 133
:TRIGger:PULSe:TIMe 134
:TRIGger:TIMEOut:WHEn 134
:TRIGger:TIMEOut:TIMER 134
:TRIGger:ALTernate 135

:TRIGger:STATe 135
:TRIGger:EXTERnal:PROBe:TYPe.....136
:TRIGger:EXTERnal:PROBe:RATio 136
:TRIGger:BUS:TYPe 137
:TRIGger:BUS:THReshold:CH<x>.....137
:TRIGger:BUS:B1:I2C:CONDition 137
:TRIGger:BUS:B1:I2C:ADDRess:MODe.....138
:TRIGger:BUS:B1:I2C:ADDRess:TYPe.....139
:TRIGger:BUS:B1:I2C:ADDRess:VALue 139
:TRIGger:BUS:B1:I2C:ADDRess:DIRection.....140
:TRIGger:BUS:B1:I2C:DATa:SIZe 140
:TRIGger:BUS:B1:I2C:DATa:VALue.....141
:TRIGger:BUS:B1:UART:CONDition 142
:TRIGger:BUS:B1:UART:RX:DATa:SIZe 142
:TRIGger:BUS:B1:UART:RX:DATa:VALue 143
:TRIGger:BUS:B1:UART:TX:DATa:SIZe.....143
:TRIGger:BUS:B1:UART:TX:DATa:VALue 144
:TRIGger:BUS:B1:SPI:CONDition 145
:TRIGger:BUS:B1:SPI:DATa:SIZe 145
:TRIGger:BUS:B1:SPI:DATa:MISO:VALue 146
:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue 147
:TRIGger:BUS:B1:CAN:CONDition.....147
:TRIGger:BUS:B1:CAN:FRAMEtype 148
:TRIGger:BUS:B1:CAN:IDentifier:MODe.....148
:TRIGger:BUS:B1:CAN:IDentifier:VALue 149
:TRIGger:BUS:B1:CAN:IDentifier:DIRection.....150
:TRIGger:BUS:B1:CAN:DATa:QUALifier 150
:TRIGger:BUS:B1:CAN:DATa:SIZe.....151
:TRIGger:BUS:B1:CAN:DATa:VALue.....151
:TRIGger:BUS:B1:LIN:CONDition 152
:TRIGger:BUS:B1:LIN:DATa:QUALifier.....154
:TRIGger:BUS:B1:LIN:DATa:SIZe 154
:TRIGger:BUS:B1:LIN:DATa:VALue 155
:TRIGger:BUS:B1:LIN:ERRTYPE.....155
:TRIGger:BUS:B1:LIN:IDentifier:VALue 156

:TRIGger:FREQuency → Query

Description	Queries the trigger frequency.	
Syntax	:TRIGger:FREQuency{?}	
Return parameter	<NR3>	Returns the trigger frequency.
Example	:TRIGger:FREQuency?	
	1.032E+3	
	Returns the trigger frequency.	

:TRIGger:TYPe → Set → Query

Description	Sets or queries the trigger type.	
Syntax	:TRIGger:TYPe {EDGe | DELay | PULSEWidth | VIDeo | RUNT | RISEFall | BUS | TIMEOut | ? }	
Parameter	EDGE	Edge trigger
	DELay	Delay trigger
	PULSEWidth	Pulse width trigger
	VIDeo	Video trigger
	RUNT	Runt trigger
	RISEFall	Rise and fall trigger
	BUS	Bus trigger
	TIMEOut	Timeout trigger
Return parameter	Returns the trigger type.	
Example	:TRIGger:TYPe EDGE	
	Sets the trigger type to edge.	

:TRIGger:SOURce → Set → Query

Description	Sets or queries the trigger source.

Syntax	:TRIGger:SOURce { CH1 | CH2 | CH3 | CH4 | EXT | LINe | ? }	
Parameter	CH1 to CH4	Channel 1 to channel 4
	EXT	External source
	LINe	AC Line
Return parameter	Returns the trigger source.	
Example	:TRIGger:SOURce CH1 Sets the trigger source to channel 1.	

:TRIGger:COUPle

Set → Query

Description	Sets or queries the trigger coupling.
Note	Applicable for edge and delay triggers only.
Syntax	:TRIGger:COUPle {AC | DC | HF | LF | ?}

Parameter	AC	AC mode
	DC	DC mode
	HF	High frequency rejection
	LF	Low frequency rejection
Return parameter	Returns the trigger coupling.	
Example	:TRIGger:COUPle AC Sets the trigger coupling to AC.	

:TRIGger:NREJ

Set → Query

Description	Sets or queries noise rejection status.
Syntax	:TRIGger:NREJ {OFF| ON| ?}

Parameter	OFF	Turns noise rejection off
	ON	Turns noise rejection on
Return parameter	Returns the noise rejection status (ON, OFF).	

Example	:TRIGger:NREJ ON Turns noise rejection on.

:TRIGger:MODe

Set → / → Query

Description	Sets or queries the trigger mode.	
Syntax	:TRIGger:MODe {AUTo | NORMal | ?}	
Parameter	AUTo	Auto trigger (Untriggered roll)
	NORMal	Normal trigger
Return parameter	Returns the trigger mode.	
Example	:TRIGger:MODe NORMal Sets the trigger mode to normal.	

:TRIGger:HOLDoff

Set → / → Query

Description	Sets or queries the holdoff time.	
Syntax	:TRIGger:HOLDoff {<NRf> | ?}	
Parameter	<NRf>	Holdoff time
Return parameter	<NR3>	Returns the trigger holdoff time.
Example	:TRIGger:HOLDoff 1.00E-8 Sets the trigger holdoff time to 10ns.	

:TRIGger:LEVel

Set → / → Query

Description	Sets or queries the level.	
Note	Not applicable to Pulse Runt and Rise & Fall triggers.	
Syntax	:TRIGger:LEVel {TTL | ECL | SETTO50 | <NRf> | ?}	
Related commands	:TRIGger:TYPe	
Parameter	<NRf>	Trigger level value.

	TTL	Sets the trigger level to TTL.
	ECL	Sets the trigger level to ECL.
	SETTO50	Sets the trigger level to the User level (50% by default).
Return parameter	<NR3>	Returns the trigger level.
Example1	:TRIGger:LEVel TTL Sets the trigger to TTL.	
Example2	:TRIGger:LEVel 3.30E-1 Sets the trigger level to 330mV/mA.	

:TRIGger:HLEVel

Set → Query

Description	Sets or queries the high trigger level.
Note	Applicable for Rise and Fall/Pulse Runt triggers.
Syntax	:TRIGger:HLEVel {<NRf> | ?}
Related commands	:TRIGger:TYPe

Parameter	<NRf>	High level value.
Return parameter	<NR3>	Returns the trigger high level.

Example :TRIGger:HLEVel 3.30E-1

Sets the trigger high level to 330mV/mA.

:TRIGger:LLEVel

Set → Query

Description	Sets or queries the low trigger level.
Note	Applicable for Rise and Fall/Pulse Runt triggers.
Syntax	:TRIGger:LLEVel {<NRf> | ?}
Related commands	:TRIGger:TYPe

Parameter	<NRf>	Low level value.

Return parameter	<NR3>	Returns the trigger low level.
Example	:TRIGger:LLEVel -3.30E-3 Sets the trigger low level to -330mV/mA.	

:TRIGger:EDGe:SLOP

Set / Query

Description	Sets or queries the trigger slope.	
Syntax	:TRIGger:EDGe:SLOP {RISe | FALL | EITher | ? }	
Related commands	:TRIGger:TYPe	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the trigger slope.	
Example	:TRIGger:EDGe:SLOP FALL Sets the trigger slope to falling.	

:TRIGger:DELay:SLOP

Set / Query

Description	Sets or queries the trigger slope for the delay trigger.	
Syntax	:TRIGger:DELay:SLOP {RISe | FALL | EITher | ? }	
Related commands	:TRIGger:TYPe	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the trigger slope.	
Example	:TRIGger:DELay:SLOP FALL Sets the trigger slope to falling.	

:TRIGger:DELay:TYPe

Set → Query

Description	Sets or queries the trigger delay type.	
Syntax	:TRIGger:DELay:TYPE {TIMe | EVENt | ?}	
Related commands	:TRIGger:TYPe	
Parameter	TIMe	Sets the delay type to time.
	EVENt	Sets the delay type to event.
Return parameter	Returns the trigger delay type.	
Example	:TRIGger:DELay:TYPe TIMe Sets the delay type to time delay.	

:TRIGger:DELay:TIMe

Set → Query

Description	Sets or queries the delay time value.	
Syntax	:TRIGger:DELay:TIMe {<NRf> | ?}	
Related commands	:TRIGger:DELay:TYPe	
Parameter	<NRf>	Delay time (1.00E-8~1.00E+1)
Return parameter	<NR3>	Returns the delay time.
Example	:TRIGger:DELay:TIMe 1.00E-6 Sets the delay time to 1us.	

:TRIGger:DELay:EVENt

Set → Query

Description	Sets or queries the number of events for the event delay trigger.
Syntax	:TRIGger:DELay:EVENt {<NR1> | ?}
Related commands	:TRIGger:DELay:TYPe

Parameter	<NR1>	1~65535 events
Return parameter	<NR1>	Returns the number of events.
Example	:TRIGger:DELay:EVENt 2 Sets the number of events to 2.	

:TRIGger:DELay:LEVel

Set → / → Query

Description	Sets or queries the trigger delay level.
Syntax	:TRIGger:DELay:LEVel {<NRf> | ?}
Parameter	<NRf> Delay trigger level
Return parameter	<NR3> Returns the delay trigger.
Example	:TRIGger:DELay:LEVel 5.00E-3 Sets the delay trigger level to 5mV/mA.

:TRIGger:PULSEWidth:POLarity

Set → / → Query

Description	Sets or queries the pulse width trigger polarity.	
Syntax	:TRIGger:PULSEWidth:POLarity {POSitive | NEGative | ?}	
Related commands	:TRIGger:TYPe	
Parameter	POSitive	Positive polarity
	NEGative	Negative polarity
Return parameter	Returns the pulse width polarity.	
Example	:TRIGger:PULSEWidth:POLarity POSitive Sets the pulse width polarity to positive.	

:TRIGger:RUNT:POLarity

Set → / → Query

Description	Sets or queries the Pulse Runt trigger polarity.

Syntax	:TRIGger:RUNT:POLarity { POSitive | NEGative | EITher | ? }	
Related commands	:TRIGger:TYPe	
Parameter	POSitive	Positive polarity
	NEGative	Negative polarity
	EITher	Positive or negative polarity
Return parameter	Returns the pulse runt trigger polarity.	
Example	:TRIGger:RUNT:POLarity POSitive Sets the Pulse Runt trigger polarity to positive.	

:TRIGger:RUNT:WHEn

Set →
→ Query

Description	Sets or queries the Pulse Runt trigger conditions.	
Syntax	:TRIGger:RUNT:WHEn {MOREthan| LESSthan | EQual | UNEQual | ? }	
Related commands	:TRIGger:TYPe :TRIGger:RUNT:TIMe	
Parameter	MOREthan	>
	LESSthan	<
	Equal	=
	UNEQual	≠
Return parameter	Returns the pulse runt trigger condition.	
Example	:TRIGger:RUNT:WHEn UNEQual Sets the Pulse Runt trigger condition to unequal (≠).	

:TRIGger:RUNT:TIMe

Set →
→ Query

Description	Sets or queries the Pulse Runt trigger time.
Syntax	:TRIGger:RUNT:TIMe {<NRf> | ? }

Related commands	:TRIGger:TYPe :TRIGger:RUNT:WHEn	
Parameter	<NRf>	Pulse runt time (4nS to 10S)
Return Parameter	<NR3>	Returns the runt time in seconds.
Example	:TRIGger:RUNT:TIMe 4.00E-5 Sets the runt time to 40.0uS.	

:TRIGger:RISEFall:SLOP

Set → / → Query

Description	Sets or queries the Rise & Fall slope.	
Syntax	:TRIGger:RISEFall:SLOP {RISe | FALL | EITher | ?}	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the rise & fall slope.	
Example	:TRIGger:RISEFall:SLOP RISe Sets the Rise & Fall slope to rising.	

:TRIGger:RISEFall:WHEn

Set → / → Query

Description	Sets or queries the rise/fall trigger conditions.	
Syntax	:TRIGger:RISEFall:WHEn {MOREthan | LESSthan | EQual | UNEQual | ? }	
Related commands	:TRIGger:TYPe :TRIGger:RISEFall:TIMe	
Parameter	MOREthan	>
	LESSthan	<
	Equal	=
	UNEQual	≠
Return parameter	Returns the rise/fall trigger condition.	

Example	:TRIGger:RISEFall:WHEn UNEQual Sets the Rise and Fall trigger condition to unequal (≠).

:TRIGger:RISEFall:TIMe

Set → Query

Description	Sets or queries the Rise and Fall time.	
Syntax	:TRIGger:RISEFall:TIMe {<NRf> | ? }	
Related commands	:TRIGger:TYPe :TRIGger:RISEFall:WHEn	
Parameter	<NRf>	Rise and Fall time (4nS to 10S)
Return Parameter	<NR3>	Returns the rise and fall time in seconds.
Example	:TRIGger:RISEFall:TIMe 4.00E-5 Sets the trigger rise & fall to 40.0us.	

:TRIGger:VIDeo:TYPe

Set → Query

Description	Sets or queries the video trigger type.	
Syntax	:TRIGger:VIDeo:TYPE {NTSC | PAL | SECam | EDTV480P | EDTV576P | HDTV720P | HDTV1080I | HDTV1080P | ? }	
Related commands	:TRIGger:TYPe	
Parameter	NTSC	NTSC
	PAL	PAL
	SECam	SECAM
	EDTV480P	Extra definition TV 480P
	EDTV576P	Extra definition TV 576P
	HDTV720P	High definition TV 720P
	HDTV1080I	High definition TV 1080i

	HDTV1080P	High definition TV 1080P
Return parameter	Returns the video trigger type.	
Example	:TRIGger:VIDeo:TYPe NTSC Sets the video trigger to NTSC.	

:TRIGger:VIDeo:FIELd

Set → / → Query

Description	Sets or queries the video trigger field.	
Syntax	:TRIGger:VIDeo:FIELd { FIELD1 | FIELD2 | ALLFields | ALLLines | ? }	
Related commands	:TRIGger:TYPe	
Parameter	FIELD1	Trigger on field 1
	FIELD2	Trigger on field 2
	ALLFields	Trigger on all fields
	ALLLines	Trigger on all lines
Return parameter	Returns the video trigger field.	
Example	:TRIGger:VIDeo:FIELd ALLFields Sets the video trigger to trigger on all fields.	

:TRIGger:VIDeo:LINe

Set → / → Query

Description	Sets or queries the video trigger line.	
Syntax	:TRIGger:VIDeo:LINe {<NR1> | ?}	
Related commands	:TRIGger:TYPe	
Parameter	<NR1>	Video line
Return parameter	<NR3>	Returns the video trigger line.
Example	:TRIGger:VIDeo:LINe 1 Sets the video trigger to line 1.	

:TRIGger:VIDeo:POLarity

Set → / → Query

Description	Sets or queries the video trigger polarity.	
Syntax	:TRIGger:VIDeo:POLarity { POSitive | NEGative | ? }	
Related commands	:TRIGger:TYPe	
Parameter	POSitive	Positive polarity
	NEGative	Negative polarity
Return parameter	Returns the video trigger polarity.	
Example	:TRIGger:VIDeo:POLarity POSitive Sets the video trigger polarity to positive.	

:TRIGger:PULSe:WHEn

Set → / → Query

Description	Sets or queries the pulse width trigger conditions.	
Syntax	:TRIGger:PULSe:WHEn { MOREthan | LESSthan | EQual | UNEQual | ? }	
Related commands	:TRIGger:TYPe :TRIGger:PULSe:TIMe	
Parameter	MORE than	>
	LESSthan	<
	EQual	=
	UNEQual	≠
Return parameter	Returns the pulse width trigger conditions.	
Example	:TRIGger:PULSe:WHEn UNEQual Sets the trigger pulse width conditions to not equal to (≠).	

:TRIGger:PULSe:TIMe

Set → Query

Description	Sets or queries the pulse width time.	
Syntax	:TRIGger:PULSe:TIMe {<NRf> | ?}	
Related commands	:TRIGger:TYPe :TRIGger:PULSe:WHEn	
Parameter	<NRf>	Pulse width time (4ns~10s)
Return parameter	<NR3>	Returns the pulse width time in seconds.
Example	:TRIGger:PULSe:TIMe 4.00E-5 Sets the trigger pulse width to 40.0us.	

:TRIGger:TIMEOut:WHEn

Set → Query

Description	Sets or queries the timeout trigger condition.	
Syntax	:TRIGger:TIMEOut:WHEn {HIGH|LOW|EITher|?}	
Related commands	:TRIGger:TIMEOut:TIMER	
Parameter	HIGH	Signal is high.
	LOW	Signal is low.
	EITher	Signal is high or low.
Return parameter	Returns the timeout condition (HIGH, LOW, EITHER).	
Example1	:TRIGger:TIMEOut:WHEn LOW Sets the timeout condition to low.	

:TRIGger:TIMEOut:TIMER

Set → Query

Description	Sets or returns timeout trigger time.
Syntax	:TRIGger:TIMEOut:TIMER {<NRf> | ? }

Related commands	:TRIGger:TIMEOut:WHEn	
Parameter	<NRf>	Timeout time. (4nS to 10S).
Return parameter	Returns the timeout time as <NR3>.	
Example	:TRIGger:TIMEOut:TIMER? 8.960e-05	

:TRIGger:ALTernate

Set → Query

Description	Sets alternating between source triggers on or off or queries its state.	
Syntax	:TRIGger:ALTernate {OFF | ON |?}	
Parameter	OFF	Alternate off
	ON	Alternate on
Return parameter	Returns the Alternate trigger status (ON, OFF).	
Example	:TRIGger:ALTernate ON Turns on alternating between source triggers.	

:TRIGger:STATe

→ Query

Description	Returns the current state of the triggering system.	
Syntax	:TRIGger:STATe?	
Return parameter	*ARMED	Indicates that the oscilloscope is acquiring pretrigger information.
	*AUTO	Indicates that the oscilloscope is in the automatic mode and acquires data even in the absence of a trigger.
	*READY	Indicates that all pretrigger information has been acquired and that the oscilloscope is ready to accept a trigger.

	*SAVE	Indicates that the oscilloscope is in save mode and is not acquiring data.
	*TRIGGER	Indicates that the oscilloscope triggered and is acquiring the post trigger information.
Example	:TRIGger:STATe? AUTO The trigger is in auto mode.	

:TRIGger:EXTERnal:PROBe:TYPe

Set → / → Query

Description	Sets or queries the external probe type.	
Syntax	:TRIGger:EXTERnal:PROBe:TYPe { VOLTage | CURRent | ? }	
Related commands	:TRIGger:EXTERnal:PROBe:RATio	
Parameter	VOLTage	Voltage
	CURRent	Current
Return parameter	Returns the probe type.	
Example	:TRIGger:EXTERnal:PROBe:TYPe? CURRENT	

:TRIGger:EXTERnal:PROBe:RATio

Set → / → Query

Description	Sets or queries the external probe ratio (attenuation).	
Syntax	:TRIGger:EXTERnal:PROBe:RATio {<NRf> | ?}	
Related commands	:TRIGger:EXTERnal:PROBe:TYPe	
Parameter	<NRf>	External probe attenuation factor.
Return parameter	<NR3>	Returns the probe attenuation factor.

Example	:TRIGger:EXTERnal:PROBe:RATio? 5.000000e+01

:TRIGger:BUS:TYPe → Query

Description	Returns the current bus type.	
Syntax	:TRIGger:BUS:TYPe?	
Return parameter	I2C	I²C mode
	SPI	SPI mode
	UART	UART mode
	CAN	CAN mode
	LIN	LIN mode
Example	:TRIGger:BUS:TYPe? UART	

:TRIGger:BUS:THReshold:CH<x> → Set / → Query

Description	Sets or queries the threshold level for the selected channel.	
Syntax	:TRIGger:BUS:THReshold:CH<X> {<NR3> | ?}	
	<X>	CH1 ~ CH4
	<NR3>	Threshold level
Return Parameter	<NR3>	Returns the threshold level
Example	:TRIGger:BUS:THReshold:CH1 1 Sets the CH1 threshold to 1V.	

:TRIGger:BUS:B1:I2C:CONDition → Set / → Query

Description	Sets or queries the I²C trigger conditions.

Syntax	:TRIGger:BUS:B1:I2C:CONDition {STARt | STOP | REPEATstart | ACKMISS | ADDRess | DATA | ADDRANDDATA | ? }	
Parameter	STARt	Set Start as the I²C trigger condition.
	STOP	Set Stop as the I²C trigger condition.
	REPEATstart	Set Repeat of Start as the I²C trigger condition.
	ACKMISS	Set Missing Acknowledgement as the I²C trigger condition.
	ADDRess	Set Address as the I²C trigger condition.
	DATA	Set Data as the I²C trigger condition.
	ADDRANDDATA	Set Address and Data as the I²C trigger condition.
Return parameter	Returns the I²C bus trigger condition.	
Example	:TRIGger:BUS:B1:I2C:CONDition ADDRess Set Address as the I2C trigger condition.	

:TRIGger:BUS:B1:I2C:ADDRess:MODe

Set → / → Query

Description	Sets or queries the I²C addressing mode (7 or 10 bits).	
Syntax	:TRIGger:BUS:B1:I2C:ADDRess:MODe {ADDR7 | ADDR10 | ? }	
Related commands	:TRIGger:BUS:B1:I2C:CONDition	
Parameter	ADDR7	7 bit addressing
	ADDR10	10 bit addressing
Return Parameter	0	7 bit addressing

	1	10 bit addressing
Example	:TRIGger:BUS:B1:I2C:ADDRess:MODe? 0 The addressing mode is currenty set to 7 bits.	

:TRIGger:BUS:B1:I2C:ADDRess:TYPe

Set → / → Query

Description	Sets the I²C bus address type, or queries what the setting is.	
Syntax	:TRIGger:BUS:B1:I2C:ADDRess:TYPe {GENeralcall | STARtbyte | HSmode | EEPROM | CBUS | ?}	
Related commands	:TRIGger:BUS:B1:I2C:CONDition	
Parameter	GENeralcall	Set a general call address (0000 000 0).
	STARtbyte	Set a start byte address. (0000 000 1)
	HSmode	Set a high-speed mode address. (0000 1xx x)
	EEPROM	Set an EEPROM address. (1010 xxx x)
	CBUS	Set a CBUS address. (0000 001 x)
Return Parameter	Returns the address type	
Example	:TRIGger:BUS:B1:I2C:ADDRess:TYPe? CBUS	

:TRIGger:BUS:B1:I2C:ADDRess:VALue

Set → / → Query

Description	Sets or queries the I²C bus address value when the I²C bus is set to trigger on Address or Address/Data.
Syntax	:TRIGger:BUS:B1:I2C:ADDRess:VALue {<string> | ? }
Related commands	:TRIGger:BUS:B1:I2C:ADDRess:MODe

Parameter	<sting>	7/10 characters, must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the address value.	
Example1	:TRIGger:BUS:B1:I2C:ADDRess:MODe ADDR7 :TRIGger:BUS:B1:I2C:ADDRess:VALue "xxx0101" Sets the address to XXX0101	
Example 2	:TRIGger:BUS:B1:I2C:ADDRess:VALue? XXX0101	

:TRIGger:BUS:B1:I2C:ADDRess:DIRection

Set → Query

Description	Sets or queries the address bit as read write or don't care.	
Note	This setting only applies when the I²C trigger is set to trigger on Address or Address/Data	
Syntax	:TRIGger:BUS:B1:I2C:ADDRess:DIRection { READ | WRITE | NOCARE | ? }	
Related commands	:TRIGger:BUS:B1:I2C:CONDition	
Parameter	READ	Set read as the data direction.
	WRITE	Set write as the data direction.
	NOCARE	Set either as the data direction.
Return Parameter	Returns the direction (READ, WRITE, NOCARE).	
Example	:TRIGger:BUS:B1:I2C:ADDRess:DIRection READ Sets the direction to READ.	

:TRIGger:BUS:B1:I2C:DATa:SIZe

Set → Query

Description	Sets or queries the data size in bytes for the I²C bus.	
Note	This setting only applies when the I²C trigger is set to trigger on Data or Address/Data	
Syntax	:TRIGger:BUS:B1:I2C:DATa:SIZe {<NR1> | ? }	
Related commands	:TRIGger:BUS:B1:I2C:CONDition	
Parameter	<NR1>	Number of data bytes (1 to 5).
Return parameter	<NR1>	Returns the number of bytes.
Example	:TRIGger:BUS:B1:I2C:DATa:SIZe 3 Sets the number of bytes to 3.	

:TRIGger:BUS:B1:I2C:DATa:VALue

Set / Query

Description	Sets or queries the triggering data value for the I²C bus when the I²C bus is set to trigger on Data or Address/Data.	
Syntax	:TRIGger:BUS:B1:I2C:DATa:VALue {<string> | ? }	
Related commands	:TRIGger:BUS:B1:I2C:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:TRIGger:BUS:B1:I2C:DATa:SIZe 1 :TRIGger:BUS:B1:I2C:DATa:VALue "1x1x0101" Sets the value to XXX0101	

Example 2	:TRIGger:BUS:B1:I2C:DATa:VALue? 1X1X0101

:TRIGger:BUS:B1:UART:CONDition

Set → / → Query

Description	Sets or queries the UART triggering condition.	
Syntax	:TRIGger:BUS:B1:UART:CONDition { RXSTArt | RXDATA | RXENDPacket | TXSTArt | TXDATA | TXENDPacket | TXPARItyerr | RXPARItyerr | ? }	
Parameter	RXSTArt	Set trigger on the RX Start Bit.
	RXDATA	Set trigger on RX Data.
	RXENDPacket	Set trigger on the RX End of Packet condition.
	RXPARItyerr	Set trigger on RX Parity error condition.
	TXSTArt	Set trigger on the TX Start Bit.
	TXDATA	Set trigger on TX Data.
	TXENDPacket	Set trigger on the TX End of Packet condition.
	TXPARItyerr	Set trigger on TX Parity error condition.
Return Parameter	Returns the triggering condition.	
Example	:TRIGger:BUS:B1:UART:CONDition TXDATA Sets the UART bus to trigger on Tx Data.	

:TRIGger:BUS:B1:UART:RX:DATa:SIZe

Set → / → Query

Description	Sets or queries the number of bytes for UART data.
Note	This setting only applies when the UART trigger is set to trigger on Rx Data
Syntax	:TRIGger:BUS:B1:UART:RX:DATa:SIZe {<NR1> | ?}

Related commands	:TRIGger:BUS:B1:UART:CONDition	
Parameter	<NR1>	Number of bytes (1 to 10).
Return parameter	<NR1>	Returns the number of bytes.
Example	:TRIGger:BUS:B1:UART:RX:DATa:SIZe 5 Sets the number of bytes to 5.	

:TRIGger:BUS:B1:UART:RX:DATa:VALue

Set / Query

Description	Sets or queries the triggering data value for the UART bus when the bus is set to trigger on Rx Data.	
Syntax	:TRIGger:BUS:B1:UART:RX:DATa:VALue {<string> | ? }	
Related commands	:TRIGger:BUS:B1:UART:RX:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:TRIGger:BUS:B1:UART:CONDition RXDATA :TRIGger:BUS:B1:UART:RX:DATa:SIZe 1 :TRIGger:BUS:B1:UART:RX:DATa:VALue "1x1x0101" Sets the value to 1x1x0101	
Example 2	:TRIGger:BUS:B1:UART:RX:DATa:VALue? 1X1X0101	

:TRIGger:BUS:B1:UART:TX:DATa:SIZe

Set / Query

Description	Sets or queries the number of bytes for UART data.	
Note	This setting only applies when the UART trigger is set to trigger on Tx Data	
Syntax	:TRIGger:BUS:B1:UART:TX:DATa:SIZe {<NR1> | ?}	
Related commands	:TRIGger:BUS:B1:UART:CONDition	
Parameter	<NR1>	Number of bytes (1 to 10).
Return parameter	<NR1>	Returns the number of bytes.
Example	:TRIGger:BUS:B1:UART:TX:DATa:SIZe 5 Sets the number of bytes to 5.	

:TRIGger:BUS:B1:UART:TX:DATa:VALue

Set / Query

Description	Sets or queries the triggering data value for the UART bus when the bus is set to trigger on Tx Data.	
Syntax	:TRIGger:BUS:B1:UART:TX:DATa:VALue {<string> | ? }	
Related commands	:TRIGger:BUS:B1:UART:TX:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:TRIGger:BUS:B1:UART:CONDition TXDATA :TRIGger:BUS:B1:UART:TX:DATa:SIZe 1 :TRIGger:BUS:B1:UART:TX:DATa:VALue "1x1x0101" Sets the value to 1x1x0101	

Example 2	:TRIGger:BUS:B1:UART:TX:DATa:VALue? 1X1X0101

:TRIGger:BUS:B1:SPI:CONDition

Set
Query

Description	Sets or queries the SPI triggering condition.	
Syntax	:TRIGger:BUS:B1:SPI:CONDition {SS | MISO | MOSI | MISOMOSI | ? }	
Parameter	SS	Set to trigger on the Slave Selection condition.
	MISO	Set to trigger on the Master-In Slave-Out condition.
	MOSI	Set to trigger on the Master-Out Slave-In condition.
	MISOMOSI	Set to trigger on the Master-In Slave-Out and Master-Out Slave-In conditions.
Return Parameter	Returns the triggering condition.	
Example	:TRIGger:BUS:B1:SPI:CONDition MISO Sets the SPI bus to trigger on MISO.	

:TRIGger:BUS:B1:SPI:DATa:SIZe

Set
Query

Description	Sets or queries the number of words for SPI data.	
Note	This setting only applies when the SPI trigger is set to trigger on MISO, MOSI or MISO/MOSI	
Syntax	:TRIGger:BUS:B1:SPI:DATa:SIZe {<NR1> | ?}	
Related commands	:TRIGger:BUS:B1:SPI:CONDition	
Parameter	<NR1>	Number of words (1 to 32).
Return parameter	<NR1>	Returns the number of words.

Example	:TRIGger:BUS:B1:SPI:DATa:SIZe 10 Sets the number of words to 10.

:TRIGger:BUS:B1:SPI:DATa:MISO:VALue

Set → / → Query

Description	Sets or queries the triggering data value for the SPI bus when the bus is set to trigger on MISO or MISO/MOSI.	
Syntax	:TRIGger:BUS:B1:SPI:DATa:MISO:VALue {<string> | ? }	
Related commands	:TRIGger:BUS:B1:SPI:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:TRIGger:BUS:B1:SPI:CONDition MISO :TRIGger:BUS:B1:SPI:DATa:SIZe 2 :TRIGger:BUS:B1:SPI:DATa:MISO:VALue "1x1x0101" Sets the value to 1x1x0101	
Example 2	:TRIGger:BUS:B1:SPI:DATa:MISO:VALue? 1X1X0101	

:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue

Set / Query

Description	Sets or queries the triggering data value for the SPI bus when the bus is set to trigger on MOSI or MISO/MOSI.	
Syntax	:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue {<string> | ? }	
Related commands	:TRIGger:BUS:B1:SPI:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:TRIGger:BUS:B1:SPI:CONDition MOSI :TRIGger:BUS:B1:SPI:DATa:SIZe 2 :TRIGger:BUS:B1:SPI:DATa:MOSI:VALue "1x1x0101" Sets the value to 1x1x0101	
Example2	:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue? 1X1X0101	

:TRIGger:BUS:B1:CAN:CONDition

Set / Query

Description	Sets or returns the CAN trigger condition.	
Syntax	:TRIGger:BUS:B1:CAN:CONDition {SOF|FRAMEtype|IDentifier|DATA|IDANDDATA|EOF|ACKMISS|STUFFERR|?}	
Parameter/	SOF	Triggers on a start of frame

Return parameter	FRAMEtype	Triggers on the type of frame
	Identifier	Triggers on a matching identifier
	DATA	Triggers on matching data
	IDANDDATA	Triggers on matching identifier and data field
	EOF	Triggers on the end of frame
	ACKMISS	Triggers on a missing acknowledge
	STUFFERR	Triggers on a bit stuffing error
Example1	:TRIGger:BUS:B1:CAN:CONDition SOF Triggers on a start of frame.	
Example2	:TRIGger:BUS:B1:CAN:CONDition? >SOF	

:TRIGger:BUS:B1:CAN:FRAMEtype

Set → / → Query

Description	Sets or returns the frame type for a CAN FRAMEType trigger.	
Syntax	:TRIGger:BUS:B1:CAN:FRAMEtype {DATA|REMote|ERRor|OVERLoad|?}	
Parameter/ Return parameter	DATA	Sets the frame type to data frame
	REMote	Sets the frame type to remote frame
	ERRor	Sets the frame type to error frame
	OVERLoad	Sets the frame type to overload
Example	:TRIGger:BUS:B1:CAN:FRAMEtype DATA Sets the frame type to DATA.	

:TRIGger:BUS:B1:CAN:IDentifier:MODe

Set → / → Query

Description	Sets or returns the CAN identifier mode for the bus.

Syntax	:TRIGger:BUS:B1:CAN:IDentifier:MODe {STANDard|EXTended|?}	
Parameter/ Return parameter	STANDard	Standard addressing mode
	EXTended	Extended addressing mode
Example	:TRIGger:BUS:B1:CAN:IDentifier:MODe? >STANDARD Returns the addressing mode.	

:TRIGger:BUS:B1:CAN:IDentifier:VALue

Set → / → Query

Description	Sets or returns the identifier string used for the CAN trigger. Note: Only applicable when the trigger condition is set to ID or IDANDDATA.	
Syntax	:TRIGger:BUS:B1:CAN:IDentifier:VALue {<string>|?}	
Related Commands	:TRIGger:BUS:B1:CAN:IDentifier:MODe	
Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:CAN:CONDition ID :TRIGger:BUS:B1:CAN:IDentifier:MODe STANDARD :TRIGger:BUS:B1:CAN:IDentifier:VALue "01100X1X01X" :TRIGger:BUS:B1:CAN:IDentifier:VALue? >01100X1X01X	

:TRIGger:BUS:B1:CAN:IDentifier:DIRection

Set / Query

Description	Sets or queries the address bit as read, write or don't care.	
Syntax	:TRIGger:BUS:B1:CAN:IDentifier:DIRection {READ|WRITE|NOCARE|?}	
Parameter/ Return parameter	READ	Sets read as the data direction
	WRITE	Sets write as the data direction
	NOCARE	Sets either as the data direction
Example1	:TRIGger:BUS:B1:CAN:IDentifier:DIRection? >WRITE	
Example2	:TRIGger:BUS:B1:CAN:IDentifier:DIRection READ :TRIGger:BUS:B1:CAN:IDentifier:DIRection? > READ	

:TRIGger:BUS:B1:CAN:DATa:QUALifier

Set / Query

Description	Sets or returns the CAN data qualifier. Note: Only applicable when the triggering condition is set to DATA or IDANDDATA.	
Syntax	:TRIGger:BUS:B1:CAN:DATa:QUALifier {LESSthan|MOREthan|EQual|UNEQual|LESSEQual|MOREEQual|?}	
Parameter/ Return parameter	LESSthan	Triggers when the data is less than the qualifier value.
	MOREthan	Triggers when the data is greater than the qualifier value.
	EQual	Triggers when the data is equal to the qualifier value.
	UNEQual	Triggers when the data is not equal to the qualifier value.

	LESSEQual	Triggers when the data is less than or equal to the qualifier value.
	MOREEQual	Triggers when the data is more than or equal to the qualifier value.
Example	:TRIGger:BUS:B1:CAN:DATa:QUALifier? >EQUAL :TRIGger:BUS:B1:CAN:DATa:QUALifier MOREthan :TRIGger:BUS:B1:CAN:DATa:QUALifier? >MOREthan	

:TRIGger:BUS:B1:CAN:DATa:SIZe

Set / Query

Description	Sets or returns the length of the data string in bytes for a CAN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA.	
Syntax	:TRIGger:BUS:B1:CAN:DATa:SIZe {<NR1>|?}	
Parameter/ Return parameter	<NR1>	1~8 (bytes)
Example	:TRIGger:BUS:B1:CAN:DATa:SIZe? >1 :TRIGger:BUS:B1:CAN:DATa:SIZe 2 :TRIGger:BUS:B1:CAN:DATa:SIZe? >2	

:TRIGger:BUS:B1:CAN:DATa:VALue

Set / Query

Description	Sets or returns the binary data string to be used for a CAN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA.
Related Commands	:TRIGger:BUS:B1:CAN:DATa:SIZe
Syntax	:TRIGger:BUS:B1:CAN:DATa:VALue {<string>|?}

Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:CAN:DATa:SIZe 1 :TRIGger:BUS:B1:CAN:DATa:VALue "01010X1X" :TRIGger:BUS:B1:CAN:DATa:VALue? >01010X1X	

:TRIGger:BUS:B1:LIN:CONDition

Set / Query

Description	Sets or returns the LIN trigger condition.	
Syntax	:TRIGger:BUS:B1:LIN:CONDition {SYNCField|IDentifier|DATA|IDANDDATA|WAKEup|SLEEP|ERRor|?}	
Parameter/ Return parameter	SYNCField	Sets the LIN trigger condition to the sync field.
	IDentifier	Sets the LIN trigger condition to identifier field.
	DATA	Sets the LIN trigger condition to the data field.
	IDANDDATA	Sets the LIN trigger condition to identifier and data field
	WAKEup	Sets the LIN trigger condition to wake up.
	SLEEP	Sets the LIN trigger condition to sleep.
	ERRor	Sets the LIN trigger condition to error.

Example :TRIGger:BUS:B1:LIN:CONDition?
>IDANDDATA

:TRIGger:BUS:B1:LIN:CONDition DATA

:TRIGger:BUS:B1:LIN:CONDition?
>DATA

:TRIGger:BUS:B1:LIN:DATa:QUALifier

Set → / → Query

Description	Sets or returns the LIN data qualifier. Note: Only applicable when the trigger condition is set to DATA or IDANDDATA.	
Syntax	:TRIGger:BUS:B1:LIN:DATa:QUALifier {LESSthan|MOREthan|EQual|UNEQual|LESSEQual|MOREEQual|?}	
Parameter/ Return parameter	LESSthan	Triggers when the data is less than the qualifier value.
	MOREthan	Triggers when the data is greater than the qualifier value.
	EQual	Triggers when the data is equal to the qualifier value.
	UNEQual	Triggers when the data is not equal to the qualifier value.
	LESSEQual	Triggers when the data is less than or equal to the qualifier value.
	MOREEQual	Triggers when the data is more than or equal to the qualifier value.
Example	:TRIGger:BUS:B1:LIN:DATa:QUALifier? >EQUAL :TRIGger:BUS:B1:LIN:DATa:QUALifier MOREthan :TRIGger:BUS:B1:LIN:DATa:QUALifier? >MORETHAN	

:TRIGger:BUS:B1:LIN:DATa:SIZe

Set → / → Query

Description	Sets or returns the length of the data string in bytes for the LIN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA.
Syntax	:TRIGger:BUS:B1:LIN:DATa:SIZe {<NR1>|?}

Parameter/ Return parameter	<NR1>	1~8 (bytes)
Example	:TRIGger:BUS:B1:LIN:DATa:SIZe? >1 :TRIGger:BUS:B1:LIN:DATa:SIZe 2 :TRIGger:BUS:B1:LIN:DATa:SIZe? >2	

:TRIGger:BUS:B1:LIN:DATa:VALue

Set / Query

Description	Sets or returns the binary data string to be used for the LIN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA.
Related Commands	:TRIGger:BUS:B1:LIN:DATa:SIZe
Syntax	:TRIGger:BUS:B1:LIN:DATa:VALue {<string>|?}

Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:LIN:DATa:SIZe 1 :TRIGger:BUS:B1:LIN:DATa:VALue "01010X1X" :TRIGger:BUS:B1:LIN:DATa:VALue? >01010X1X	

:TRIGger:BUS:B1:LIN:ERRTYPE

Set / Query

Description	Sets or returns the error type be used for the LIN trigger.

Syntax	:TRIGger:BUS:B1:LIN:ERRTYPE {SYNC|PARIty|CHecksum|?}	
Parameter/ Return parameter	SYNC	Sets the LIN error type to SYNC.
	PARIty	Sets the LIN error type to parity.
	CHecksum	Sets the LIN error type to checksum.
Example	:TRIGger:BUS:B1:LIN:ERRTYPE? >SYNC	
	:TRIGger:BUS:B1:LIN:ERRTYPE CHECKSUM	
	:TRIGger:BUS:B1:LIN:ERRTYPE? >CHECKSUM	

:TRIGger:BUS:B1:LIN:IDentifier:VALue

Set / Query

Description	Sets or returns the identifier string to be used for the LIN trigger. Note: Only applicable when the condition is set to ID or IDANDDATA.	
Syntax	:TRIGger:BUS:B1:LIN:IDentifier:VALue {<string>|?}	
Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:LIN:CONDition ID	
	:TRIGger:BUS:B1:LIN:IDentifier:VALue "00X1X01X"	
	:TRIGger:BUS:B1:LIN:IDentifier:VALue? >01100X1X01X	

System Commands

:SYSTem:LOCK 157
:SYSTem:ERRor.....157

:SYSTem:LOCK

Set
Query

Description	Turns the panel lock on off.	
Syntax	:SYSTem:LOCK {OFF | ON | ? }	
Parameter	OFF	System lock off
	ON	System lock on
Return parameter	Returns the status of the panel lock (ON, OFF).	
Example	:SYSTem:LOCK ON Turns the panel lock on.	

:SYSTem:ERRor

Set
Query

Description	Queries the error queue. See the appendix on page 244 for details.
Syntax	:SYSTem:ERRor?
Return parameter	Returns the last message in the error queue.
Example	:SYSTem:ERRor? +0, “No error.”

Save/Recall Commands

:RECAll:SETUp 158
:RECAll:WAVEform 158
:SAVe:IMAGe 159
:SAVe:IMAGe:FILEFormat 159
:SAVe:IMAGe:INKSaver 160
:SAVe:SETUp 160
:SAVe:WAVEform 161
:SAVe:WAVEform:FILEFormat 162

:RECAll:SETUp

Set →

Description	Recalls setup settings from memory or USB.	
Syntax	:RECAll:SETUp {S1~S20 | <file path>("Disk:/xxx.SET","USB:/xxx.SET")}	
Parameter	S1~S20	Recall Set1~Set20
	<file path>	Recall a file from the DSO internal files system or from a USB flash drive.
Example	:RECAll:SETUp S1 Recalls setup setting S1 from memory. :RECAll:SETUp "Disk:/DS0001.SET" Recall the setup setting DS0001.SET from the internal memory.	

:RECAll:WAVEform

Set →

Description	Recalls a waveform from wave1~wave20 or from file to REF1~4.
Note	Detail CSV files cannot be recalled.
Syntax	:RECAll:WAVEform {W<n> | <file path> ("Disk:/xxx.LSF","USB:/xxx.LSF")},REF<X>

Parameter	n	1~20 (Wave1~wave20)
	<file page>	Filename in file path. Example: “Disk:/xxx.LSF”,”USB:/xxx.LSF”, “Disk:/xxx.CSV”,”USB:/xxx.CSV”
	<X>	1,2,3,4 (REF1, REF2, REF3, REF4)
Example	:RECAll:WAVEform W1, REF1 Recalls the waveform stored in Wave1 to reference 1.	

:SAVe:IMAGe

Set →

Description	Saves a screen image to the assigned file path with a specified filename.
Syntax	:SAVe:IMAGe {<file path> (“Disk:/xxx.PNG”, “USB:/xxx.BMP)}
Related commands	:SAVe:IMAGe:FILEFormat :SAVe:IMAGe:INKSaver
Parameter	xxx.PNG or xxx.BMP — File name (8 characters max)
Example	:SAVe:IMAGe “Disk:/pic1.PNG” Saves a screen image named pic1.png to the root directory (Disk:/) of the scope. :SAVe:IMAGe “USB:/pic1.BMP” Saves a screen image named pic1.bmp to the root directory of the external USB flash disk.

:SAVe:IMAGe:FILEFormat

Set →
→ Query

Description	Sets the file format for image.
Syntax	:SAVe:IMAGe:FILEFormat {PNG | BMP | ?}
Related commands	:SAVe:IMAGe :SAVe:IMAGe:INKSaver

Parameter	PNG	Sets the file format to PNG
	BMP	Sets the file format to BMP
Return parameter	Returns the file format (PNG, BMP).	
Example	:SAVe:IMAGe:FILEFormat PNG Sets the image file format to PNG.	

:SAVe:IMAGe:INKSaver

Set → / → Query

Description	Turns Ink Saver on or off.	
Syntax	:SAVe:IMAGe:INKSaver {OFF | ON |?}	
Related commands	:SAVe:IMAGe :SAVe:IMAGe:FILEFormat	
Parameter	OFF	Turns Inksaver off.
	ON	Turns Inksaver on.
Return parameter	Returns Ink Saver status (ON, OFF).	
Example	:SAVe:IMAGe:INKSaver ON Turns Ink Saver on.	

:SAVe:SETUp

Set →

Description	Saves the current setup to internal memory (Set1~Set20) or the designated file path.	
Syntax	:SAVe:SETUp {<file path> (“Disk:/xxx.SET”, “USB:/xxx.SET) | S1~S20}	
Parameter	S1~S20	Saves the setup to Set1~Set20
	File path	Saves the setup to disk to the specified file path.

Example	:SAVe:SETUp S1 Saves the current setup to Set1 in internal memory. :SAVe:SETUp "Disk:/DS0001.SET" Saves the current setup to DS0001.SET in the root directory of the internal memory.

:SAVe:WAVEform

Set

Description	Saves a waveform to internal memory or to a designated file path.	
Related commands	:SAVe:WAVEform:FILEFormat	
Syntax	:SAVe:WAVEform {CH1~REF4, REF<X> } | {CH1~REF4, W1~W20} | {CH1~ALL, file path}	
Parameter	CH1~REF4,	CH1~CH4, Math, REF1~4
	<X>	1,2,3,4 (REF1, REF2, REF3, REF4)
	W1~W20	Wave1~Wave20
	ALL	All the displayed waveforms on screen.
	File path	Saves the waveform(s) to disk or USB to the specified file path. (LSF or CSV, but note that detail CSV can't be recalled to the scope.)
Example 1	:SAVe:WAVEform CH1, REF2 Saves the channel1 waveform to REF2.	
Example 2	:SAVe:WAVEform:FILEFormat LSF :SAVe:WAVEform ALL, "Disk:/ALL001" Sets the file format to LSF. A folder named "ALL001" is created and saves all displayed waveforms to the "ALL001" directory in the LSF format.	

Example 3	:SAVe:WAVEform:FILEFormat FCSV :SAVe:WAVEform ALL, "Disk:/ALL002" Sets the file format to FCSV(fast CSV format). It then saves the all channel's waveforms to the root directory (Disk:/) of the internal flash disk in the CSV format (with the filename ALL002.CSV).
Example 4	:SAVe:WAVEform:FILEFormat LSF :SAVe:WAVEform CH2, "Disk:/DS0003.LSF" Save the channel 2's waveform to the root directory (Disk:/) of the internal flash disk in the LSF format with DS0003.LSF as the filename.

:SAVe:WAVEform:FILEFormat



Description	Sets the waveform savefile format.	
Syntax	:SAVe:WAVEform:FILEFormat {LSF | DCSV | FCSV | ?}	
Parameter	LSF	Sets the file format to the GDS 2000E's internal file format, LSF. (xxx.LSF) (no support LA)
	DCSV	Sets the file format to detail CSV. (xxx.CSV)
	FCSV	Sets the file format to fast CSV. (xxx.CSV)
Return parameter	Returns the file format (LSF , DCSV, FCSV).	
Example	:SAVe:WAVEform:FILEFormat LSF Sets the file format to LSF.	

Ethernet Commands

:ETHERnet:DHCP 163

:ETHERnet:DHCP

Set
Query

Description	Sets or queries the DHCP settings.	
Syntax	:ETHERnet:DHCP { OFF | ON | ? }	
Parameter	ON	Turns DHCP on.
	OFF	Turns DHCP off.
Example	:ETHERnet:DHCP ON Turns DHCP on.	

Time Commands

:DATe 164

:DATe

Set

Description	Sets the system date and time.	
Syntax	:DATe {<string>}	
Parameter	<string>	"YYYYMMDDhhmmss" Where: YYYY: year MM: month DD: day hh: hour mm: minute ss: second
Example	:DATe "20140802142830" Sets the time and date as: Year: 2014, Month: 08, Day: 02, Hour: 14 (2PM), Minute: 28, Second: 30.	

Bus Decode Commands

:BUS1 166
:BUS1:STATE 166
:BUS1:TYPe 166
:BUS1:INPut 167
:BUS1:I2C:ADDRess:RWINClude 167
:BUS1:I2C:SCLK:SOURce 168
:BUS1:I2C:SDA:SOURce 168
:BUS1:UART:BITRate 168
:BUS1:UART:DATABits 169
:BUS1:UART:PARIty 169
:BUS1:UART:PACKEt 170
:BUS1:UART:POLARity 170
:BUS1:UART:EOFPAcket 170
:BUS1:UART:TX:SOURce 171
:BUS1:UART:RX:SOURce 171
:BUS1:SPI:SCLK:POLARity 172
:BUS1:SPI:SS:POLARity 172
:BUS1:SPI:WORDSize 172
:BUS1:SPI:BITORder 173
:BUS1:SPI:SCLK:SOURce 173
:BUS1:SPI:SS:SOURce 173
:BUS1:SPI:MOSI:SOURce 174
:BUS1:SPI:MISO:SOURce 174
:BUS1:DISPlay:FORMAt 174
:LISTer:DATA 175
:BUS1:CAN:SOURce 175
:BUS1:CAN:PROBe 175
:BUS1:CAN:SAMPLEpoint 176
:BUS1:CAN:BITRate 176
:BUS1:LIN:BITRate 177
:BUS1:LIN:IDFORmat 177
:BUS1:LIN:POLARity 177

:BUS1:LIN:SAMPLEpoint 178
:BUS1:LIN:SOURce 178
:BUS1:LIN:STANDard 178

:BUS1

Query

Description	Returns the supported BUS types.
Syntax	:BUS1?
Return Parameter	Returns the supported bus types.
Example	BUS1? I2C,SPI,UART, CAN, LIN

:BUS1:STATE

Set / Query

Description	Sets or queries the state of the bus.	
Syntax	:BUS1:STATE { OFF | ON | ? }	
Related commands	:BUS1:TYPe	
Parameter/Return parameter	OFF	Turns the bus off.
	ON	Turns the bus on.
Example	:BUS1:STATE ON Turns the bus on.	

:BUS1:TYPe

Set / Query

Description	Sets or queries the type of bus.	
Syntax	:BUS1:TYPe { UART | I2C | SPI | CAN | LIN | ? }	
Related commands	:BUS1:STATE	
Parameter/Return parameter	UART	Sets the bus to UART mode.
	I2C	Sets the bus to I^2C mode.

	SPI	Sets the bus to SPI mode.
	CAN	Sets the bus to CAN mode.
	LIN	Sets the bus to LIN mode.
Example	:BUS1:TYPe SPI Sets the bus to SPI mode.	

:BUS1:INPut

Set / Query

Description	Sets or returns the analog source.	
Syntax	:BUS1:INPut {ANAlog | ?}	
Parameter/Return parameter	ANAlog	Sets the source to the analog inputs.
Example1	:BUS1:INPut? >ANALOG	

:BUS1:I2C:ADDRess:RWINClude

Set / Query

Description	Sets or queries whether the read/write bit is included in the I²C address.	
Syntax	:BUS1:I2C:ADDRess:RWINClude { OFF | ON | ? }	
Related commands	:BUS1:STATE	
Parameter	OFF	The R/W bit is not included.
	ON	The R/W bit is included.
Return parameter	0	The R/W bit is not included.
	1	The R/W bit is included.
Example	:BUS1:I2C:ADDRess:RWINClude ON Includes the R/W bit in the I²C address.	

:BUS1:I2C:SCLK:SOURce

Set → / → Query

Description	Sets or queries which channel is used for the I²C SCLK source.
Syntax	:BUS1:I2C:SCLK:SOURce { CH1 | CH2 | CH3 | CH4 | ? }
Parameter/Return parameter	CH1 to CH4 Analog channels 1 ~ 4.
Example	:BUS1:I2C:SCLK:SOURce CH1 Sets channel 1 as the SCLK source.

:BUS1:I2C:SDA:SOURce

Set → / → Query

Description	Sets or queries which channel is used for the I²C SDA source.
Syntax	:BUS1:I2C:SDA:SOURce { CH1 | CH2 | CH3 | CH4 | ? }
Parameter/Return parameter	CH1 to CH4 Analog channels 1 ~ 4.
Example	:BUS1:I2C:SDA:SOURce CH1 Sets channel 1 as the SDA source.

:BUS1:UART:BITRate

Set → / → Query

Description	Sets or queries the UART bit rate.			
Syntax	:BUS1:UART:BITRate {<NR1>| ? }			
Parameter/Return parameter	<NR1>	UART bit rate (0~31)		
		<NR1>	Rate (bps)	<NR1> Rate (bps)
		0	50	16 15200
		1	75	17 19200
		2	110	18 28800
		3	134	19 31250

4	150	20	38400
5	300	21	56000
6	600	22	57600
7	1200	23	76800
8	1800	24	115200
9	2000	25	128000
10	2400	26	230400
11	3600	27	460800
12	4800	28	921600
13	7200	29	1382400
14	9600	30	1843200
15	14400	31	2764800

Example :BUS1:UART:BITRate 10

Sets the bit rate to 2400.

:BUS1:UART:DATABits

Set → Query

Description	Sets or queries the number UART data for bus 1.	
Syntax	:BUS1:UART:DATABits { 5 | 6 | 7 | 8 | 9 | ? }	
Parameter/Return parameter	5	5 data bits in the UART frame.
	6	6 data bits in the UART frame.
	7	7 data bits in the UART frame.
	8	8 data bits in the UART frame.

Example :BUS1:UART:DATABits 7

Sets the UART frame to 7 bits.

:BUS1:UART:PARIty

Set → Query

Description	Sets or queries the UART bus parity.
Syntax	:BUS1:UART:PARIty { <NR1> | ? }

Parameter/Return parameter	<NR1>	0: None 1: Odd parity 2: Even parity
Example	:BUS1:UART:PARIty 1 Sets the parity to odd.	

:BUS1:UART:PACKEt

Set →
→ Query

Description	Sets or queries the UART packet setting.	
Syntax	:BUS1:UART:PACKEt {<NR1> | ? }	
Parameter/Return parameter	<NR1>	0: Off 1: On
Example	:BUS1:UART:PACKEt 1 Turns UART packets on.	

:BUS1:UART:POLARity

Set →
→ Query

Description	Sets or returns the UART polarity.	
Syntax	:BUS1:UART: POLARity {NORMal|INVerted} :BUS1:UART: POLARity?	
Parameter	NORMal	Sets normal UART polarity.
	INVerted	Sets inverted UART polarity.
Example	:BUS1:UART:POLARity NORMal :BUS1:UART:POLARity? NORMAL	

:BUS1:UART:EOFPAcket

Set →
→ Query

Description	Sets or queries the EOF character for the UART packet setting.
Syntax	:BUS1:UART:EOFPAcket <NR1>

Parameter/Return parameter	<NR1>	0: NULL 1: LF (line feed) 2: CR (carriage return) 3: SP (space character) 4: FF
Example	:BUS1:UART:EOFPAcket 2 Sets the OEF character to CR.	

:BUS1:UART:TX:SOURce

Set → / → Query

Description	Sets or queries which channel is used for the UART Tx source.	
Syntax	:BUS1:UART:TX:SOURce { OFF | CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	OFF	Off, no Tx source
	CH1 to CH4	Analog channels CH1 to CH4
Example	:BUS1:UART:TX:SOURce CH1 Sets channel 1 as the Tx source.	

:BUS1:UART:RX:SOURce

Set → / → Query

Description	Sets or queries which channel is used for the UART Rx source.	
Syntax	:BUS1:UART:RX:SOURce { OFF | CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	OFF	Off, no Rx source
	CH1 to CH4	Analog channels CH1 to CH4
Example	:BUS1:UART:RX:SOURce CH1 Sets channel 1 as the Rx source.	

:BUS1:SPI:SCLK:POLARity

Set → / → Query

Description	Sets or queries the polarity of the SCLK line for the SPI bus.	
Syntax	:BUS1:SPI:SCLK:POLARity { FALL | RISE | ? }	
Parameter/Return parameter	FALL	Sets the polarity to falling edge.
	RISE	Sets the polarity to rising edge.
Example	:BUS1:SPI:SCLK:POLARity FALL Sets the polarity to falling edge.	

:BUS1:SPI:SS:POLARity

Set → / → Query

Description	Sets or queries the polarity of the SS line for the SPI bus.	
Syntax	:BUS1:SPI:SS:POLARity { LOW | HIGH | ? }	
Parameter/Return parameter	LOW	Active low polarity
	HIGH	Active high polarity
Example	:BUS1:SPI:SS:POLARity LOW Sets the SS line to active low.	

:BUS1:SPI:WORDSize

Set → / → Query

Description	Sets the number of bits per word for the SPI bus.	
Syntax	:BUS1:SPI:WORDSize {<NR1> | ? }	
Parameter/Return parameter	<NR1>	Bits per word (4~32)
Example	:BUS1:SPI:WORDSize 4 Sets the word size to 4 bits per word.	

:BUS1:SPI:BITORder

Set →
→ Query

Description	Sets or queries the bit order for the SPI bus.	
Syntax	:BUS1:SPI:BITORder {<NR1> | ? }	
Parameter/Return parameter	<NR1>	0: MSB bit first 1: LSB bit first
Example	:BUS1:SPI:BITORder? 0 The bit order is currently set as MSB bit first.	

:BUS1:SPI:SCLK:SOURce

Set →
→ Query

Description	Sets or queries which channel is used for the SPI SCLK source.	
Syntax	:BUS1:SPI:SCLK:SOURce { CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	CH1 to CH4	Analog channels CH1 to CH4
Example	:BUS1:SPI:SCLK:SOURce CH1 Sets channel 1 as the SPI SCLK source.	

:BUS1:SPI:SS:SOURce

Set →
→ Query

Description	Sets or queries which channel is used for the SPI SS source.	
Syntax	:BUS1:SPI:SS:SOURce { CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	CH1 to CH4	Analog channels CH1 to CH4
Example	:BUS1:SPI:SS:SOURce CH1 Sets channel 1 as the SPI SS source.	

:BUS1:SPI:MOSI:SOURce

Set → / → Query

Description	Sets or queries which channel is used for the SPI MOSI source.	
Syntax	:BUS1:SPI:MOSI:SOURce { OFF | CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	CH1 to CH4	Analog channels CH1 to CH4
	OFF	No MOSI source.
Example	:BUS1:SPI:MOSI:SOURce CH1 Sets channel 1 as the SPI MOSI source.	

:BUS1:SPI:MISO:SOURce

Set → / → Query

Description	Sets or queries which channel is used for the SPI MISO source.	
Syntax	:BUS1:SPI:MISO:SOURce { OFF | CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	CH1 to CH4	Analog channels CH1 to CH4
	OFF	No MISO source.
Example	:BUS1:SPI:MISO:SOURce CH1 Sets channel CH1 as the SPI MISO source.	

:BUS1:DISPlay:FORMAt

Set → / → Query

Description	Sets or queries the display format for the bus, either binary or hexadecimal.	
Syntax	:BUS1:DISPlay:FORMAt { BINary | HEXadecimal | ASCII | ? }	
Parameter/Return parameter	BINary	Binary format
	HEXadecimal	Hexadecimal format

Example	:BUS1:DISPlay:FORMAt BINary Sets the display format to binary.

:LISTer:DATA → Query

Description	Returns the Event Table data as a binary block data.
Syntax	:LISTer:DATA?
Return Parameter	Returns the event table as binary block data. The binary block data contains comma separated data with new lines at the end of each row.

:BUS1:CAN:SOURce → Set / → Query

Description	Sets or returns the CAN input source.	
Syntax	:BUS1:CAN:SOURce { CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	CH1 ~ CH4	Analog channel source
Example	:BUS1:CAN:SOURCE? >CH1 Returns the CAN source.	

:BUS1:CAN:PROBe → Set / → Query

Description	Sets or returns the signal type of the CAN bus.	
Syntax	:BUS1:CAN:PROBe {CANH | CANL | TX | RX | ? }	
Parameter/Return parameter	CANH	CAN-High
	CANL	CAN-Low
	TX	Transmit
	RX	Receive

Example	:BUS1:CAN:PROBe? >CANH :BUS1:CAN:PROBe CANL :BUS1:CAN:PROBe? >CANL

:BUS1:CAN:SAMPLEpoint → (Query)

Description	Returns the sample point of the CAN bus.
Syntax	:BUS1:CAN:SAMPLEpoint?
Return Parameter	Returns the sample point of the CAN bus as a percentage of the bit time.
Example	:BUS1:CAN:SAMPLEpoint? 50 Returns the sample point as a percentage.

:BUS1:CAN:BITRate (Set) → / → (Query)

Description	Sets or returns the bit rate of the CAN bus.
Syntax	:BUS1:CAN:BITRate {RATE10K|RATE20K|RATE50K|RATE125K|RATE250K|RATE500K|RATE800K|RATE1M | ?}

Parameter/Return parameter		
	RATE10K	10 kbps
	RATE20K	20 kbps
	RATE50K	50 kbps
	RATE125K	125 kbps
	RATE250K	250 kbps
	RATE500K	500 kbps
	RATE800K	800 kbps
	RATE1M	1 Mbps

Example	:BUS1:CAN:BITRate? >RATE250K :BUS1:CAN:BITRate rate10k :BUS1:CAN:BITRate? >RATE10K

:BUS1:LIN:BITRate

Set → / → Query

Description	Sets or returns the bit rate of the LIN bus.	
Syntax	:BUS1:LIN:BITRate {<NR1> | ?}	
Parameter/Return parameter	<NR1>	1200, 2400, 4800, 9600, 10417, 19200
Example	:BUS1:LIN:BITRate 9600 Sets the LIN bit rate to 9600 kbps.	

:BUS1:LIN:IDFORmat

Set → / → Query

Description	Sets or returns the LIN ID format.	
Syntax	:BUS1:LIN:IDFORmat {NOPARity|PARIty|?}	
Parameter/Return parameter	NOPARity	Don't include parity bits with Id.
	PARIty	Include parity bits with Id.
Example	:BUS1:LIN:IDFORmat? NOPARITY Returns the ID format.	

:BUS1:LIN:POLARity

Set → / → Query

Description	Sets or returns the LIN polarity.	
Syntax	:BUS1:LIN:POLARity {NORMal|INVerted|?}	
Parameter/Return parameter	NORMal	Normal LIN polarity
	INVerted	Inverted LIN polarity

Example	:BUS1:LIN:POLARity? NORMAL Returns the LIN polarity.

:BUS1:LIN:SAMPLEpoint → Query

Description	Returns the sample point.
Syntax	:BUS1:LIN:SAMPLEpoint?
Return Parameter	Returns the sample point of the LIN bus as a percentage.
Example	:BUS1:LIN:SAMPLEpoint? 50 Returns the sample point as a percentage.

:BUS1:LIN:SOURce Set → Query → Query

Description	Sets or returns the LIN data source.	
Syntax	:BUS1:LIN:SOURce {CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	CH1 ~ CH4	Analog channel source
Example	:BUS1:LIN:SOURCE? >CH1 Returns the LIN source.	

:BUS1:LIN:STANDard Set → Query → Query

Description	Sets or returns the LIN standard.	
Syntax	:BUS1:LIN:STANDard {V1X|V2X|BOTH|?}	
Parameter/Return parameter	V1X	Lin standard version 1.x
	V2X	Lin standard version 2.x
	BOTH	Both standards

Example :BUS1:LIN:STANDard?
>BOTH

Returns the LIN standard.

Mark Commands

:MARK 180
:MARK:CREATE 180
:MARK:DELEte 181

:MARK

Set

Description	Move to next or previous event mark.	
Syntax	:MARK { NEXT | PREVious }	
Related commands	:MARK:CREATE :MARK:DELEte	
Parameter	NEXT	Move to next mark
	PREVious	Move to previous mark
Example	:MARK NEXT Moves to the next event mark.	

:MARK:CREATE

Set

Description	Creates a mark on the waveform at the current position or creates a mark for all the events for the current waveform.	
Syntax	:MARK:CREATE { CURRent | ALL }	
Related commands	:MARK :MARK:DELEte	
Parameter	CURRent	Creates a mark at the current position
	ALL	Creates a mark for all the events.
Example	:MARK:CREATE CURRent Creates a mark at the current position.	

:MARK:DELEte

Set

Description	Deletes the current mark or all the marks on a waveform.	
Syntax	:MARK:DELEte { CURRent | ALL }	
Related commands	:MARK :MARK:CREATE	
Parameter	CURRent	Deletes the current mark
	ALL	Deletes all the marks
Example	:MARK:DELEte CURRent Deletes the current mark.	

Search Commands

:SEARCH:COPY 183
:SEARCH:STATE 184
:SEARCH:TOTAL 184
:SEARCH:TRIGger:TYPe 184
:SEARCH:TRIGger:SOURce....185
:SEARCH:TRIGger:EDGE:SLOP 185
:SEARCH:TRIGger:LEVel 186
:SEARCH:TRIGger:HLEVel 186
:SEARCH:TRIGger:LLEVel 187
:SEARCH:TRIGger:PULSEWidth:POLarity 187
:SEARCH:TRIGger:RUNT:POLarity....188
:SEARCH:TRIGger:RISEFall:SLOP 188
:SEARCH:TRIGger:PULSe:WHEn....189
:SEARCH:TRIGger:PULSe:TIMe....189
:SEARCH:TRIGger:RUNT:WHEn 190
:SEARCH:TRIGger:RUNT:TIMe 190
:SEARCH:TRIGger:RISEFall:WHEn 191
:SEARCH:TRIGger:RISEFall:TIMe 191
:SEARCH:TRIGger:BUS:TYPe....192
:SEARCH:TRIGger:BUS:B1:I2C:CONDition 192
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODe 193
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:TYPe 193
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue....194
:SEARCH:TRIGger:BUS:B1:I2C:ADDRess
:DIRection 195
:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIZe 195
:SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue 196
:SEARCH:TRIGger:BUS:B1:UART:CONDition....196
:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZe 197
:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue ..198
:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZe 199
:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue ..199
:SEARCH:TRIGger:BUS:B1:SPI:CONDition....200

:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe.....200
:SEARCH:TRIGger:BUS:B1:SPI:DATa:MISO
:VALue.....201
:SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI
:VALue.....202
:SEARCH:TRIGger:BUS:B1:CAN:CONDition 203
:SEARCH:TRIGger:BUS:B1:CAN:FRAMEtype.....204
:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe ..204
:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue ...205
:SEARCH:TRIGger:BUS:B1:CAN:IDentifier
:DIRection.....205
:SEARCH:TRIGger:BUS:B1:CAN:DATa:QUALifier....206
:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe 207
:SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue 207
:SEARCH:TRIGger:BUS:B1:LIN:CONDition 208
:SEARCH:TRIGger:BUS:B1:LIN:DATa:QUALifier 209
:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe 210
:SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue.....210
:SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE 211
:SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue.....212
:SEARCH:FFTPeak:METHod 212
:SEARCH:FFTPeak:METHod:MPEak.....213
:SEARCH:FFTPeak:SINFo.....214

:SEARCH:COPY

Set

Description	Copies the search settings to the trigger settings or copies the trigger settings to the search settings.	
Syntax	:SEARCH:COPY {SEARCHtotrigger|TRIGgertosearch}	
Parameter	SEARCHtotrigger	Copy the search setting to the trigger settings.
	TRIGgertosearch	Copy the trigger settings to the search settings.

Example	:SEARCH:COPY SEARCHtotrigger Copies the search settings to the trigger settings.

:SEARCH:STATE

Set → / → Query

Description	Sets or queries whether the Search function is on or off.	
Syntax	:SEARCH:STATE { OFF | ON | ? }	
Parameter/Return parameter	OFF	Turn the Search function on.
	ON	Turn the Search function off.
Example	:SEARCH:STATE ON Turn Search on.	

:SEARCH:TOTAL

→ Query

Description	Returns the total number of events found from the search function.	
Syntax	:SEARCH:TOTAL?	
Return parameter	<NR1>	Number of events.
Example	:SEARCH:TOTAL? 5	

:SEARCH:TRIGger:TYPe

Set → / → Query

Description	Sets or queries the search trigger type.	
Syntax	:SEARCH:TRIGger:TYPe { EDGe | PULSEWidth | RUNT | RISEFall | FFTPeak | BUS | ? }	
Parameter/Return parameter	EDGe	Edge trigger
	PULSEWidth	Pulse width trigger
	RUNT	Runt trigger
	RISEFall	Rise and Fall trigger

	FFTPeak	FFT Peak trigger
	BUS	Bus trigger
Example	:SEARCH:TRIGger:TYPe EDGE Sets the search trigger to the edge type.	

:SEARCH:TRIGger:SOURce

Set / Query

Description	Sets or queries the search trigger source.	
Syntax	:SEARCH:TRIGger:SOURce {CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/Return parameter	CH1 to CH4	Channel 1 to Channel 4
Example	:SEARCH:TRIGger:SOURce CH1 Sets the search trigger source as CH1.	

:SEARCH:TRIGger:EDGE:SLOP

Set / Query

Description	Sets or queries the search trigger slope.	
Syntax	:SEARCH:TRIGger:EDGe:SLOP { RISe | FALL | EITher | ? }	
Related commands	:SEARCH:TRIGger:TYPe	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the trigger slope.	
Example	:SEARCH:TRIGger:EDGe:SLOP FALL Sets the search trigger slope to falling.	

:SEARCH:TRIGger:LEVel

Set → / → Query

Description	Sets or queries the search trigger level.	
Syntax	:SEARCH:TRIGger:LEVel {TTL | ECL| SETTO50 | <NRf> | ?}	
Related commands	:SEARCH:TRIGger:TYPe	
Parameter	<NRf>	Trigger level value
	TTL	Sets the search trigger level to TTL.
	ECL	Sets the search trigger level to ECL.
	SETTO50	Sets the search trigger level to the User level (50% by default).
Return parameter	<NR3>	Returns the trigger.
Example1	:SEARCH:TRIGger:LEVel TTL Sets the search trigger level to TTL.	
Example2	:SEARCH:TRIGger:LEVel 3.30E-1 Sets the search trigger level to 330mV/mA.	

:SEARCH:TRIGger:HLEVel

Set → / → Query

Description	Sets or queries the high level search trigger.	
Note	Applicable for Rise and Fall/Pulse Runt search triggers.	
Syntax	:SEARCH:TRIGger:HLEVel { <NRf> | ?}	
Related commands	:SEARCH:TRIGger:TYPe	
Parameter	<NRf>	High level value.
Return parameter	<NR3>	Returns the high level search trigger.
Example	:SEARCH:TRIGger:HLEVel 3.30E-1 Sets the high level search trigger to 330mV/mA.	

:SEARCH:TRIGger:LLEVel

Set / Query

Description	Sets or queries the low level search trigger.	
Note	Applicable for Rise and Fall/Pulse Runt triggers.	
Syntax	:SEARCH:TRIGger:LLEVel { <NRf> | ?}	
Related commands	:SEARCH:TRIGger:TYPe	
Parameter	<NRf>	Low level value.
Return parameter	<NR3>	Returns the low level.
Example	:SEARCH:TRIGger:LLEVel -3.30E-3 Sets the low level search trigger to 330mV/mA.	

:SEARCH:TRIGger:PULSEWidth:POLarity

Set / Query

Description	Sets or queries the pulse width search trigger polarity.	
Syntax	:SEARCH:TRIGger:PULSEWidth:POLarity {POSitive | NEGative | ?}	
Related commands	:SEARCH:TRIGger:TYPe	
Parameter	POSitive	Positive polarity
	NEGative	Negative polarity
Return parameter	Returns the pulse width polarity.	
Example	:SEARCH:TRIGger:PULSEWidth:POLarity POSitive Sets the pulse width polarity to positive.	

:SEARCH:TRIGger:RUNT:POLarity

Set / Query

Description	Sets or queries the Pulse Runt search trigger polarity.	
Syntax	:SEARCH:TRIGger:RUNT:POLarity {POSitive | NEGative | EITher | ?}	
Related commands	:SEARCH:TRIGger:TYPe	
Parameter	POSitive	Positive polarity
	NEGative	Negative polarity
	EITher	Positive or negative polarity
Return parameter	Returns the pulse runt search trigger polarity.	
Example	:SEARCH:TRIGger:RUNT:POLarity POSitive Sets the Pulse Runt search trigger polarity to positive.	

:SEARCH:TRIGger:RISEFall:SLOP

Set / Query

Description	Sets or queries the slope of the Rise and Fall search trigger.	
Syntax	:SEARCH:TRIGger:RISEFall:SLOP { RISe | FALL | EITher | ? }	
Related commands	:SEARCH:TRIGger:TYPe	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the rise & fall slope.	
Example	:SEARCH:TRIGger:RISEFall :SLOP RISe Sets the Rise & Fall search trigger slope to rising.	

:SEARCH:TRIGger:PULSe:WHEn

Set → / → Query

Description	Sets or queries the pulse width search trigger conditions.
Syntax	:SEARCH:TRIGger:PULSe:WHEn {MOREthan | LESSthan | EQual | UNEQual | ?}
Related commands	:SEARCH:TRIGger:TYPe :SEARCH:TRIGger:PULSe:TIMe
Parameter	MOREthan >, LESSthan <, EQual =, UNEQual ≠
Return parameter	Returns the pulse width search trigger conditions.
Example	:SEARCH:TRIGger:PULSe:WHEn UNEQual Sets the pulse width search trigger conditions to not equal to (≠).

:SEARCH:TRIGger:PULSe:TIMe

Set → / → Query

Description	Sets or queries the pulse width search trigger time.	
Syntax	:SEARCH:TRIGger:PULSe:TIMe {<NRf> | ?}	
Related commands	:SEARCH:TRIGger:TYPe :SEARCH:TRIGger:PULSe:WHEn	
Parameter	<NRf>	Pulse width time (4ns~10s)
Return parameter	<NR3>	Returns the pulse width time in seconds.
Example	:SEARCH:TRIGger:PULSe:TIMe 4.00E-5 Sets the pulse width search trigger to 40.0us.	

:SEARCH:TRIGger:RUNT:WHEn

Set → / → Query

Description	Sets or queries the pulse runt search trigger conditions.	
Syntax	:SEARCH:TRIGger:RUNT:WHEn {MOREthan | LESSthan | EQual | UNEQual | ? }	
Related commands	:SEARCH:TRIGger:TYPe :SEARCH:TRIGger:RUNT:TIMe	
Parameter	MOREthan	>
	LESSthan	<
	Equal	=
	UNEQual	≠
Return parameter	Returns the pulse runt search trigger conditions.	
Example	:SEARCH:TRIGger:RUNT:WHEn UNEQual Sets the pulse runt search trigger condition to unequal (≠).	

:SEARCH:TRIGger:RUNT:TIMe

Set → / → Query

Description	Sets or queries the pulse runt search trigger time.	
Syntax	:SEARCH:TRIGger:RUNT:TIMe {<NRf> | ? }	
Related commands	:SEARCH:TRIGger:TYPe :SEARCH:TRIGger:RUNT:WHEn	
Parameter	<NRf>	Pulse runt time (4nS to 10S)
Return Parameter	<NR3>	Returns the runt time in seconds.
Example	:SEARCH:TRIGger:RUNT:TIMe 4.00E-5 Sets the pulse runt time to 40.0uS.	

:SEARCH:TRIGger:RISEFall:WHEn

Set → / → Query

Description	Sets or queries the rise and fall search trigger conditions.	
Syntax	:SEARCH:TRIGger:RISEFall:WHEn {MOREthan | LESSthan | EQual | UNEQual |? }	
Related commands	:SEARCH:TRIGger:TYPe :SEARCH:TRIGger:RISEFall:TIMe	
Parameter	MOREthan	>
	LESSthan	<
	Equal	=
	UNEQual	≠
Return parameter	Returns the rise and fall search trigger condition.	
Example	:SEARCH:TRIGger:RISEFall:WHEn UNEQual Sets the rise and fall search trigger condition to unequal (≠).	

:SEARCH:TRIGger:RISEFall:TIMe

Set → / → Query

Description	Sets or queries the rise and fall time.	
Syntax	:SEARCH:TRIGger:RISEFall:TIMe {<NRf> | ? }	
Related commands	:SEARCH:TRIGger:TYPe :SEARCH:TRIGger:RISEFall:WHEn	
Parameter	<NRf>	Rise and Fall time (4nS to 10S)
Return Parameter	<NR3>	Returns the rise and fall time in seconds.
Example	:SEARCH:TRIGger:RISEFall:TIMe 4.00E-5 Sets the trigger rise and fall time to 40.0us.	

:SEARCH:TRIGger:BUS:TYPe → Query

Description	Returns the current bus type.	
Syntax	:SEARCH:TRIGger:BUS:TYPe?	
Return parameter	12C	I2C mode
	SPI	SPI mode
	UART	UART mode
	CAN	CAN mode
	LIN	LIN mode
Example	:SEARCH:TRIGger:BUS:TYPe? UART	

:SEARCH:TRIGger:BUS:B1:I2C:CONDition → Set / → Query

Description	Sets or queries the I²C search trigger conditions.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:CONDition {STARt | STOP | REPEATstart | ACKMISS | ADDRess | DATA | ADDRANDDATA | ? }	
Parameter	STARt	Set Start as the I²C search trigger condition.
	STOP	Set Stop as the I²C search trigger condition.
	REPEATstart	Set Repeat of Start as the I²C search trigger condition.
	ACKMISS	Set Missing Acknowledgement as the I²C search trigger condition.
	ADDRess	Set Address as the I²C search trigger condition.
	DATA	Set Data as the I²C search trigger condition.

	ADDRANDDATA	Set Address and Data as the I²C search trigger condition.
Return parameter	Returns the I²C bus search trigger condition.	
Example	:SEARCH:TRIGger:BUS:B1:I2C:CONDition ADDRess Set Address as the I²C search trigger condition.	

:SEARCH:TRIGger:BUS:B1:I2C:ADDRess :MODe

Set → Query

Description	Sets or queries the I²C addressing mode (7 or 10 bits) for the search trigger.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODe {ADDR7 | ADDR10 | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition	
Parameter	ADDR7	7 bit addressing
	ADDR10	10 bit addressing
Return Parameter	0	7 bit addressing
	1	10 bit addressing
Example	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODe? 0 The addressing mode is current set to 7 bits.	

:SEARCH:TRIGger:BUS:B1:I2C:ADDRess :TYPe

Set → Query

Description	Sets the I²C bus address type, or queries what the setting is for the search trigger.
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:TYPe {GENeralcall | STARtbyte | HSmode | EEPROM | CBUS | ?}
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition

Parameter	GENeralcall	Set a general call address (0000 000 0).
	STARtbyte	Set a start byte address. (0000 000 1)
	HSmode	Set a high-speed mode address. (0000 1xx x)
	EEPROM	Set an EEPROM address. (1010 xxx x)
	CBUS	Set a CBUS address. (0000 001 x)
Return Parameter	Returns the address type	
Example	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:TYPe? CBUS	

:SEARCH:TRIGger:BUS:B1:I2C:ADDRess :VALue

Set → / → Query

Description	Sets or queries the I²C bus address value when the I²C search trigger is set to trigger on Address or Address/Data.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue {<string> | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODe	
Parameter	<sting>	7/10 characters, must be enclosed in double quotes "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the address value in binary.	
Example 1	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODe ADDR7 :SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue "xxx0101" Sets the address to XXX0101	

Example 2	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue? XXX0101

:SEARCH:TRIGger:BUS:B1:I2C:ADDRess :DIRection

Set → Query

Description	Sets or queries the address bit as read write or don't care for the search function.	
Note	This setting only applies when the I²C search trigger is set to trigger on Address or Address/Data	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:DIRection { READ | WRITE | NOCARE | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition	
Parameter	READ	Set read as the data direction.
	WRITE	Set write as the data direction.
	NOCARE	Set either as the data direction.
Return Parameter	Returns the direction (READ, WRITE, NOCARE).	
Example	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:DIRection READ Sets the direction to READ.	

:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIZe

Set → Query

Description	Sets or queries the data size in bytes for the I²C bus.	
Note	This setting only applies when the I²C search trigger is set to trigger on Data or Address/Data	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIZe {<NR1> | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition	
Parameter	<NR1>	Number of data bytes (1 to 5).

Return parameter	<NR1>	Returns the number of bytes.
Example	:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIZe 3 Sets the number of bytes to 3.	

:SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue

Set → Query

Description	Sets or queries the triggering data value for the I²C bus when the I²C search trigger is set to trigger on Data or Address/Data.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue {<string> | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIZe	
Parameter	<string>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example 1	:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIZe 1 :SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue "1x1x0101" Sets the value to XXX0101	
Example 2	:SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue? 1X1X0101	

:SEARCH:TRIGger:BUS:B1:UART :CONDition

Set → Query

Description	Sets or queries the UART search triggering condition.

Syntax	:SEARCH:TRIGger:BUS:B1:UART:CONDition { RXSTArt | RXDATA | RXENDPacket | TXSTArt | TXDATA | TXENDPacket | TXPARItyerr | RXPARItyerr | ? }	
Parameter	RXSTArt	Set search trigger on the RX Start Bit.
	RXDATA	Set search trigger on RX Data.
	RXENDPacket	Set search trigger on the RX End of Packet condition.
	RXPARItyerr	Set search trigger on RX Parity error condition.
	TXSTArt	Set search trigger on the TX Start Bit.
	TXDATA	Set search trigger on TX Data.
	TXENDPacket	Set search trigger on the TX End of Packet condition.
	TXPARItyerr	Set search trigger on TX Parity error condition.
Return Parameter	Returns the search triggering condition.	
Example	:SEARCH:TRIGger:BUS:B1:UART:CONDition TXDATA Sets the UART bus to trigger on Tx Data for the search function.	

:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZe

Set → / → Query

Description	Sets or queries the number of bytes for UART data.
Note	This setting only applies when the UART search trigger is set to trigger on Rx Data
Syntax	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZe {<NR1> | ?}
Related commands	:SEARCH:TRIGger:BUS:B1:UART:CONDition

Parameter	<NR1>	Number of bytes (1 to 10).
Return parameter	<NR1>	Returns the number of bytes.
Example	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZe 5 Sets the number of bytes to 5.	

:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue

Set → / → Query

Description	Sets or queries the search triggering data value for the UART bus when the bus is set to trigger on Rx Data.	
Syntax	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue {<string> | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:SEARCH:TRIGger:BUS:B1:UART:CONDition RXDATA :SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZe 1 :SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue "1x1x0101" Sets the value to 1x1x0101	
Example 2	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue? 1X1X0101	

:SEARCH:TRIGger:BUS:B1:UART:TX:DATa :SIZe

Set → Query

Description	Sets or queries the number of bytes for UART data.	
Note	This setting only applies when the UART search trigger is set to trigger on Tx Data	
Syntax	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZe {<NR1> | ?}	
Related commands	:SEARCH:TRIGger:BUS:B1:UART:CONDition	
Parameter	<NR1>	Number of bytes (1 to 10).
Return parameter	<NR1>	Returns the number of bytes.
Example	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZe 5 Sets the number of bytes to 5.	

:SEARCH:TRIGger:BUS:B1:UART:TX:DATa: VALue

Set → Query

Description	Sets or queries the search triggering data value for the UART bus when the bus is set to trigger on Tx Data.	
Syntax	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue {<string> | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0

Return Parameter	Returns the data value.
Example 1	:SEARCH:TRIGger:BUS:B1:UART:CONDition TXDATA :SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZe 1 :SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue "1x1x0101" Sets the value to 1x1x0101
Example 2	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue? 1X1X0101

:SEARCH:TRIGger:BUS:B1:SPI:CONDition

Set → / → Query

Description	Sets or queries the SPI search triggering condition.	
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:CONDition {SS | MISO | MOSI | MISOMOSI | ? }	
Parameter	SS	Set to trigger on the Slave Selection condition.
	MISO	Set to trigger on the Master-In Slave-Out condition.
	MOSI	Set to trigger on the Master-Out Slave-In condition.
	MISOMOSI	Set to trigger on the Master-In Slave-Out and Master-Out Slave-In conditions.
Return Parameter	Returns the triggering condition.	
Example	:SEARCH:TRIGger:BUS:B1:SPI:CONDition MISO Sets the SPI bus to trigger on MISO.	

:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe

Set → / → Query

Description	Sets or queries the number of words for SPI data for the search function.

Note	This setting only applies when the SPI search trigger is set to trigger on MISO, MOSI or MISO/MOSI	
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe {<NR1> | ?}	
Related commands	:SEARCH:TRIGger:BUS:B1:SPI:CONDition	
Parameter	<NR1>	Number of words (1 to 32).
Return parameter	<NR1>	Returns the number of words.
Example	:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe 10 Sets the number of words to 10.	

:SEARCH:TRIGger:BUS:B1:SPI:DATa:MISO:VALue

Set → / → Query

Description	Sets or queries the search triggering data value for the SPI bus when the bus is set to trigger on MISO or MISO/MOSI.	
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:DATa:MISO:VALue {<string> | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	

Example 1	:SEARCH:TRIGger:BUS:B1:SPI:CONDition MISO :SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe 2 :SEARCH:TRIGger:BUS:B1:SPI:DATa:MISO:VALue "1x1x0101" Sets the value to 1x1x0101
Example 2	:SEARCH:TRIGger:BUS:B1:SPI:DATa:MISO:VALue? 1X1X0101

:SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue

Set → → Query

Description	Sets or queries the search triggering data value for the SPI bus when the bus is set to trigger on MOSI or MISO/MOSI.	
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue {<string> | ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe	
Parameter	<sting>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:SEARCH:TRIGger:BUS:B1:SPI:CONDition MOSI :SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZe 2 :SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue "1x1x0101" Sets the value to 1x1x0101	

Example2	:SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue? 1X1X0101

:SEARCH:TRIGger:BUS:B1:CAN:CONDition

Set → / → Query

Description	Sets or returns the CAN search trigger condition.	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:CONDition {SOF|FRAMEtype|IDentifier|DATA|IDANDDATA|EOF|ACKMISS|STUFFERR|?}	
Parameter/ Return parameter	SOF	Sets search to trigger on a start of frame
	FRAMEtype	Sets search to trigger on the type of frame
	Identifier	Sets search to trigger on a matching identifier
	DATA	Sets search to trigger on matching data
	IDANDDATA	Sets search to trigger on matching identifier and data field
	EOF	Sets search to trigger on the end of frame
	ACKMISS	Sets search to trigger on a missing acknowledge
	STUFFERR	Sets search to trigger on a bit stuffing error
Example1	:SEARCH:TRIGger:BUS:B1:CAN:CONDition SOF Triggers search on a start of frame.	
Example2	:SEARCH:TRIGger:BUS:B1:CAN:CONDition? >SOF	

:SEARCH:TRIGger:BUS:B1:CAN:FRAMEtype

Set → / → Query

Description	Sets or returns the frame type for the CAN FRAMEType search trigger.	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:FRAMEtype {DATA|REMote|ERRor|OVERLoad|?}	
Parameter/ Return parameter	DATA	Sets the frame type to data frame
	REMote	Sets the frame type to remote frame
	ERRor	Sets the frame type to error frame
	OVERLoad	Sets the frame type to overload
Example	:SEARCH:TRIGger:BUS:B1:CAN:FRAMEtype DATA Sets the frame type to DATA.	

:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe

Set → / → Query

Description	Sets or returns the CAN identifier mode for the bus.	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe {STANDard|EXTended|?}	
Parameter/ Return parameter	STANDard	Standard addressing mode
	EXTended	Extended addressing mode
Example	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe? >STANDARD :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe EXTENDED :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe? >EXTENDED	

:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue

Set → / → Query

Description	Sets or returns the identifier string used for the CAN search trigger. Note: Only applicable when the search trigger condition is set to ID or IDANDDATA.	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue {<string>|?}	
Related Commands	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe	
Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:CAN:CONDition ID :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODe STANDARD :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue "01100X1X01X" :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue? >01100X1X01X	

:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection

Set → / → Query

Description	Sets or queries the address bit as read, write or don't care.
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection {READ|WRITE|NOCARE|?}

Parameter/ Return parameter	READ	Sets read as the data direction
	WRITE	Sets write as the data direction
	NOCARE	Sets either as the data direction
Example2	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection? >WRITE :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection READ :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection? >READ	

:SEARCH:TRIGger:BUS:B1:CAN:DATa:QUALifier

Set → / → Query

Description	Sets or returns the CAN data qualifier. Note: Only applicable when the search triggering condition is set to DATA or IDANDDATA.	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:DATa:QUALifier {LESSthan|MOREthan|EQual|UNEQual|LESSEQual|MOREEQual|?}	
Parameter/ Return parameter	LESSthan	Sets search to trigger when the data is less than the qualifier value.
	MOREthan	Sets search to trigger when the data is greater than the qualifier value.
	EQual	Sets search to trigger when the data is equal to the qualifier value.
	UNEQual	Sets search to trigger when the data is not equal to the qualifier value.
	LESSEQual	Sets search to trigger when the data is less than or equal to the qualifier value.
	MOREEQual	Sets search to trigger when the data is more than or equal to the qualifier value.

Example	:SEARCH:TRIGger:BUS:B1:CAN:DATa:QUALifier? >EQUAL :SEARCH:TRIGger:BUS:B1:CAN:DATa:QUALifier MOREthan :SEARCH:TRIGger:BUS:B1:CAN:DATa:QUALifier? >MORETHAN

:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe

Set → Query

Description	Sets or returns the length of the data string in bytes for the CAN search trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA.	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe {<NR1>|?}	
Parameter/ Return parameter	<NR1>	1~8 (bytes)
Example	:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe? >1 :SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe 2 :SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe? >2	

:SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue

Set → Query

Description	Sets or returns the binary data string to be used for the CAN search trigger.	
Related Commands	:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue {<string>|?}	
Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, “string”.

		String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIZe 1 :SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue "01010X1X" :SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue? >01010X1X	

:SEARCH:TRIGger:BUS:B1:LIN:CONDition

Set → Query

Description	Sets or returns the LIN search trigger condition.	
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:CONDition {SYNCField|IDentifier|DATA|IDANDDATA|WAKEup|SLEEP|ERRor|?}	
Parameter/ Return parameter	SYNCField	Sets the LIN search trigger condition to the sync field.
	IDentifier	Sets the LIN search trigger condition to identifier field.
	DATA	Sets the LIN search trigger condition to the data field.
	IDANDDATA	Sets the LIN search trigger condition to identifier and data field
	WAKEup	Sets the LIN search trigger condition to wake up.
	SLEEP	Sets the LIN search trigger condition to sleep.
	ERRor	Sets the LIN search trigger condition to error.

Example	:SEARCH:TRIGger:BUS:B1:LIN:CONDition? >IDANDDATA :SEARCH:TRIGger:BUS:B1:LIN:CONDition DATA :SEARCH:TRIGger:BUS:B1:LIN:CONDition? >DATA

:SEARCH:TRIGger:BUS:B1:LIN:DATa:QUALifier

Set → / → Query

Description	Sets or returns the LIN data qualifier. Note: Only applicable when the search trigger condition is set to DATA or IDANDDATA.	
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:DATa:QUALifier {LESSthan|MOREthan|EQual|UNEQual|LESSEQual|MOREEQual|?}	
Parameter/ Return parameter	LESSthan	Sets search to trigger when the data is less than the qualifier value.
	MOREthan	Sets search to trigger when the data is greater than the qualifier value.
	EQual	Sets search to trigger when the data is equal to the qualifier value.
	UNEQual	Sets search to trigger when the data is not equal to the qualifier value.
	LESSEQual	Sets search to trigger when the data is less than or equal to the qualifier value.
	MOREEQual	Sets search to trigger when the data is more than or equal to the qualifier value.

Example	:SEARCH:TRIGger:BUS:B1:LIN:DATa:QUALifier? >EQUAL :SEARCH:TRIGger:BUS:B1:LIN:DATa:QUALifier MOREthan :SEARCH:TRIGger:BUS:B1:LIN:DATa:QUALifier? >MORETHAN

:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe

Set → Query

Description	Sets or returns the length of the data string in bytes for the LIN search trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA.
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe {<NR1>|?}
Parameter/ Return parameter	<NR1> 1~8 (bytes)
Example	:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe? >1 :SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe 2 :SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe? >2

:SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue

Set → Query

Description	Sets or returns the binary data string to be used for the LIN search trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA.
Related Commands	:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue {<string>|?}

Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZe 1 :SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue "01010X1X" :SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue? >01010X1X	

:SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE

Set → / → Query

Description	Sets or returns the error type to be used for the LIN search trigger.	
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE {SYNC|PARIty|CHecksum|?}	
Parameter/ Return parameter	SYNC	Sets the LIN error type to SYNC.
	PARIty	Sets the LIN error type to parity.
	CHecksum	Sets the LIN error type to checksum.
Example	:SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE? >SYNC :SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE CHECKSUM :SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE? >CHECKSUM	

:SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue

Set → / → Query

Description	Sets or returns the identifier string to be used for the LIN search trigger. Note: Only applicable when the condition is set to ID or IDANDDATA.	
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue {<string>|?}	
Parameter/ Return parameter	<string>	The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:LIN:CONDition ID :SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue "00X1X01X" :SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue? >01100X1X01X	

:SEARCH:FFTPeak:METHod

Set → / → Query

Description	Sets or returns the FFT peak method type.
Related Commands	:SEARCH:TRIGger:TYPe :SEARCH:FFTPeak:METHod:MPEak :SEARCH:TRIGger:LEVel
Syntax	:SEARCH:FFTPeak:METHod {MPEak | LEVel | ?}

Parameter/ Return parameter	MPEak	Sets the peak method to the Max Peak type.
	LEVel	Sets the peak methods to the Level type.

Example
:SEARCH:FFTPeak:METHod LEVel
:SEARCH:FFTPeak:METHod?
>LEVEL
:SEARCH:TRIGger:LEVel?
>1.000E+00
:SEARCH:TRIGger:LEVel 2
:SEARCH:TRIGger:LEVel?
>2.000E+00

:SEARCH:FFTPeak:METHod:MPEak

Set → → Query

Description	Sets the active peak number (1 ~ 10) or return the frequency of the active peak number.
Related Commands	:SEARCH:TRIGger:TYPe :SEARCH:FFTPeak:METHod
Syntax	:SEARCH:FFTPeak:METHod:MPEak {<NR1> | ?}
Parameter	<NR1> Active peak number.
Return parameter	<NR3> Frequency of the active peak.

Example
:SEARCH:FFTPeak:METHod MPEak
:SEARCH:FFTPeak:METHod?
>MPEAK
:SEARCH:FFTPeak:METHod:MPEak?
>1.000E+00
:SEARCH:FFTPeak:METHod:MPEak 2
:SEARCH:FFTPeak:METHod:MPEak?
>2.000E+00

:SEARCH:FFTPeak:SINFo

Set → / → Query

Description	Sets or returns the State Info to "Mark" or "Peak".	
Related Commands	:SEARCH:TRIGger:TYPe	
Syntax	:SEARCH:FFTPeak:SINFo {MARK | PEAK | ?}	
Parameter/ Return parameter	MARK	Sets the State Info to Mark.
	PEAK	Sets the State Info to Peak.
Example	:SEARCH:FFTPeak:SINFo? >PEAK :SEARCH:FFTPeak:SINFo mark :SEARCH:FFTPeak:SINFo? >MARK	

Label Commands

:CHANnel<X>:LABel 215
:CHANnel<X>:LABel:DISPlay 216
:REF<X>:LABel 216
:REF<X>:LABel:DISPlay 217
:BUS1:LABel 218
:BUS1:LABel:DISPlay 218
:SET<X>:LABel 219

:CHANnel<X>:LABel

Set → / → Query

Description	Sets or returns the file label for the selected channel.	
Syntax	:CHANnel<X>:LABel {<string> | ?}	
Related commands	:CHANnel<X>:LABel:DISPlay	
Parameter	<X>	Channel 1, 2, 3, 4
	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, “string”.
Return parameter	<string>	Returns the label for the selected channel. No return indicates that there has not been a file label assigned for the selected channel.
Example1	:CHANnel1:LABel "CH1_lab" Sets the channel 1 label as "CH1_lab".	
Example2	:CHANnel1:LABel? CH1_lab	

:CHANnel<X>:LABel:DISPlay

Set → / → Query

Description	Turns the label on/off for the selected channel or returns its status.	
Syntax	:CHANnel<X>:LABel:DISPlay { OFF | ON | ? }	
Related commands	:CHANnel<X>:LABel	
Parameter	<X>	Channel 1, 2, 3, 4
	OFF	Turns the file label off for the selected channel.
	ON	Turns the file label on for the selected channel.
Return parameter	Returns the status of the file label for the selected channel (ON, OFF).	
Example	:CHANnel1:LABel "CH1" :CHANnel1:LABel:DISPlay ON :CHANnel1:LABel:DISPlay? ON Sets the channel 1 label to "CH1" and then turns the label display on. The query return shows that the label is on.	

:REF<X>:LABel

Set → / → Query

Description	Sets or returns the file label for the selected reference waveform.	
Syntax	:REF<X>:LABel {<string> | ?}	
Related commands	:REF<X>:LABel:DISPlay	
Parameter	<X>	REF 1, 2, 3, 4

	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, “string”.
Return parameter	<string>	Returns the label for the selected reference waveform. No return indicates that there has not been a file label assigned for the selected reference waveform.
Example1	:REF1:LABel "REF1_lab" Sets the REF1 label as "REF1_lab".	
Example2	:REF1:LABel? REF1_lab	

:REF<X>:LABel:DISPlay

Set → → Query

Description	Turns the label on/off for the selected reference waveform or returns its status.	
Syntax	:REF<X>:LABel:DISPlay { OFF | ON | ? }	
Related commands	:REF<X>:LABel	
Parameter	<X>	Reference waveform 1, 2, 3, 4
	OFF	Turns the file label off for the selected reference waveform.
	ON	Turns the file label on for the selected reference waveform.
Return parameter	Returns the status of the file label for the selected reference waveform (ON, OFF).	

Example	:REF1:LABel "REF1" :REF1:LABel:DISPlay ON :REF1:LABel:DISPlay? ON Sets the label for reference waveform 1 to "REF1" and then turns the label display on. The query return shows that the label is on.

:BUS1:LABel

Set → Query

Description	Sets or returns the file label for the bus.	
Syntax	:BUS1:LABel {<string> | ?}	
Related commands	:BUS1:LABel:DISPlay	
Parameter	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, “string”.
Return parameter	<string>	Returns the label for the bus. No return indicates that there has not been a file label assigned for bus.
Example1	:BUS1:LABel "Bus" Sets the bus label as "Bus".	
Example2	:BUS1:LABel? Bus	

:BUS1:LABel:DISPlay

Set → Query

Description	Turns the label on/off for the bus or returns its status.
Syntax	:BUS1:LABel:DISPlay { OFF | ON | ? }

Related commands	:BUS1:LABel	
Parameter	OFF	Turns the file label off for the bus.
	ON	Turns the file label on for the bus.
Return parameter	Returns the status of the file label for the bus (ON, OFF).	
Example	:BUS1:LABel "Bus" :BUS1:LABel:DISPlay ON :BUS1:LABel:DISPlay? ON Sets the label for the bus to "Bus" and then turns the label display on. The query return shows that the label is on.	

:SET<X>:LABel

Set → / → Query

Description	Sets or returns the file label for the selected setup.	
Syntax	:SET<X>:LABel {<string> | ?}	
Related commands	:SET<X>:LABel:DISPlay	
Parameter	<X>	Setup number 1 to 20
	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, "string".
Return parameter	<string>	Returns the label for the selected setup. No return indicates that there has not been a file label assigned for the selected setup.
Example1	:SET1:LABel "SET1_lab" Sets the label for setup 1 as "SET1_lab".	

Example2 :SET1:LABel?

SET1_lab

Segment Commands

:SEGMents:STATE 221
:SEGMents:CURRent 222
:SEGMents:TOTalnum 222
:SEGMents:TIMe 223
:SEGMents:DISPALL 223
:SEGMents:MEASure:MODe 223
:SEGMents:MEASure:PLOT:SOURce 224
:SEGMents:MEASure:PLOT:DIVide 224
:SEGMents:MEASure:PLOT:SELect 225
:SEGMents:MEASure:PLOT:RESults.....225
:SEGMents:MEASure:TABle:SOURce 226
:SEGMents:MEASure:TABle:SELect.....226
:SEGMents:MEASure:TABle:LIST.....227
:SEGMents:MEASure:TABle:SAVe 227
:SEGMents:SAVe 228
:SEGMents:SAVe:SOURce 228
:SEGMents:SAVe:SELect:STARt 228
:SEGMents:SAVe:SELect:END 229

:SEGMents:STATE

Set → / → Query

Description	Turns the segmented memory function on/off or queries its state.	
Syntax	:SEGMents:STATE { OFF | ON | ? }	
Related commands	:RUN :STOP	
Parameter/ Return parameter	OFF	Turns the segmented memory off.
	ON	Turns the segmented memory on.
Example1	:SEGMents:STATE ON Turns segmented memory on.	

:SEGMents:CURRent

Set → / → Query

Description	Sets or queries the current segment. The total number of segments depends on the record length.
Syntax	:SEGMents:CURRent {SETTOMIN|SETTOMAX|<NR1>|?}
Related commands	:SEGMents:STATE :SEGMents:TOTalnum
Parameter/ Return parameter	SETTOMIN Current segment = min segment SETTOMAX Current segment = max segment <NR1> 1~29000
Example1	:SEGMents:CURRent 10 Sets the current segment to segment number 10.

:SEGMents:TOTalnum

Set → / → Query

Description	Sets or queries the total number of segments for the segmented memory function. The total number of segments depends on the record length.
Syntax	:SEGMents:TOTalnum {SETTOMIN|SETTOMAX|<NR1>|?}
Related commands	:SEGMents:STATE :SEGMents:CURRent
Parameter/ Return parameter	SETTOMIN Sets to the minimum number SETTOMAX Sets to the maximum number <NR1> 1~29000
Example1	:SEGMents:TOTalnum SETTOMAX Sets the number of segments to max number (29000).

:SEGMents:TIMe → Query

Description	Returns the time of the current segment in relation to the first segment.
Syntax	:SEGMents:TIMe?
Related commands	:SEGMents:STATE :SEGMents:CURRent
Return parameter	The segment time as <NR3>.
Example	:SEGMents:TIMe? >8.040E-03 Returns the segment time.

:SEGMents:DISPALL → Set / → Query

Description	Sets or queries whether all the segments are displayed on the screen.	
Syntax	:SEGMents:DISPALL {OFF|ON|?}	
Related commands	:SEGMents:STATE :SEGMents:CURRent	
Parameter/ Return parameter	OFF	Turns the display all function off.
	ON	Turns the display all function on.
Example1	:SEGMents:DISPALL ON Turns the display all function on.	

:SEGMents:MEASure:MODe → Set / → Query

Description	Sets or queries the measurement mode.
Syntax	:SEGMents:MEASure:MODe {OFF|PLOT|TABle|?}
Related commands	:MEASUrement:MEAS<x>

Parameter/ Return parameter	OFF	Disables the automatic measurement function for the segments measurement.
	PLOT	Sets the measurement mode to Statistics.
	TABLE	Sets the measurement mode to a measurement list.
Example	:SEGMents:MEASure:MODe? >PLOT Returns the measurement mode as Statistics.	

:SEGMents:MEASure:PLOT:SOURce

Set → Query

Description	Sets or queries the statistics source.
Syntax	:SEGMents:MEASure:PLOT:SOURce {<NR1> | ? }
Related commands	:SEGMents:MEASure:MODe :SEGMents:MEASure:PLOT:DIVide :SEGMents:MEASure:PLOT:SELect :SEGMents:MEASure:PLOT:RESults

Parameter/ Return parameter	<NR1>	1~8 (Automatic measurement item 1~8)
Example1	:SEGMents:MEASure:PLOT:SOURce 1 Sets the source as auto measurement item 1.	

:SEGMents:MEASure:PLOT:DIVide

Set → Query

Description	Sets or queries the number of bins for the statistics function.
Syntax	:SEGMents:MEASure:PLOT:DIVide {<NR1> | ? }
Related commands	:SEGMents:MEASure:PLOT:SOURce :SEGMents:MEASure:PLOT:SELect

Parameter/ Return parameter	<NR1>	1~20
Example1	:SEGMents:MEASure:PLOT:DIVide 5 Sets the number of bins to 5 for the statistics function.	

:SEGMents:MEASure:PLOT:SELect

Set / Query

Description	Sets or queries which bin to view the statics of.	
Syntax	:SEGMents:MEASure:PLOT:SELect {<NR1> | ? }	
Related commands	:SEGMents:MEASure:PLOT:SOURce :SEGMents:MEASure:PLOT:DIVide	
Parameter	<NR1>	1~20 (cannot exceed the number of bins)
Return parameter	Return the bin number as <NR3>.	
Example1	:SEGMents:MEASure:PLOT:SELect 5 Set to bin number 5.	

:SEGMents:MEASure:PLOT:RESults

Query

Description	Returns the results of the currently selected bin for the statistics measurement.
Note	At least one automatic measurement must be turned on.
Syntax	:SEGMents:MEASure:PLOT:RESults?
Related commands	:SEGMents:STATE :SEGMents:MEASure:MODe PLOT :SEGMents:MEASure:PLOT:SOURce :SEGMents:MEASure:PLOT:DIVide :SEGMents:MEASure:PLOT:SELect
Return parameter	Returns the statistics measurements as a string.

Example	:SEGMents:STATE ON STOP :SEGMents:MEASure:MODe PLOT :SEGMents:MEASure:PLOT:SOURce 1 :SEGMents:MEASure:PLOT:DIVide 10 :SEGMents:MEASure:PLOT:SELect 1 :SEGMents:MEASure:PLOT:RESults? > MAX,1.000kHz;MIN,1.000kHz;MEAN,1.000kHz; Bin Statistics,1 of 10;Percent,10.00%;Count,1; Measured,10;Unmeasured,0;Bin Range, 1.000kHz~1.000kHz; Plots the results for automatic measurement #1, bin 1 of 10.

:SEGMents:MEASure:TABle:SOURce

Set → / → Query

Description	Sets or queries the source of the measurement list.
Syntax	:SEGMents:MEASure:TABle:SOURce {CH1 | CH2 | CH3| CH4 | ? }
Related commands	:SEGMents:MEASure:MODe :SEGMents:MEASure:TABle:SELect :SEGMents:MEASure:TABle:LIST
Parameter/ Return parameter	CH1~CH4 Channel 1 to 4
Example1	:SEGMents:MEASure:TABle:SOURce CH1 Sets the source to CH1.

:SEGMents:MEASure:TABle:SELect

Set → / → Query

Description	Sets or queries a segment to view in the measurement table.
Syntax	:SEGMents:MEASure:TABle:SELect {<NR1> | ? }

Related commands	:SEGMents:TOTalnum
Parameter	<NR1> 1~29000
Return parameter	Returns the number of segments as <NR3>.
Example1	:SEGMents:MEASure:TABle:SELect 10 Select segment number 10.

:SEGMents:MEASure:TABle:LIST → Query

Description	Returns the measurement results of each segment in the block data.
Syntax	:SEGMents:MEASure:TABle:LIST?
Return parameter	Returns the measurements results as a block data for each segment.
Example	:SEGMents:MEASure:TABle:LIST? >"GW GDS-2074E, serial number PXXXXXX, version V1.37", Segment Summary : CH1, Seg., Pk-Pk (V), Pk-Pk (V), 1, 8.00m, 8.00m, 2, 8.00m, 8.00m, 3, 8.00m, 8.00m, 4, 8.00m, 8.00m, 5, 8.00m, 8.00m, 6, 8.00m, 8.00m, 7, 8.00m, 8.00m, 8, 8.00m, 8.00m, 9, 12.0m, 12.0m, 10, 8.00m, 8.00m,

:SEGMents:MEASure:TABle:SAVe Set →

Description	Saves the list of segment automatic measurement results.
Syntax	:SEGMents:MEASure:TABle:SAVe

:SEGMents:SAVe

Set →

Description	Saves the segments.
Syntax	:SEGMents:SAVe
Related Commands	:SEGMents:SAVe:SOURce :SEGMents:SAVe:SELect:STARt :SEGMents:SAVe:SELect:END
Example	:SEGMents:SAVe:SOURce CH1 :SEGMents:SAVe:SELect:STARt 1 :SEGMents:SAVe:SELect:END 10 :SEGMents:SAVe

:SEGMents:SAVe:SOURce

Set → / → Query

Description	Sets or queries the source segment waveform to save.	
Syntax	:SEGMents:SAVe:SOURce {CH1 | CH2 | CH3 | CH4 | ? }	
Parameter/ Return parameter	CH1~CH4	Channel 1 to 4.
Example	:SEGMents:SAVe:SOURce CH1 >Sets the source to CH1.	

:SEGMents:SAVe:SELect:STARt

Set → / → Query

Description	Sets or queries the starting segment to save from. The number of possible segments depends on the record length.
Syntax	:SEGMents:SAVe:SELect:STARt {SETTOMIN | SETTOMAX | <NR1> | ? }
Related commands	:SEGMents:TOTalnum

Parameter/ Return parameter	SETTOMIN	Sets the starting segment to min segment.
	SETTOMAX	Sets the starting segment to the max segment.
	<NR1>	Sets the segment to 1~29000
Example	:SEGMents:SAVe:SELect:STARt 2 Sets the starting segment to segment number 2.	

:SEGMents:SAVe:SELect:END

Set → / → Query

Description	Sets or queries the ending segment to save from. The number of possible segments depends on the record length.	
Syntax	:SEGMents:SAVe:SELect:END {SETTOMIN | SETTOMAX | <NR1> | ? }	
Related commands	:SEGMents:TOTalnum	
Parameter/ Return parameter	SETTOMIN	Sets the starting segment to min segment.
	SETTOMAX	Sets the starting segment to the max segment.
	<NR1>	Sets the segment to 1~29000.
Return parameter	<NR3>	Returns the ending segment as NR3.
Example	:SEGMents:SAVe:SELect:END 10 Sets the ending segment to segment number 10.	

DVM Commands

The DVM commands are only available when the optional DVM software is installed.

:DVM:STATE 230
:DVM:SOURce 230
:DVM:MODe 231
:DVM:VALue 231

:DVM:STATE

Set → Query

Description	Sets or queries the DVM state to on or off.	
Syntax	:DVM:STATE {OFF | ON | ? }	
Related commands	:DVM:SOURce :DVM:MODe	
Parameter/ Return parameter	OFF	Turns the DVM off.
	ON	Turns the DVM on.
Example	:DVM:STATE ON Turns the DVM state on.	

:DVM:SOURce

Set → Query

Description	Sets or queries the source of the DVM.	
Syntax	:DVM:SOURce {CH1|CH2|CH3|CH4|?}	
Related commands	:DVM:STATE :DVM:MODe	
Parameter/ Return parameter	CH1~CH4	Channel 1 to 4.
Example	:DVM:SOURce CH1 Sets the DVM source to channel 1.	

:DVM:MODe

Set → / → Query

Description	Sets or queries the DVM mode.	
Syntax	:DVM:MODe {ACRMS|DC|DCRMS|DUTY|FREQuency|?}	
Related commands	:DVM:SOURce :DVM:STATE	
Parameter/ Return parameter	ACRMS	Sets the mode to AC RMS
	DC	Sets the mode to DC
	DCRMS	Sets the mode to DC RMS
	DUTY	Sets the mode to AC Duty
	FREQuency	Sets the mode to AC frequency
Example	:DVM:MODe DUTY Sets the DVM mode to DUTY.	

:DVM:VALue

→ Query

Description	Returns the measurement value of the selected mode.
Syntax	:DVM:VALue?
Related commands	:DVM:SOURce :DVM:STATE :DVD:MODe
Return parameter	Returns the measurement value as <NR3>.
Example	:DVM:VALue? >8.410E-04 Returns the measurement.

Go_NoGo Commands

The GoNoGo APP must first be launched (or use the command, ":GONogo:SCRipt") before any of the Go_NoGo or Template commands can be used.

:GONogo:CLEar 232
:GONogo:EXECute 232
:GONogo:FUNCtion 233
:GONogo:NGCount 233
:GONogo:NGDefine 233
:GONogo:SOURce 234
:GONogo:VIOLation 234
:GONogo:SCRipt 234
:TEMPlate:MODe 235
:TEMPlate:MAXimum 235
:TEMPlate:MINimum 235
:TEMPlate:POSition:MAXimum 236
:TEMPlate:POSition:MINimum 236
:TEMPlate:SAVe:MAXimum 236
:TEMPlate:SAVe:MINimum 237
:TEMPlate:TOLerance 237
:TEMPlate:SAVe:AUTo 237

:GONogo:CLEar

Set →

Description	Clears the Go/NoGo counter.
Syntax	:GONogo:CLEar

:GONogo:EXECute

Set →
→ Query

Description	Enables or disables the Go/NoGo function or queries its state.
Syntax	:GONogo:EXECute {OFF|ON|?}

Parameter/ Return Parameter	OFF	Disabled
	ON	Enabled
Example	:GONogo:EXECute OFF Turns Go/NoGo off.	

:GONogo:FUNCtion

Set →

Description	Initializes the Go/NoGo APP. This must be run after the Go/NoGo APP has been started.
Syntax	:GONogo:FUNCtion

:GONogo:NGCount

→ Query

Description	Returns the Go/NoGo counter.
Syntax	:GONogo:NGCount{?}
Return parameter	Returns a string in the following format "number of violations,total tests"
Example	:GONogo:NGCount? > 3,25 Indicates that 3 violations occurred over 25 tests.

:GONogo:NGDefine

Set →
→ Query

Description	Sets the Go/NoGo "When" conditions.	
Syntax	:GONogo:NGDefine {EXITs|ENTers|?}	
Parameter/ Return Parameter	EXITs	Sets the NoGo condition to when the input signal exceeds the limit boundary.
	ENTers	Sets the NoGo condition to when the input signal stays within the limit boundary.
Example	:GONogo:NGDefine EXITs Sets the Go/NoGo condition to EXITs.	

:GONogo:SOURce

Set → / → Query

Description	Sets the source for the Go/NoGo signal.
Syntax	:GONogo:SOURce {CH1|CH2|CH3|CH4|?}
Parameter/ Return Parameter	CH1~CH4
Example	:GONogo:SOURce CH1 Sets the source to CH1.

:GONogo:VIOLation

Set → / → Query

Description	Sets or returns actions for the Go/NoGo violations.	
Syntax	:GONogo:VIOLation {STOP | CONTinue | ?}	
Parameter/ Return Parameter	STOP	The waveform will be frozen.
	CONTinue	Ignore the violation.
Example	:GONogo:VIOLation STOP Sets violation action to STOP.	

:GONogo:SCRipt

Set →

Description	Activates/Deactivates the Go/NoGo APP or queries its state.	
Syntax	:GONogo:SCRipt {OFF | ON | ?}	
Parameter/ Return Parameter	ON	Turns Go/NoGo APP on.
	OFF	Turns the Go/NoGo APP off.
Example	:GONogo:SCRipt? >ON The Go/NoGo script is on.	

:TEMPlate:MODe

Set / Query

Description	Sets or returns the Go/NoGo template mode.	
Syntax	:TEMPlate:MODe {MAXimum|MINimum|AUTO|?}	
Parameter/ Return Parameter	MAXimum	Maximum template
	MINimum	Minimum template
	AUTO	Auto template
Example	:TEMPlate:MODe AUTO Sets the template mode to AUTO.	

:TEMPlate:MAXimum

Set / Query

Description	Defines or queries which waveform memory (REF1 or W1~W20) is set to the maximum template.	
Syntax	:TEMPlate:MAXimum {REF1|W1~W20|?}	
Parameter/ Return Parameter	REF1	Reference one
	W1~W20	Waveform memory 1 to 20
Example	:TEMPlate:MAXimum REF1 Saves the maximum template to REF1.	

:TEMPlate:MINimum

Set / Query

Description	Defines or queries which waveform memory (REF1 or W1~W20) is set to the minimum template.	
Syntax	:TEMPlate:MINimum {REF2|W1~W20|?}	
Parameter/ Return Parameter	REF2	Reference one
	W1~W20	Waveform memory 1 to 20
Example	:TEMPlate:MINimum REF2 Saves the minimum template to REF2.	

:TEMPlate:POSition:MAXimum

Set → / → Query

Description	Sets or queries the position of the maximum template.
Syntax	:TEMPlate:POSition:MAXimum {<NR2>|?}
Parameter	<NR2> Desired template position (-12.0 ~ +12.0 divisions)
Return parameter	Returns the position in the following format: "<NR2>Div"
Example	:TEMPlate:POSition:MAXimum 3.00 Sets the maximum template position to 3.00 divisions.

:TEMPlate:POSition:MINimum

Set → / → Query

Description	Sets or queries the position of the minimum template.
Syntax	:TEMPlate:POSition:MINimum {<NR2>|?}
Parameter	<NR2> Desired template position (-12.0 ~ +12.0 divisions)
Return parameter	Returns the position in the following format: "<NR2>Div"
Example	:TEMPlate:POSition:MINimum 3.00 Sets the minimum template position to 3.00 divisions.

:TEMPlate:SAVe:MAXimum

Set →

Description	Saves the maximum template.
Syntax	:TEMPlate:SAVe:MAXimum

:TEMPlate:SAVe:MINimum

Set →

Description	Saves the maximum template.
Syntax	:TEMPlate:SAVe:MINimum

:TEMPlate:TOLerance

Set →
→ Query

Description	Sets or queries the tolerance as a percentage.	
Syntax	:TEMPlate:TOLerance {<NR2>|?}	
Parameter/ Return Parameter	<NR2>	The auto tolerance range (0.4% ~ 40%)
Example	:TEMPlate:TOLerance 10 Sets the tolerance to 10%.	

:TEMPlate:SAVe:AUTo

Set →

Description	Saves the AUTO template (maximum and minimum templates).
Syntax	:TEMPlate:SAVe:AUTo

Data Logging Commands

:DATALOG:STATE 238
:DATALOG:SOURce 238
:DATALOG:SAVe 239
:DATALOG:INTerval 239
:DATALOG:DURation 240

:DATALOG:STATE

Set → / → Query

Description	Sets or queries the state of the data logging app.	
Syntax	:DATALOG:STATE {OFF|ON|?}	
Related commands	:DATALOG:SOURce :DATALOG:SAVe :DATALOG:INTerval :DATALOG:DURation	
Parameter/ Return parameter	OFF	Turns the data logging off.
	ON	Turns the data logging on.
Example	:DATALOG:STATE ON Turns the data logging app on.	

:DATALOG:SOURce

Set → / → Query

Description	Sets or queries the data logging source channel.	
Syntax	:DATALOG:SOURce {CH1~CH4|all|?}	
Related commands	:DATALOG:STATE :DATALOG:SAVe :DATALOG:INTerval :DATALOG:DURation	
Parameter/Return	CH1 ~CH4	Channel 1, 2, 3 or 4

parameter	all	All displayed channels.
Example	:DATALOG:SOURce CH1 Sets the source to CH1.	

:DATALOG:SAVe

Set / Query

Description	Sets or queries the save format as image or waveform.	
Syntax	:DATALOG:SAVe {IMAGe|WAVEform|?}	
Related commands	:DATALOG:STATE :DATALOG:SOURce :DATALOG:INTerval :DATALOG:DURation	
Parameter/Return parameter	IMAGe	Save as images.
	WAVEform	Save as waveforms.
Example	:DATALOG:SAVe WAVEform Sets the save format to waveform.	

:DATALOG:INTerval

Set / Query

Description	Sets or queries the recording interval time in seconds. The interval times that can be set are dependent on the settings of the DATALOG:SOURCE and DATALOG:SAVE commands.
Syntax	:DATALOG:INTerval {<NR1>|?}
Related commands	:DATALOG:STATE :DATALOG:SOURce :DATALOG:SAVe :DATALOG:DURation

Parameter/Return parameter	<NR1>	Sets returns the interval time in discrete seconds: Interval time for DATALOG:SOURCE = All or DATALOG:SAVE=IMAGE: 5, 10, 15, 20, 25, 30, 35, 60, 120 Interval time for DATALOG:SOURCE = CH1~CH4: 2, 3, 4, 5, 10, 20, 30, 60, 120
Example	:DATALOG:INTerval 5 Sets the recording interval to 5 seconds.	

:DATALOG:DURation

Set → Query

Description	Sets or queries the recording duration time in minutes.	
Syntax	:DATALOG:DURation {<NR1>|?}	
Related commands	:DATALOG:STATE :DATALOG:SOURce :DATALOG:SAVe :DATALOG:INTerval	
Parameter/Return parameter	<NR1>	Sets returns the duration time in discrete minutes: 5, 10, 15, 20, 25, 30, 60, 90, 120, 150, 180, 210, 240, 270, 300, 330, 360, 390, 420, 450, 480, 510, 540, 570, 600, 1200, 1800, 2400, 3000, 3600, 4200, 4800, 5400, 6000
Example	:DATALOG:DURation 10 Sets the recording duration to 10 minutes.	

Remote Disk Commands

:REMOTEDisk:IPADDress 241
:REMOTEDisk:PATHName 241
:REMOTEDisk:USERName 241
:REMOTEDisk:PASSWord 242
:REMOTEDisk:MOUNT.....242
:REMOTEDisk:AUTOMount.....243

:REMOTEDisk:IPADDress

Set → / → Query

Description	Sets or returns the IP address of remote disk.	
Syntax	:REMOTEDisk:IPADDress {<string>|?}	
Parameter/ Return parameter	<string>	IP address enclosed in double quotes. Eg., 172.16.20.255
Example	:REMOTEDisk:IPADDress “172.16.20.255” Sets the remote disk IP address as 172.16.20.255.	

:REMOTEDisk:PATHName

Set → / → Query

Description	Sets or returns the file path of the remote disk.	
Syntax	:REMOTEDisk:PATHName {<string>|?}	
Parameter/ Return parameter	<string>	File path in enclosed in double quotes eg., “remote_disk”
Example	:REMOTEDisk:PATHName “remote_disk” Sets the file path to c:/remote_disk.	

:REMOTEDisk:USERName

Set → / → Query

Description	Sets or queries the account username for the remote disk.
Syntax	:REMOTEDisk:USERName {<string> | ? }

Parameter/Return parameter	<string>	User name enclosed in double quotes eg., “User_Name”.
Example	:REMOTEDisk:USERName “User_Name”	
	Sets the account name as User_Name.	

:REMOTEDisk:PASSWord

Set → / → Query

Description	Sets or queries the account password for the remote disk.	
Syntax	:REMOTEDisk:PASSWord {<string> | ? }	
Parameter/Return parameter	<string>	Username password enclosed in double quotes eg., “Password”.
Example	:REMOTEDisk:PASSWord “Password”	
	Sets the account password as Password.	

:REMOTEDisk:MOUNT

Set → / → Query

Description	Turns remote disk on/off or queries its state.	
Syntax	:REMOTEDisk:MOUNT { OFF | ON | ? }	
Parameter/Return parameter	OFF	Unmount remote disk
	ON	Mount remote disk
Example	:REMOTEDisk:IPADDress "172.16.5.154"	
	:REMOTEDisk:PATHName "remote_disk"	
	:REMOTEDisk:USERName "guest"	
	:REMOTEDisk:PASSWord "password"	
	:REMOTEDisk:MOUNT ON	
	Sets the remote disk parameters and mounts the remote disk.	

:REMOTEDisk:AUTOMount

Set → / → Query

Description	Turns automount on/off or queries its state. The remote disk must be configured beforehand.	
Syntax	:REMOTEDisk:AUTOMount { OFF | ON | ? }	
Parameter/Return parameter	OFF	Don't mount the remote disk at start up.
	ON	Automatically mount the remote disk on start up.
Example	:REMOTEDisk:AUTOMount ON Turns the automount function on.	

APPENDX

Error messages

Description	The following error messages may be returned from the :SYSTem:ERRor? query. For details see page 157.
List of error messages	Error number, "Error Description" +0, "No error." -100, "Command error" -101, "Invalid character" -102, "Syntax error" -103, "Invalid separator" -104, "Data type error" -105, "GET not allowed" -108, "Parameter not allowed" -109, "Missing parameter" -110, "Command header error" -111, "Header separator error" -112, "Program mnemonic too long" -113, "Undefined header" -114, "Header suffix out of range" -115, "Unexpected number of parameters" -120, "Numeric data error" -121, "Invalid character in number" -123, "Exponent too large" -124, "Too many digits" -128, "Numeric data not allowed" -130, "Suffix error" -131, "Invalid suffix" -134, "Suffix too long" -138, "Suffix not allowed"

-140, "Character data error"
-141, "Invalid character data"
-144, "Character data too long"
-148, "Character data not allowed"
-150, "String data error"
-151, "Invalid string data"
-158, "String data not allowed"
-160, "Block data error"
-161, "Invalid block data"
-168, "Block data not allowed"
-170, "Expression error"
-171, "Invalid expression"
-178, "Expression data not allowed"
-180, "Macro error"
-181, "Invalid outside macro definition"
-183, "Invalid inside macro definition"
-184, "Macro parameter error"

-200, "Execution error"
-201, "Invalid while in local"
-202, "Settings lost due to rtl"
-203, "Command protected"
-210, "Trigger error"
-211, "Trigger ignored"
-212, "Arm ignored"
-213, "Init ignored"
-214, "Trigger deadlock"
-215, "Arm deadlock"
-220, "Parameter error"
-221, "Settings conflict"
-222, "Data out of range"
-223, "Too much data"
-224, "Illegal parameter value"
-225, "Out of memory"
-226, "Lists not same length"
-230, "Data corrupt or stale"
-231, "Data questionable"
-232, "Invalid format"
-233, "Invalid version"
-240, "Hardware error"

-241, "Hardware missing"
-250, "Mass storage error"
-251, "Missing mass storage"
-252, "Missing media"
-253, "Corrupt media"
-254, "Media full"
-255, "Directory full"
-256, "File name not found"
-257, "File name error"
-258, "Media protected"
-260, "Expression error"
-261, "Math error in expression"
-270, "Macro error"
-271, "Macro syntax error"
-272, "Macro execution error"
-273, "Illegal macro label"
-274, "Macro parameter error"
-275, "Macro definition too long"
-276, "Macro recursion error"
-277, "Macro redefinition not allowed"
-278, "Macro header not found"
-280, "Program error"
-281, "Cannot create program"
-282, "Illegal program name"
-283, "Illegal variable name"
-284, "Program currently running"
-285, "Program syntax error"
-286, "Program runtime error"
-290, "Memory use error"
-291, "Out of memory"
-292, "Referenced name does not exist"
-293, "Referenced name already exists"
-294, "Incompatible type"

-300, "Device-specific error"
-310, "System error"
-311, "Memory error"
-312, "PUD memory lost"
-313, "Calibration memory lost"
-314, "Save/recall memory lost"

-315, "Configuration memory lost"
-320, "Storage fault"
-321, "Out of memory"
-330, "Self-test failed"
-340, "Calibration failed"
-350, "Queue overflow"
-360, "Communication error"
-361, "Parity error in program message"
-362, "Framing error in program message"
-363, "Input buffer overrun"
-365, "Time out error"

-400, "Query error"
-410, "Query INTERRUPTED"
-420, "Query UNTERMINATED"
-430, "Query DEADLOCKED"
-440, "Query UNTERMINATED after indefinite response"

INDEX

ACQuire
FILTer
TRACking 44
ACQuire
AVERage 38
FILTer
FREQuency 42
FILTer 42
SOURce 41
MEMory 39
MODe 39
ACQuire
STATe 44
ACQuire
INTERpolation 44
ACQuire
RECOrdlength 45
ACQuire
HEADer 45
AUTORSET
MODe 46
AUTOSet 46
BUS1 166
CAN
BITRate 176
PROBe 175
SAMPLEpoint 176
SOURce 175
DISplay
FORMAt 174
I2C
ADDRess
RWINClude 167
SCLK
SOURce 168
SDA
SOURce 168
INPut 167
LABel 218
DISPlay 218
LIN
BITRate 177
IDFORmat 177
POLARity 177
SAMPLEpoint 178
SOURce 178
STANDard 178
SPI
BITORder 173
MISO
SOURce 174
MOSI
SOURce 174
SCLK
POLARity 172
SOURce 173
SS
POLARity 172
SOURce 173
WORDSize 172
STATE 166
TYPe 166
UART
BITRate 168
DATABits 169
EOFPAcket 170
PACKEt 170
PARIty 169
RX
SOURce 171
TX
SOURce 171
CHANnel
BWLimit 47
COUPling 48
DESKew 48
DISPlay 48
EXPand 49
IMPedance 49
INVert 50

LABel 215
DISPlay.....216
POSition.....50
PROBe
TYPE.....51
PROBe
RATio 51
SCALe 51

CLS 34

CURSor
DDT.....65
H1Position.....66
H2Position.....66
HDELta.....67
HUNI 64
HUSE.....64
MODe.....63
SOURce.....63
V1Position 67
VDELta 68
VUNI.....65
VUSE.....65
XY
POLar
RADIUS
DELta.....70
POSition 69
THETA
DELta.....70
POSition 70
PRODuct
DELta 71
POSition.....71
RATio
DELta 72
RATio
POSition.....71
RECTangular
X
DELta.....68
POSition 68
Y
DELta.....69
POSition 69

DATALOG
DURation.....240
INTerval.....239
SAVe 239
SOURce.....238
STATE.....238

DATe.....164

DISplay
INTENSITy
BACKLight
AUTODim
TIMe..... 74

DISPlay
GRATicule 75
INTensity
BACKLight..... 74
BACKLight
AUTODim
ENAble 74
GRATicule..... 73
WAVEform 73
OUTPut 76
PERSistence 75
WAVEform 76

DVM
MODe 231
SOURce 230
STATE 230
VALue 231

Error list 244

Ethernet
interface.....7

ETHERnet
DHCP 163

FORCe 116

GONogo
CLEar.....232
EXECute 232
FUNCtion.....233
NGCount.....233
NGDefine 233
SCRipt.....234
SOURce 234
VIOLation 234

HARDcopy
ASSIGN 79
MODe 77
PRINTINKSaver.....78
SAVEFORMat.....78
SAVEINKSaver 78

START 77
HEADer 45
IDN? 32
Interface 5
LISTer
DATA 175
LRN? 32
MARK 180
CREATE 180
DELEte....181
MATH
ADVanced
OPERator 58
POSition 60
SCALe....60
DISP 53
DUAL
OPERator 54
POSition 55
SCALe....55
SOURce 54
FFT
HORizontal
POSition....58
SCALe 58
MAG....56
POSition 57
SCALe....57
SOURce 56
WINDow....56
TYPE 54
MATHVAR 59
MEASure
AMPlitude....92
AREa....97
CAREa....98
CMEan....93
CRMS....97
FALL....84
FFFDelay 100
FFRDelay....100
FOVShoot....84
FPReshoot 85
FREQuency 85
FRFDelay....99
FRRDelay 99
GATing 81
HIGH.... 93
LFFDelay.... 103
LFRDelay 102
LOW 94
LRFDelay 102
LRRDelay.... 101
MAX 95
MEAN 92
METHod 82
MIN 95
NEDGE 91
NPULSE.... 90
NWIDth 86
PDUTy 86
PEDGE 91
PERiod 87
PHASe 103
PK2PK 96
PPULSE.... 90
PWIDth 87
RISe.... 88
RMS 96
ROVShoot 88
RPReshoot.... 89
SOURce 81
MEASUrement
MEAS
MAXimum 108
MEAN.... 109
MINImum 109
SOURCE 105
STATE.... 106
STDdev 110
TYPe.... 106
VALue.... 107
REFLevel
PERCent
HIGH.... 82
LOW 83
MID 83
MID2.... 83
STATIstics.... 111
MODe 111
WEIghting 111
RCL.... 33
RECAll
SETUp 158
WAVEform.... 158

REF
DISPlay 112
LABel 216
DISPlay 217
OFFSet 113
SCALe 114
TIMebase
POSition 112
SCALe 113
Remote control
interface configuration 5
REMOTEDisk
AUTOMount 243
IPADDress 241
MOUNT 242
PASSWord 242
PATHName 241
USERName 241
RST 34
RUN 115
SAV 33
SAVe
IMAGe 159
FILEFormat 159
INKSaver 160
SETUp 160
WAVEform 161
FILEFormat 162
SEARCH
COPY 183
FFTPeak
METHod 212
MPEak 213
SINFo 214
STATE 184
TOTAL 184
TRIGger
BUS
B1
CAN
CONDition 203
DATa
QUALifier 206
SIZe 207
VALue 207
FRAMEtype 204
IDentifier
DIRection 205
MODe 204
VALue 205
I2C
ADDRess
DIRection 195
MODe 193
TYPe 193
VALue 194
CONDition 192
DATa
SIZe 195
VALue 196
LIN
CONDition 208
DATa
QUALifier 209
SIZe 210
VALue 210
ERRTYPE 211
IDentifier
VALue 212
SPI
CONDition 200
DATa
MISO 201
MOSI 202
SIZe 200
UART
CONDition 196
RX
DATa 197, 198
TX
DATa 199
TYPe 192
EDGE
SLOP 185
HLEVel 186
LEVel 186
LLEVel 187
PULSe
TIMe 189
WHEn 189
PULSEWidth
POLarity 187
RISEFall
SLOP 188
TIMe 191
WHEn 191
RUNT
POLarity 188
TIMe 190
WHEn 190
SOURce 185
TYPe 184
SEGMents

CURRent 222
DISPALL 223
MEASure
MODe 223
PLOT
DIVide 224
RESults 225
SELect 225
SOURce 224
TABle
LIST 227
SAVe 227
SELect 226
SOURce 226
SAVe 228
SELect
END 229
STARt 228
SOURce 228
STATE 221
TIMe 223
TOTalnum 222
SET
LABel 219
SINGle 115
Socket server
function check 10
Socket server
interface 9
STOP 115
SYSTem
ERRor 157
LOCK 157
TEMPlate
MAXimum 235
MINimum 235
MODe 235
POSition
MAXimum 236
MINimum 236
SAVe
AUTo 237
MAXimum 236
MINimum 237
TOLerance 237
TIMebase
EXPand 117
MODe 118
POSition 117
SCALe 117
WINDow
POSition 118
SCALe 119
TRIGger
ALTernate 135
BUS
B1
CAN
CONDition 147
DATa
QUALifier 150
SIZe 151
VALue 151
FRAMEtype 148
IDentifier
DIRection 150
MODe 148
VALue 149
I2C
ADDRess
DIRection 140
MODe 138
TYPe 139
VALue 139
CONDition 137
DATa
SIZe 140
VALue 141
LIN
CONDition 152
DATa
QUALifier 154
SIZe 154
VALue 155
ERRTYPE 155
IDentifier
VALue 156
SPI
CONDition 145
DATa
MISO
VALue 146
MOSI
VALue 147
SIZe 145
UART
CONDition 142
RX
DATa
SIZe 142
VALue 143
TX

DATa
SIZe....143
VALue....144
THReshold
CH....137
TYPe....137
COUPle....123
DELay
EVENt....127
LEVel....128
SLOP....126
TIME....127
TYPE....127
EDGe
SLOP....126
EXTERnal
PRObe
RATio....136
TYPe....136
FREQuency....122
HLEVel....125
HOLDoff....124
LEVel....124
LLEVel....125
MODe....124
NREJ....123
PULSe
TIME....134
WHEn....133
PULSEWidth
POLarity....128
RISEFall
SLOP....130
TIMe....131
WHEn....130
RUNT
POLarity....128
TIMe....129
WHEn....129
SOURce....122
STATe....135
TIMEOut
TIMER....134
WHEn....134
TYPE....122
VIDeo
FIELd....132
LINe....132
POLarity....133
TYPe....131

USB
function check....6
remote control interface....5