

P6139B & P5050B 500 MHz 10X Passive Probes

Instructions



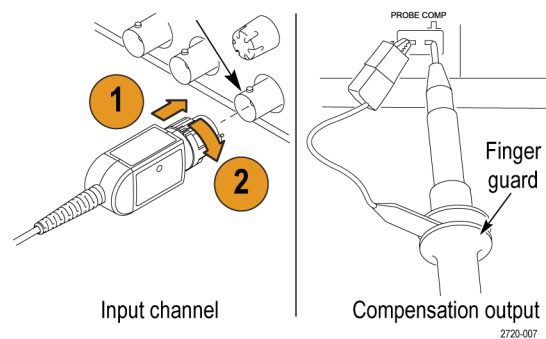
500 MHz 10X Probes

The P6139B & P5050B probes are high impedance, passive probes that are designed for use with Tektronix ground-referenced oscilloscopes, including the DPO/MSO/TDS 3000/4000/5000/7000 series oscilloscopes.

Both probes have a bandwidth of >500 MHz and 10X attenuation. The P6139B probe has a compensation range of 8 to 18 pF, while the P5050B probe has a compensation range of 15 to 22 pF.

Connecting the Probe to the Oscilloscope

Connect the probe to the oscilloscope as shown below.



Compensating the Probe

Due to variations in oscilloscope input characteristics, the low-frequency compensation of the probe may need adjustment after moving the probe from one oscilloscope channel to another.

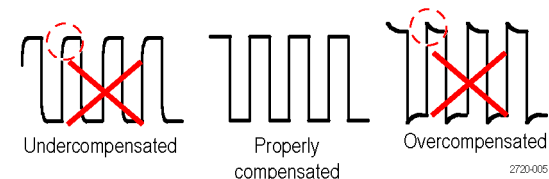
If a 1 kHz calibrated square wave displayed at 1 ms/division shows significant differences between the leading and trailing edges, perform the following steps to optimize low-frequency compensation:

1. Connect the probe to the oscilloscope channel that you plan to use for your measurements.
2. Connect the probe to the probe compensation output terminals on the oscilloscope front panel.

WARNING. To avoid electric shock, only connect to the Probe Comp signal on the oscilloscope when making this adjustment.

To avoid electric shock, only use the insulated adjustment tool when making compensation adjustments.

3. Push AUTOSET or otherwise adjust your oscilloscope to display a stable waveform.
4. Adjust the trimmer in the probe until you see a perfectly flat-top square wave on the display. (See illustration.)









Standard Accessories

The accessories included with the probe are shown below.

WARNING. To avoid electric shock when using the probe or accessories, keep fingers behind the finger guard of probe body and accessories.

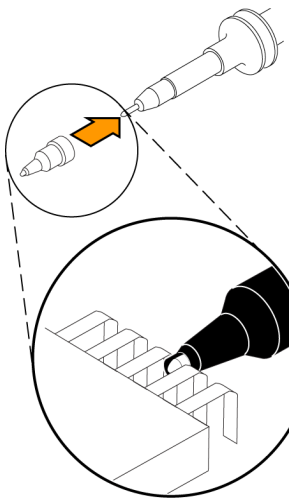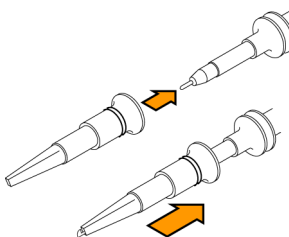To reduce risk of shock, verify that the ground lead and ground spring are fully mated before connecting the probe to the circuit under test.

Item	Description
	<p>Universal IC Cap</p> <p>Use this cap to prevent shorting the probe tip between IC pins.</p> <ol style="list-style-type: none"> 1. Press the cap on the probe tip until it snaps on. 2. Spin the cap to expose the probe tip toward the IC lead. <p>Reorder Tektronix part number 013-0366-xx</p>
	<p>Hook tip</p> <p>Press the hook tip on the probe tip and then clamp the hook on the circuit.</p> <p>Reorder Tektronix part number 013-0362-xx</p>

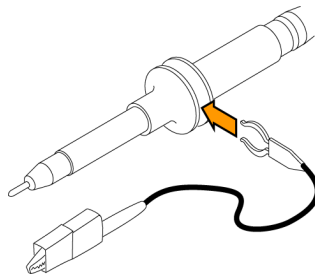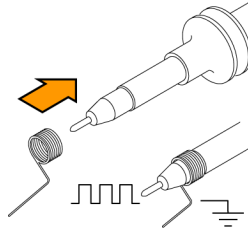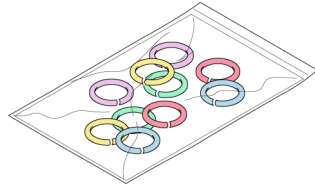Item	Description
	<p>Ground lead, with alligator clip</p> <p>Attach the lead to the probe head ground and then to your circuit ground.</p> <p>Reorder Tektronix part number 196-3521-xx</p>
	<p>Ground spring</p> <p>This spring minimizes aberrations on high frequency signals caused by ground path inductance, giving you measurements with good signal fidelity.</p> <p>Attach the spring to the ground band on the probe tip. Bend the spring in or out, up to ~0.75 in.</p> <p>Do not use on circuits that exceed 30 V_{RMS}</p> <p>Reorder Tektronix part number 016-2028-xx</p>
	<p>Adjustment tool</p> <p>Use only this insulated tool for compensation adjustments.</p> <p>Reorder Tektronix part number 003-1433-xx</p>
	<p>Color bands</p> <p>Use these bands to identify the oscilloscope channel at the probe head.</p> <p>Reorder Tektronix part number 016-0633-xx (5 pairs)</p>


Optional Accessories

The following accessories can be ordered for your probe.

Accessory	Part number
MicroCKT Test Tip	206-0569-xx
Micro Hook Tip	013-0363-xx
BNC to Tip Adapter, Unterminated	013-0367-xx
Circuit Board Test Point/PCB Adapter	016-2016-xx
Probe Tip Circuit Board Test Point	131-4210-xx
6" Clip-on Ground Lead	196-3198-xx
12" Alligator Ground Lead	196-3512-xx
Ground Spring, Short	016-2034-xx

Replacing the Probe Tip

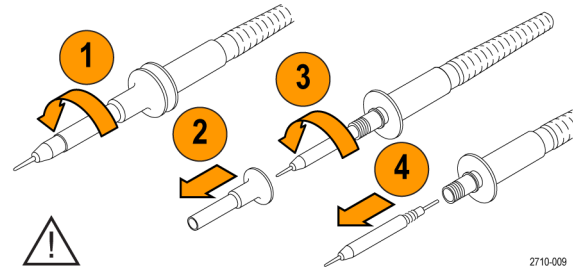Order Tektronix part numbers 206-0635-xx (P6139B) or 206-0636-xx (P5050B).



Securely tighten the insulator and new tip before using the probe.

Specifications

Table 1: Electrical and mechanical specifications

Characteristic	Specification
Bandwidth	DC to 500 MHz (-3 dB)
System attenuation accuracy	10:1 ±0.5% @DC
Compensation range	P6139B: 8 pF–18 pF P5050B: 15 pF–22 pF
System input resistance	10 MΩ ±0.5% @DC
System input capacitance	P6139B: <8 pF P5050B: <11 pF
Propagation delay	~6 ns
Maximum tip input voltage	300 V _{RMS} CAT II and DC
Cable length	1.3 m

Performance Graphs

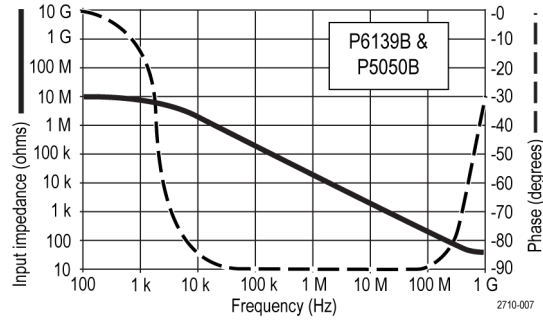
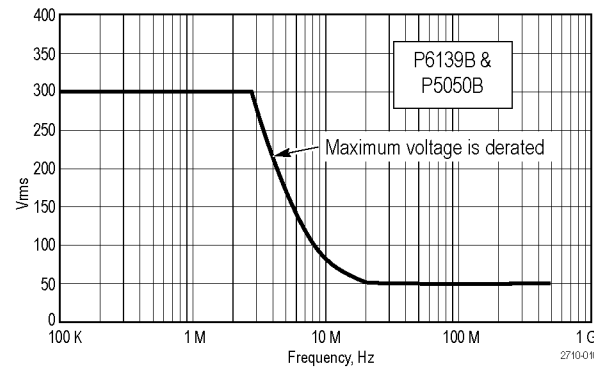


Table 2: Environmental specifications

Characteristic	Description
Temperature	
Operating	-15 °C (+5 °F) to +65 °C (+149 °F)
Nonoperating	-62 °C to +85 °C (-80 °F to +185 °F)
Humidity	
Operating	5% to 95% relative humidity (%RH) up to +30 °C, 5% to 75% RH above +30 °C up to +65 °C. Noncondensing
Nonoperating	5% to 45% RH above +65 °C up to +85 °C. Noncondensing
Altitude	
Operating	3.0 km (10,000 ft) maximum
Nonoperating	15 km (50,000 ft) maximum

Table 3: Certifications and compliances

Characteristic	Description
EC Declaration of Conformity	Compliance was demonstrated to the following specification as listed in the Official Journal of the European Communities: Low Voltage Directive 2006/95/EC: EN61010-031: 2008
Measurement Category Product Examples	CAT III: Distribution-level mains, fixed installation CAT II: Local-level mains, appliances, portable equipment CAT I: Circuits not directly connected to mains.
Pollution Degree 2	Do not operate in environments where conductive pollutants may be present (as defined in IEC 61010-1). Rated for indoor use only.

Characteristic Description

Additional Safety Standards	UL61010-031;2007 CAN/CSA C22.2 No. 61010-031-07 IEC61010-031; IEC 61010-031/A1:2008
-----------------------------	---



Equipment Recycling. This product complies with the European Union's requirements according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE). For more information about recycling options, check the Support/Service section of the Tektronix Web site (www.tektronix.com).

Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified. Using the probe or accessories in a manner not specified could result in a shock or fire hazard.

To Avoid Fire or Personal Injury

Ground-Referenced oscilloscope use. Do not float the reference lead of this probe when using with ground referenced oscilloscopes (for example, DPO, MSO, and TDS series oscilloscopes). The reference lead must be connected to earth potential (0 V).

TPS2000 series oscilloscope use. Do not float the reference lead of this probe above the rated float voltage (30 V RMS CAT II).

Connect and disconnect properly. Connect the probe output to the measurement instrument before connecting the probe to the circuit under test. Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement instrument.

Avoid electric shock. To avoid injury or loss of life, do not connect or disconnect probes or test leads while they are connected to a voltage source.

Observe all terminal ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

Avoid electric shock. When using probe accessories, never exceed the lowest rating of the probe or its accessory, whichever is less, including the measurement category and voltage rating.

Avoid electric overload. To avoid injury or fire hazard, do not apply potential to any input, including the reference inputs, that varies from ground by more than the maximum rating for that input.

Avoid exposed circuitry and do not operate without covers. Do not touch exposed connections and components when power is present.

Inspect the probe and accessories. Before each use, inspect probe and accessories for damage (cuts, tears, defects in the probe body, accessories, cable jacket, etc.). Do not use if damaged.

Do not operate in Wet/Damp conditions.

Do not operate in an explosive atmosphere.

Keep product surfaces clean and dry.

Safety Terms and Symbols Terms in This Manual.

These terms may appear in this manual:

WARNING. Warning statements identify conditions or practices that could result in injury or loss of life.

CAUTION. Caution statements identify conditions or practices that could result in damage to this product or other property.

Symbols on the product. These symbols may appear on the product:



Caution
Refer to Manual



Earth Terminal

Contacting Tektronix

Web site:	www.tektronix.com
Phone:	1-800-833-9200
Address:	Tektronix, Inc. Department or name (if known) 14200 SW Karl Braun Drive P.O. Box 500 Beaverton, OR 97077 USA
Email:	techsupport@tektronix.com

Warranty Information

For warranty information, go to www.tektronix.com/warranty